



Toshiba Satellite L655D-S5095 CD/DVD Drive Replacement

This guide will help you through replacing your CD/DVD drive.

Written By: Torey



INTRODUCTION

This guide will help you replace your CD drive if you've determined that it is no longer working.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — CD/DVD Drive



- Unscrew the three 4.6 mm screws holding the panel using a #1 size Phillips head screwdriver. The panel is centered on the bottom of the laptop.

Step 2



- Remove the panel, firmly lifting from the indent. It is recommended that you leave the screws in the panel.

Step 3



- Unscrew the 3.9 mm screw located at the bottom right of the panel.

Step 4



- Use a plastic opening tool to pry the CD drive out of the casing.

Step 5



- Once the CD drive is out far enough to grip, pull the CD drive out to the right.

To reassemble your device, follow these instructions in reverse order.