


HP Stream 11-d008TU Battery Connector Unplugging

This guide will show you how to unplug the battery in a HP Stream 11-d008TU. This is a recommended step in performing any further repairs or disassembly.

Written By: CONVERSION

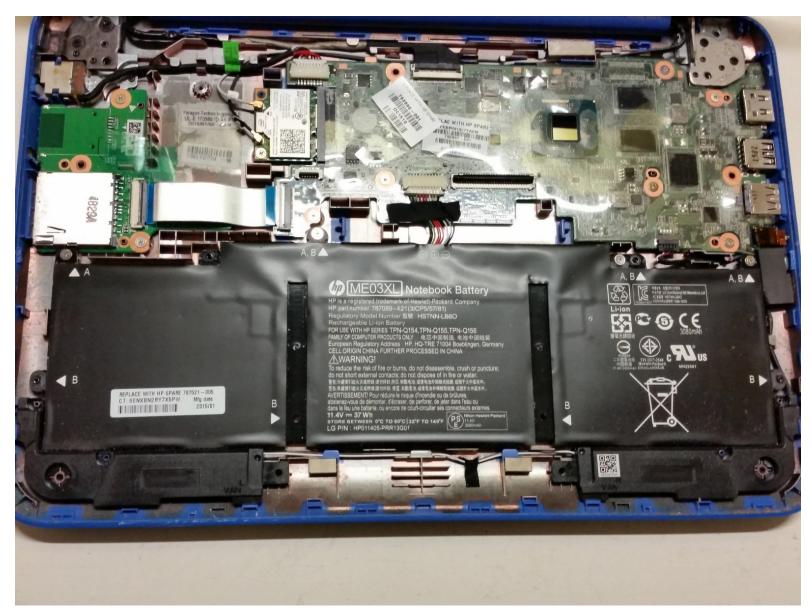


This document was generated on 2021-03-06 08:32:48 PM (MST).

TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

Used to pry the rubber feet off. Can be replaced with a screwdriver or other instruments.

Step 1 — Rubber Feet Removal

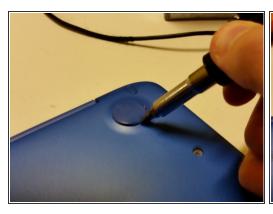





- Use a prying tool to pry the 2 rubber feet off closest to the hinge of the device
- Repeat this process for the other side of the device
- The bottom rubber feet do not have hidden screws underneath them, and as such, they are unnecessary to remove

Step 2 — Screw removal






Remove the 11x 5mm Phillips PH-0 screws (circled)


Step 3 — Keyboard Unclipping



- Use your finger to pry the outer blue shell over the keyboard
- Continue this process around the edges of the device
- You may have to use a prying tool to pry the harder edges such as around the I/O ports
- Do not lift the keyboard once all the clips are undone, as there are still various cables connected

Step 4 — Keyboard removal

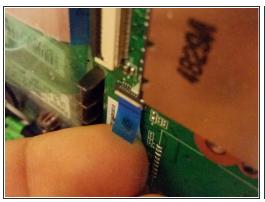

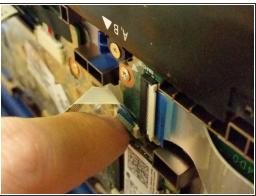




- Disconnect the power button connector by peeling back the protective tape, using your fingernail to flip the white retaining clip back, and pulling the ribbon cable out
- Disconnect the touchpad connector by using your fingernail to flip the black retaining clip back, and pulling the ribbon cable out
- Disconnect the keyboard connector by using your fingernail to flip the black retaining clip back, and pulling the ribbon cable out
- Your keyboard assembly is now safe to remove

Step 5 — **Battery Connector**



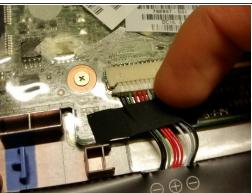



- Locate the white plastic connector on the motherboard
- Peel back the black tape holding the cable's wires in place
- Pull the white connector out by puling the white plastic away from the connector
- Do not grab the connector by the wires

To reassemble your device, follow these instructions in reverse order.