

## **Nest Thermostat E battery replacement**

This guide will help you replacing the battery on Nest/Google Thermostat E

Written By: Forest





Phillips #0 Screwdriver (1)




• 284449 battery (1)


## Step 1 — Battery



- Remove the thermostat from the baseplate
- Unscrew 4 screws on the back
  - Picture by <u>@justlv</u>

## Step 2 — The Twist

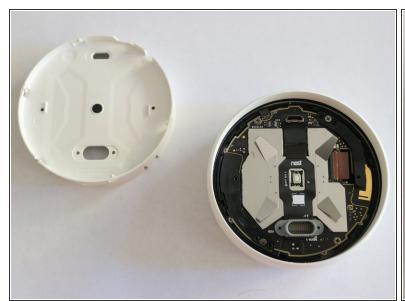


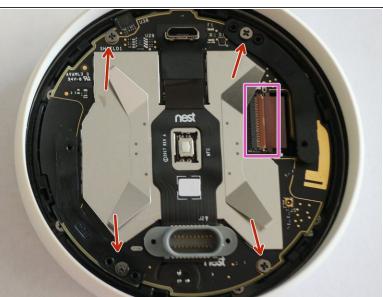


- To remove the cover turn it **counter clockwise** and pull. The cover is held by clips, but it should come off easily after the turn
- Detach the main PCB
  - Remove 4 more screws
  - Disconnect the display cable
  - Pull the main PCB out of the device

## Step 3 — Voila



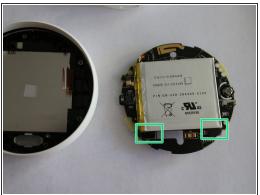

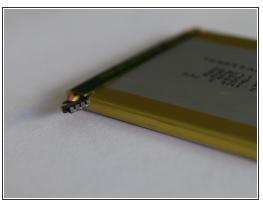

- Battery type is 284449, meaning the battery is 2.8mm thick and 44mm by 49mm long/wide.
  Capacity 2.1Wh
  - Those are tricky to find, but any 2.8mm battery should fit if doesn't exceed the size. For example a slightly shorter TL284443 fits perfectly
- YEEY!! We love pull tabs! Just pull them down to detach the battery
- Here is the battery connector. To disconnect the battery simply pull the connector "up"

The battery connector is very fragile, try to take extra care while disconnecting the old battery

To reassemble your device, follow these instructions in reverse order.