 




# Ohmeda Engström Compressor Replacement

How to replace the air compressor on the Ohmeda Engstrom Ventilator.

Written By: Kobe Hayashi

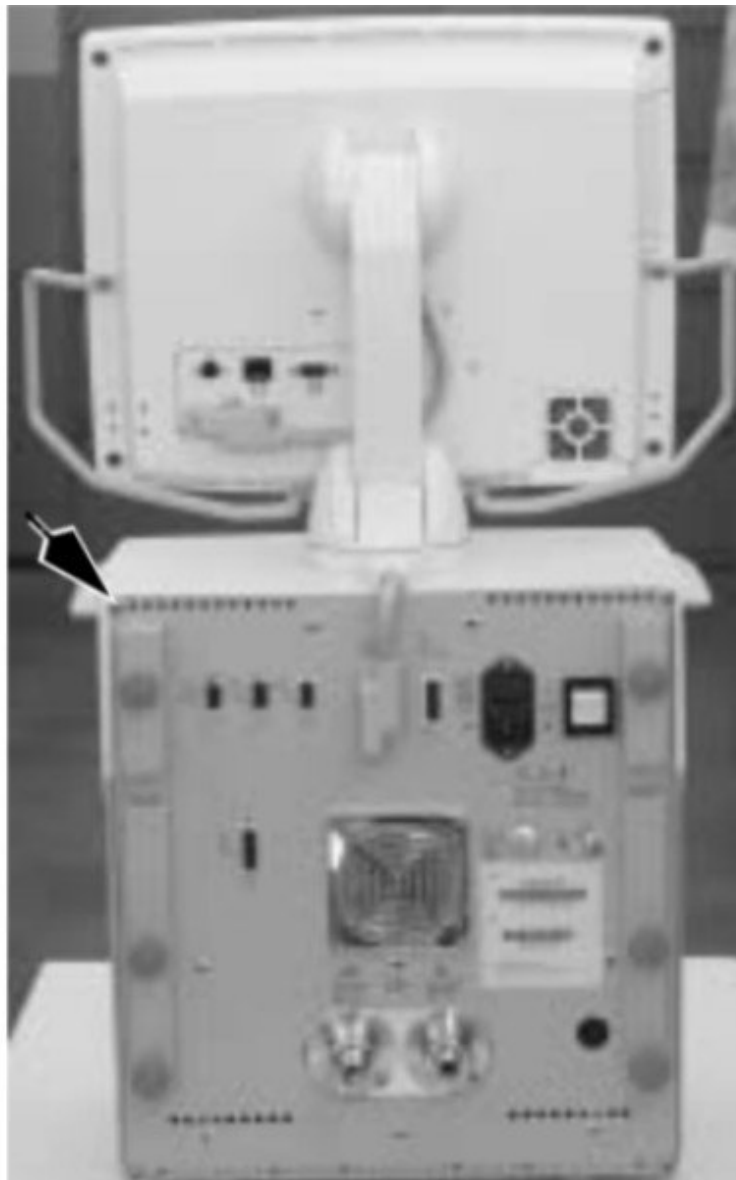

---

## INTRODUCTION

The air compressor is a very crucial component to the ventilator since it is responsible for delivering the filtered air from the machine to the breathing apparatus on the patient. This guide will help users to replace the air compressor from the main cart. Replacement is recommended if the air compressor is showing a lower pressure than normal.

 
For more information on replacing the compressor, please refer to **page 9-31** (section 9.7) in the technical manual.



### TOOLS:

- [Hammer](#) (1)
  - [Flathead Screwdriver](#) (1)
-

## Step 1 — Compressor

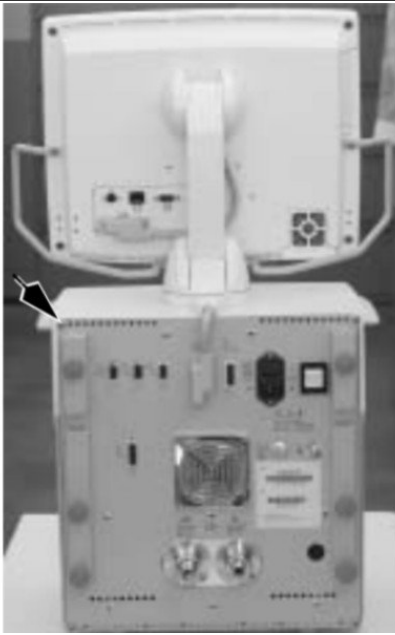

- ❗ Ensure the device is powered off and unplugged
- Disconnect any wires or components that are plugged in prior to repair

## Step 2



 
- Tap the back end of a flat head screwdriver with a hammer to wedge the side trim pieces away from the machine.

### Step 3



- Use the flat head screwdriver to pry off and remove the side panels
- ⚠ When prying off the panels, do so carefully so that you do not scratch or damage them
- ℹ When reassembling the side panels, make sure that the connectors snap back into place.
- Remove the mounting hardware from the compressor on the cart

### Step 4

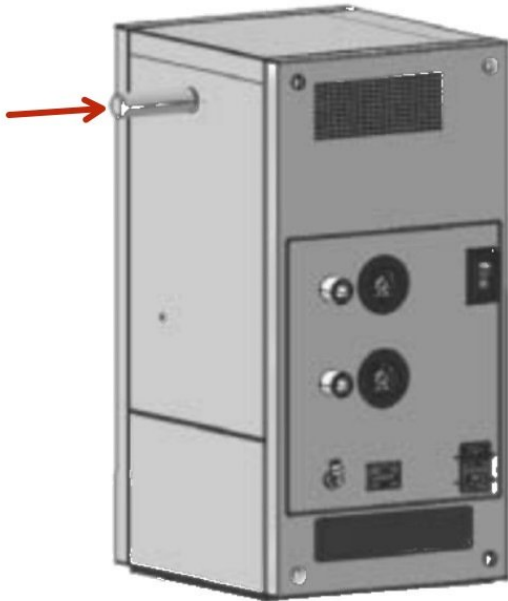

- Screw in the service tool to assist in lifting the compressor and sliding out of the cart

To reassemble your device, follow these instructions in reverse order.