




# Sony Cyber-shot DSC-T9 Battery Replacement

This guide will allow the user to install a new battery into the camera.


Written By: Stephannie Allen

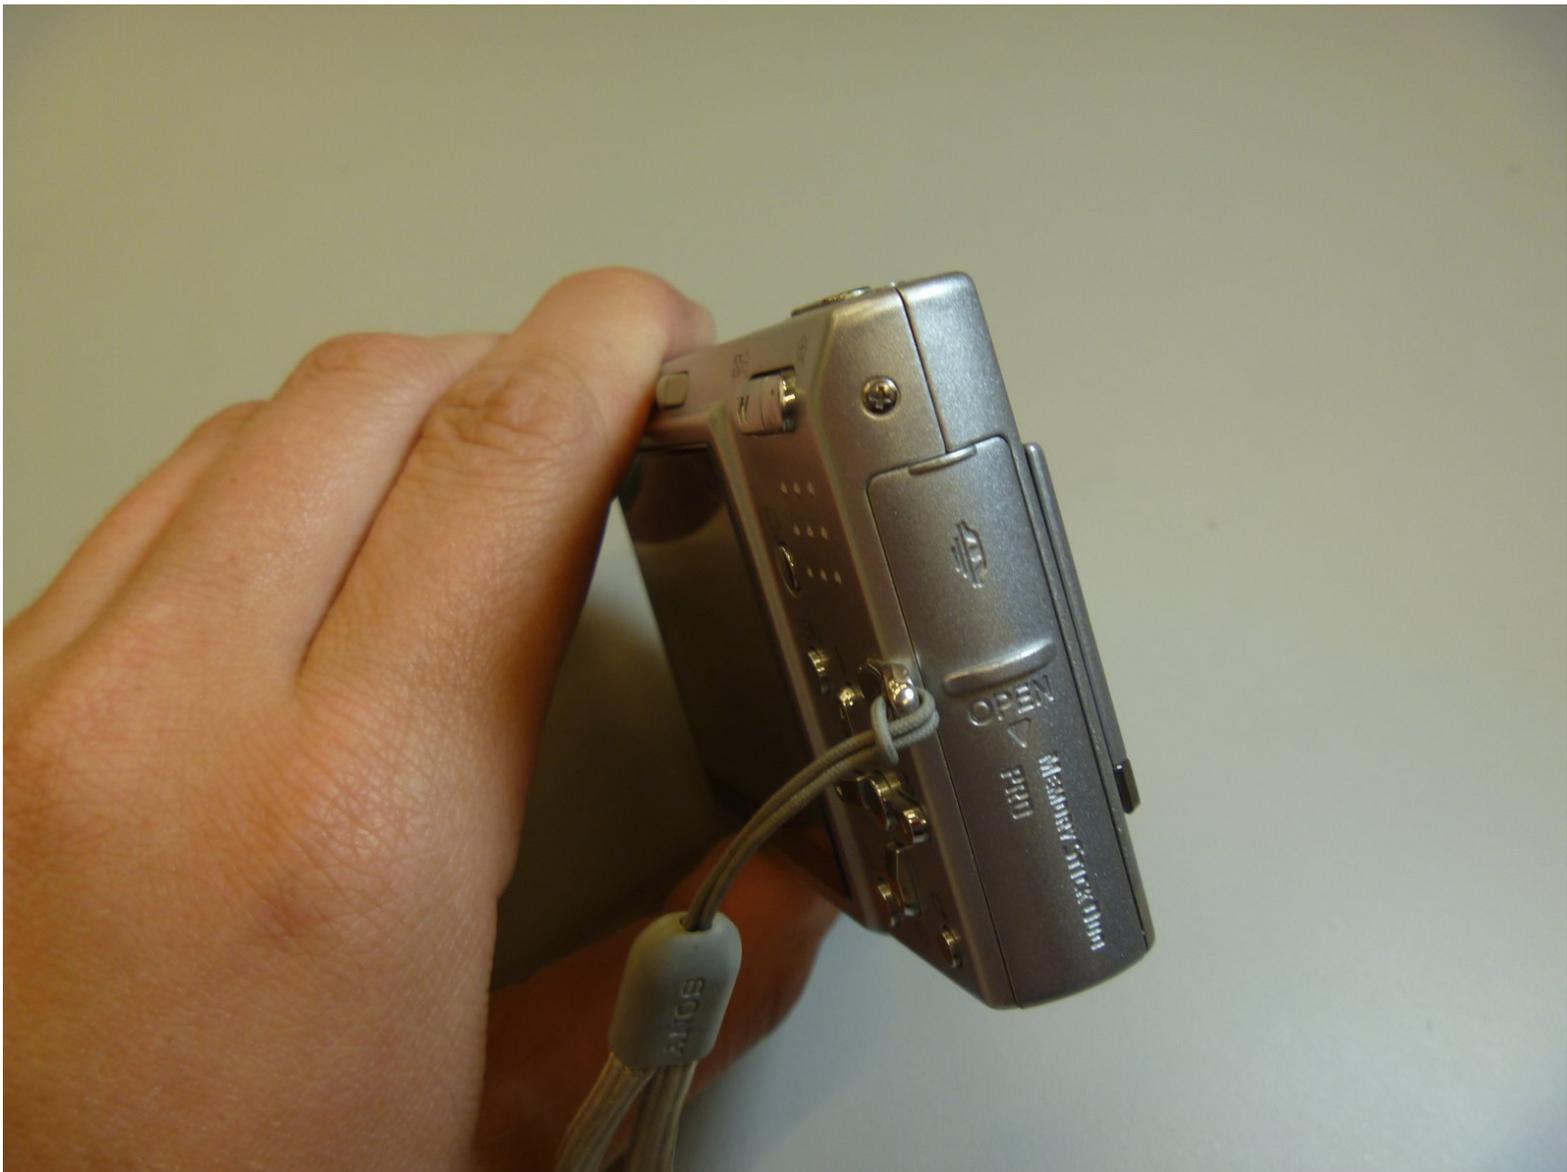

## INTRODUCTION


This guide will teach the user how to replace a battery if it is broken or not working.

## Step 1 — Battery

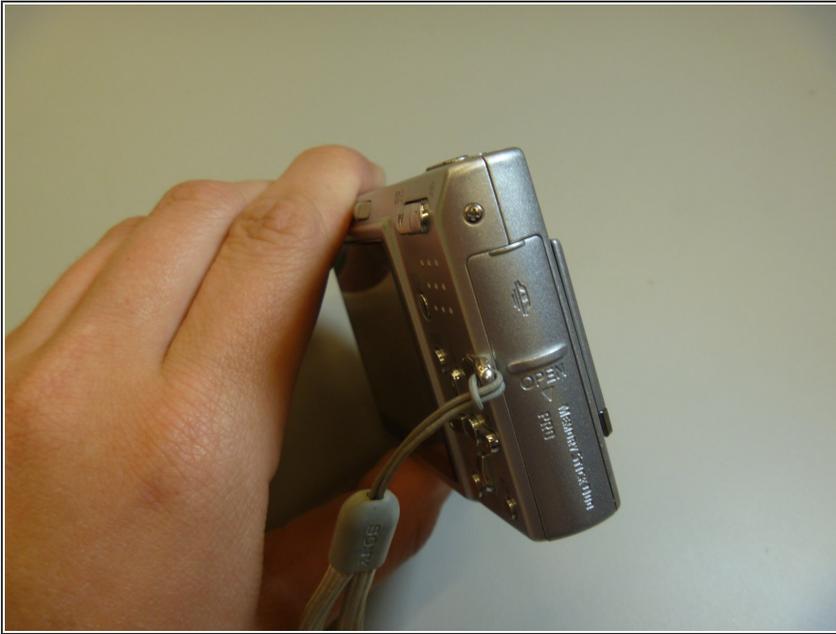

- The battery cover is located on the right side of the camera.
- Slide the cover to expose the battery.

## Step 2

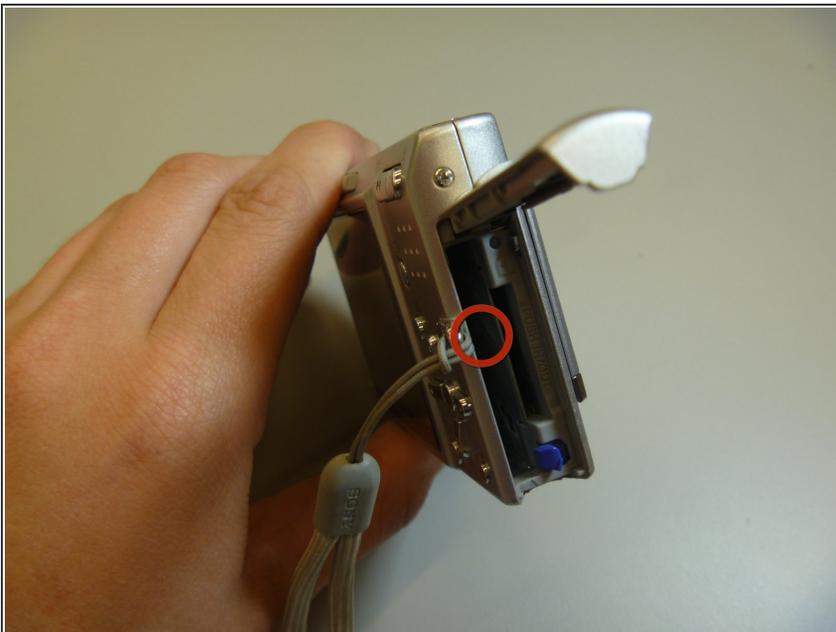

- Ensure that the battery lines up properly with the slot in the camera.
- Slide battery in.
- Slide cover closed.
- ⓘ Battery not shown

To remove the battery, follow these instructions in reverse order.