



Toyota Corolla 2018 Brake Light Replacement

Demonstrating with thorough instructions and images on how to replace new brake lights for a Toyota Corolla year 2018.

Written By: Nishanth Selvarajah



INTRODUCTION

If your brake light has certain issues that stop the light from working such as a burned-out bulb, a bad brake light switch, or blown fuse, this guide will provide you thorough instructions on how to replace new brake lights for a Toyota Corolla year 2018.



TOOLS:

- [Screwdriver](#) (1)



PARTS:

- [Lightbulb](#) (1)

Step 1 — Brake Light



- Open the trunk lid and remove the two black plastic fasteners on the side of the car with burnt out lights using a flat head screwdriver.

Step 2



- Pull back the carpet to access the bulbs and locate between the rear turn signal bulb and brake light.
 - The rear turn signal bulb is located at the top and has a grey cap.
 - The brake light is located at the bottom and has an orange cap.

Step 3



- Turn the brake light counterclockwise and pull the old light straight out of the socket.

This document was generated on 2020-11-28 08:10:42 AM (MST).

Step 4



- Replace the new bulb and push it in the socket.

Step 5



- Turn the socket clockwise while placing it in the housing.

Step 6



- Push the carpet back in place and screw in the two fasteners to secure the trunk liner.