




How to force restart the OnePlus Nord

Use this method to force restart your OnePlus Nord in case it hung up, got stuck in menus, or froze.


Written By: Tobias Isakeit

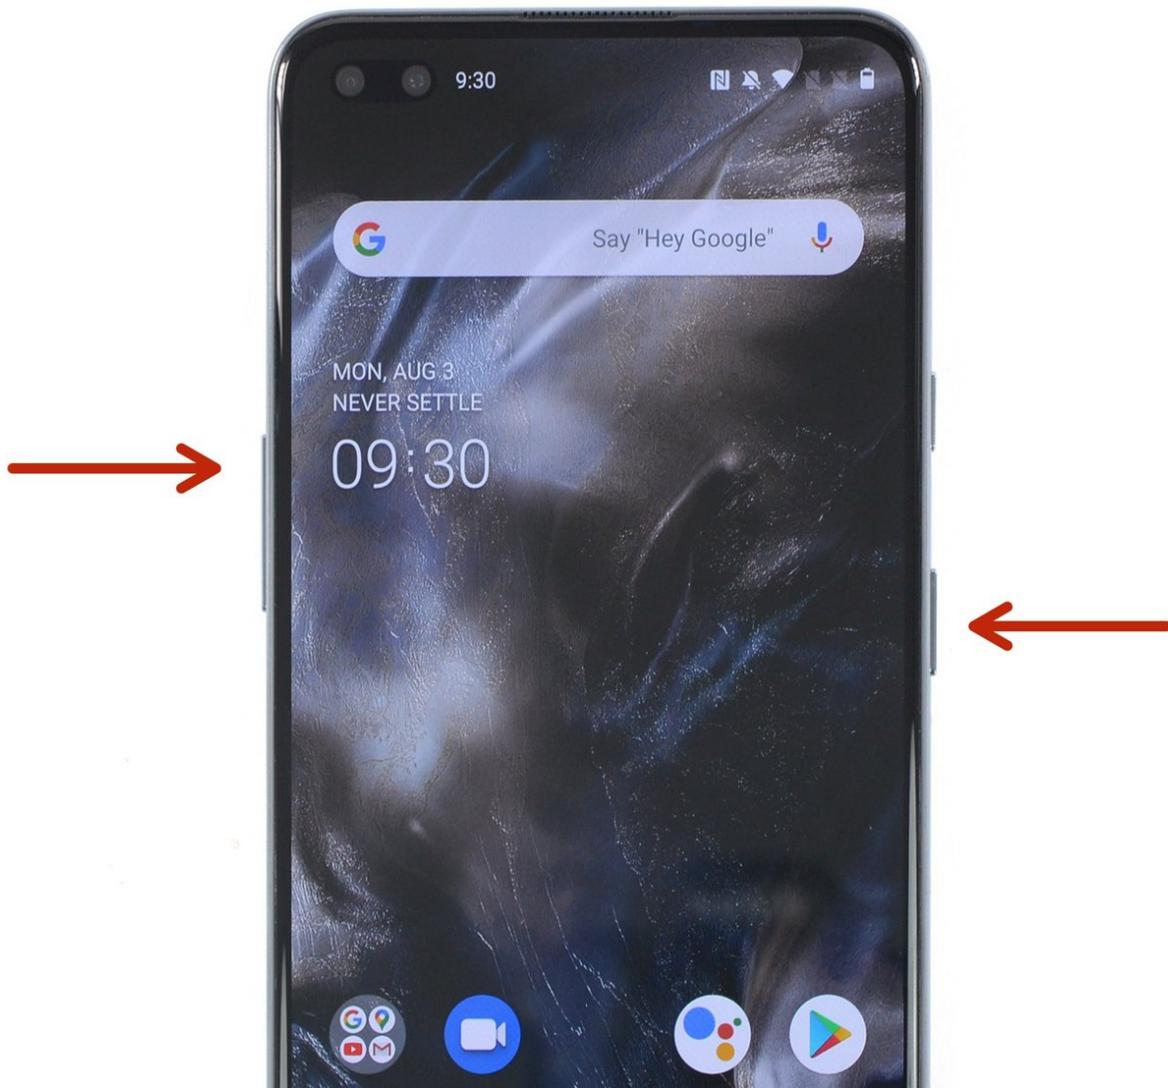

INTRODUCTION

Use this method to force restart your OnePlus Nord in case it hung up, got stuck in menus, or froze.

Step 1 — How to force restart the OnePlus Nord

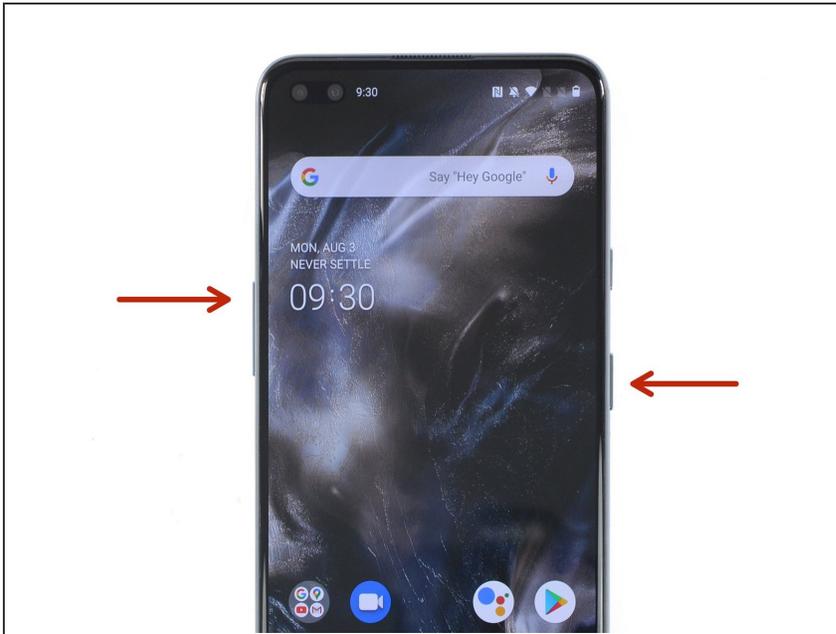

- Simultaneously push and hold the volume **up** and the power button.
- ⓘ Make sure you hit the UP part of the volume rocker. The down part will initiate a factory reset.
- Release both buttons when you see the OnePlus logo come up.