


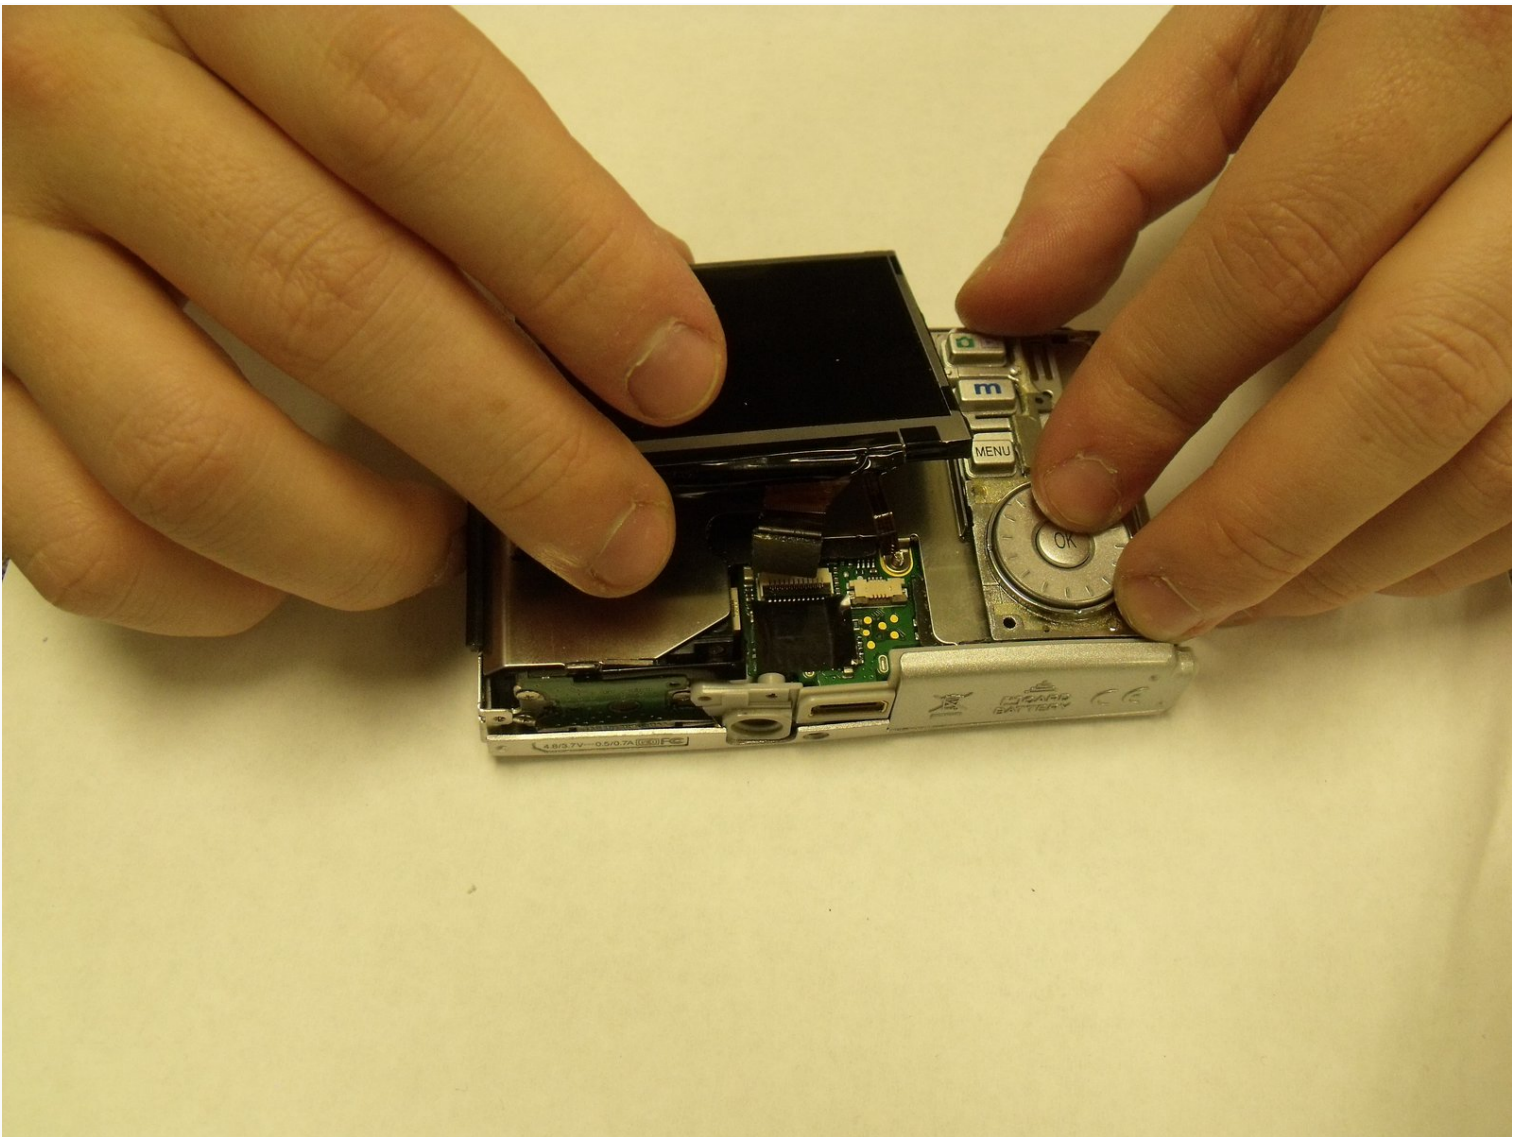

# Nikon CoolPix S5 LCD Screen Replacement

This guide illustrates how to remove and...

Written By: Josh Miller



# INTRODUCTION

This guide illustrates how to remove and install an LCD screen into the camera casing. These instructions are useful if the camera screen becomes damaged or no longer functions properly due to overuse. A Phillips-head screwdriver is necessary to complete this installation.




## TOOLS:

Tournevis cruciforme #00 (1)


---

### Step 1 — Back Cover

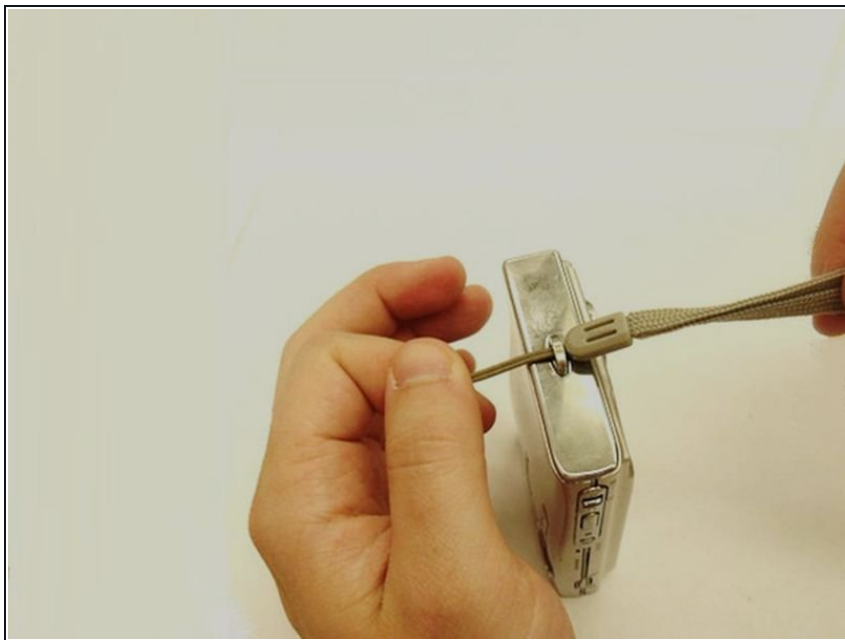


- Remove the wristlet by untying the strap.

## Step 2

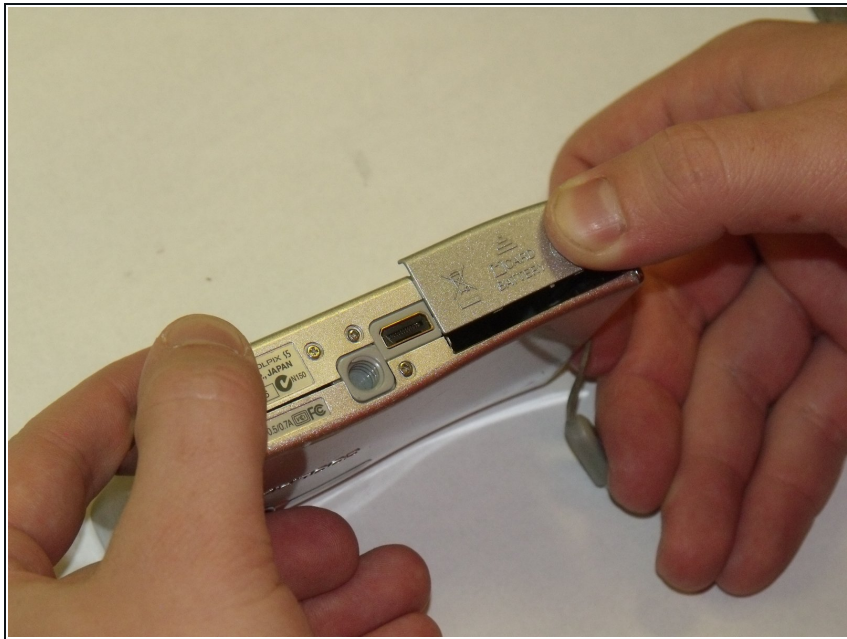

- Open the SD/Battery cover.


## Step 3

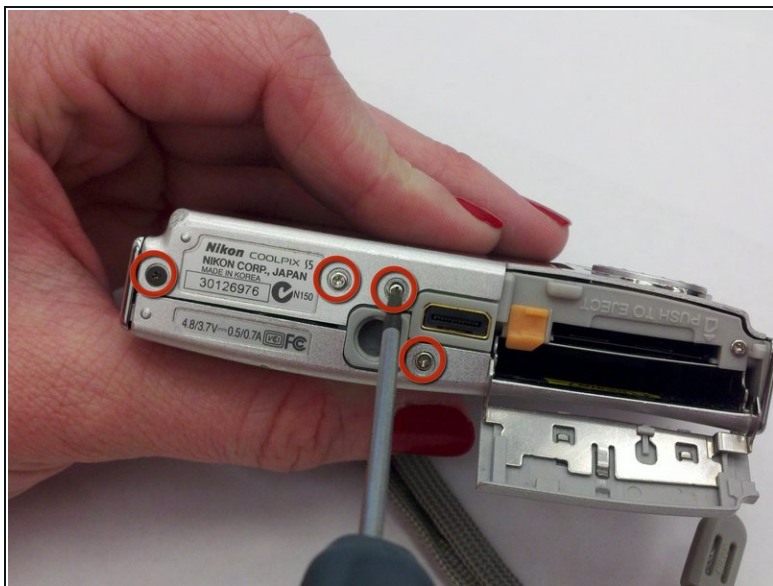

- Remove the four screws adjacent to the SD/battery opening using a Phillips #00 screwdriver.



## Step 4

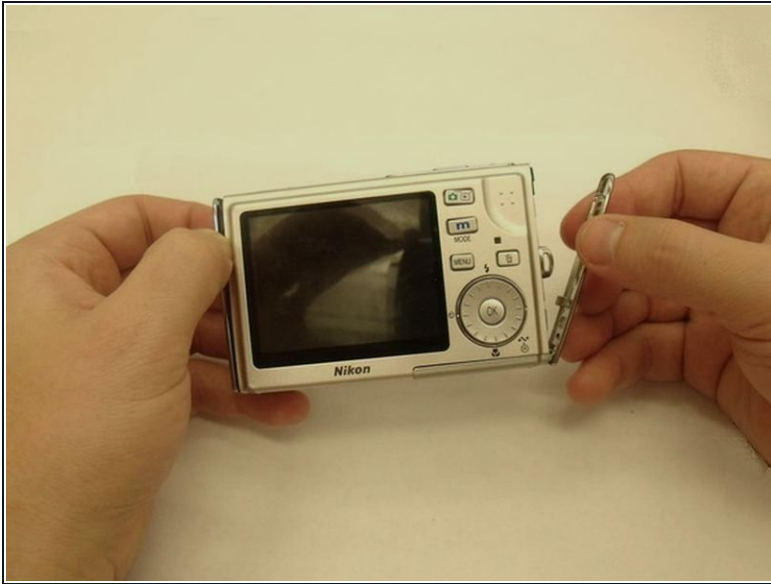


- Remove the side paneling of the camera by prying it off with your hands.

## Step 5




- Start on the wristlet side of the camera and use the #00 Phillips screwdriver to remove the two screws that hold the backplate in place.
- Repeat the removal of the two screws on the other side of the camera.

## Step 6

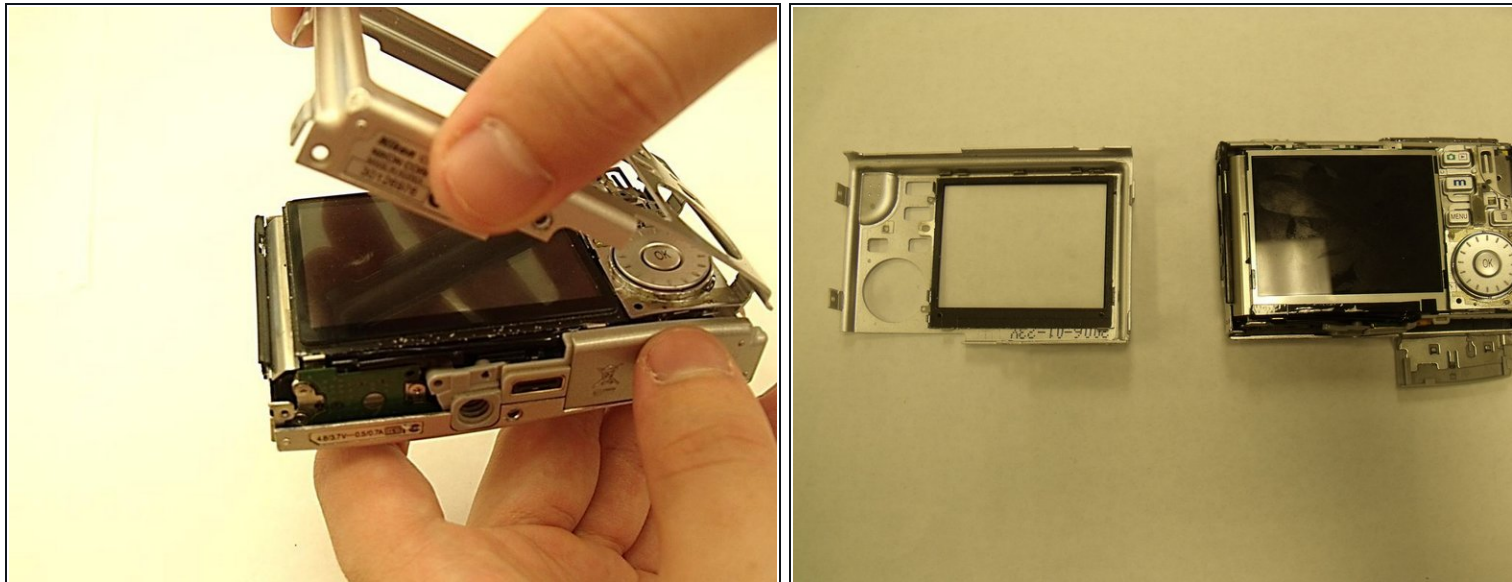


- Separate the back faceplate from the rest of the camera.

## Step 7 — LCD Screen

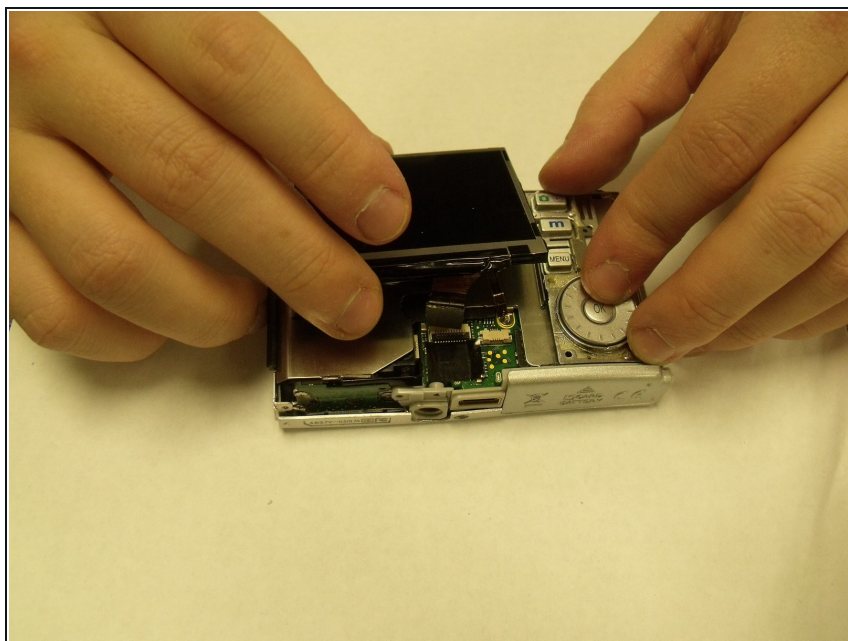

- Gently lift the LCD screen.
- Disconnect the ribbon cables from the ports.

## Step 8

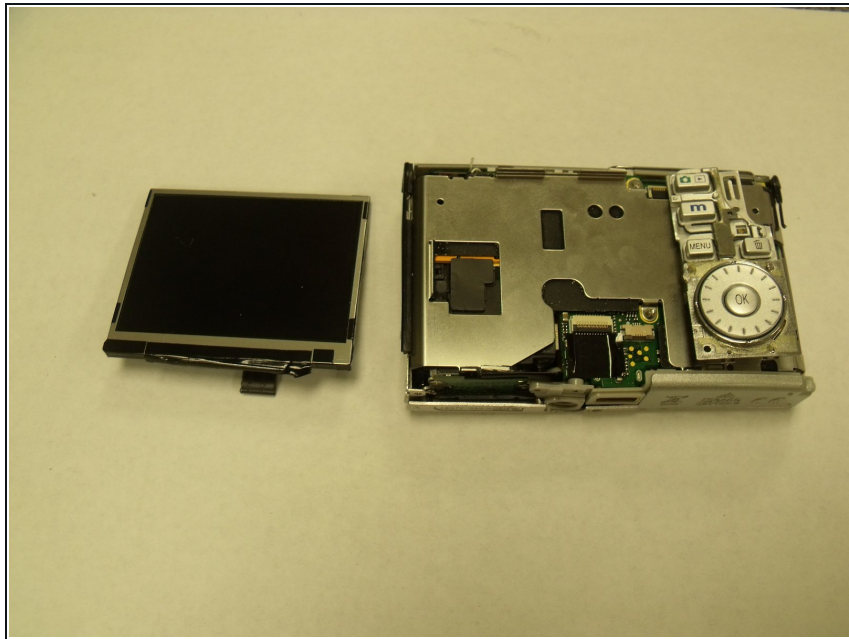

- Remove the LCD screen from the camera.

To reassemble your device, follow these instructions in reverse order.