


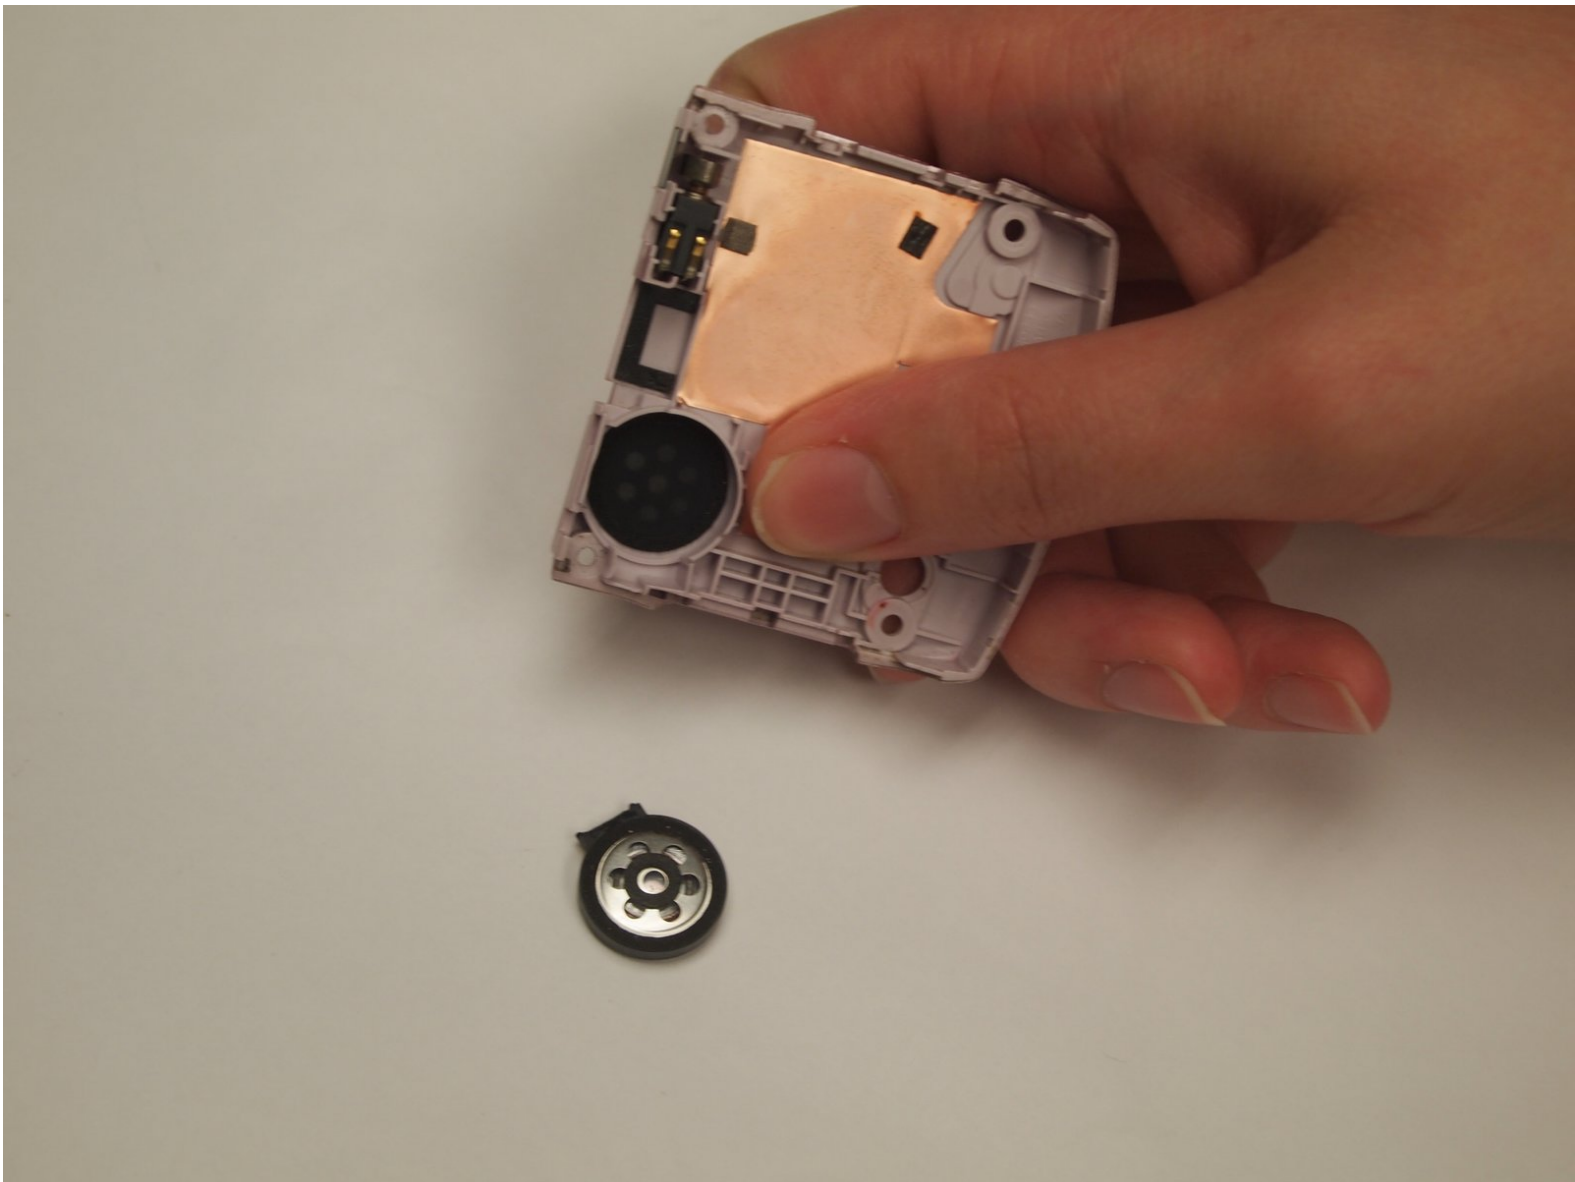

Sanyo Katana Speaker Replacement

This guide explains how to remove and replace the speaker used for speaker phone calls in the lower back casing of the phone.

Written By: Preston



INTRODUCTION


The speaker is a small, round piece that is easily detachable from the device. However, to access the speaker, various prerequisite steps must be completed.



TOOLS:

- [Spudger](#) (1)
 - [Tri-point Y0 Screwdriver](#) (1)
-

Step 1 — Battery

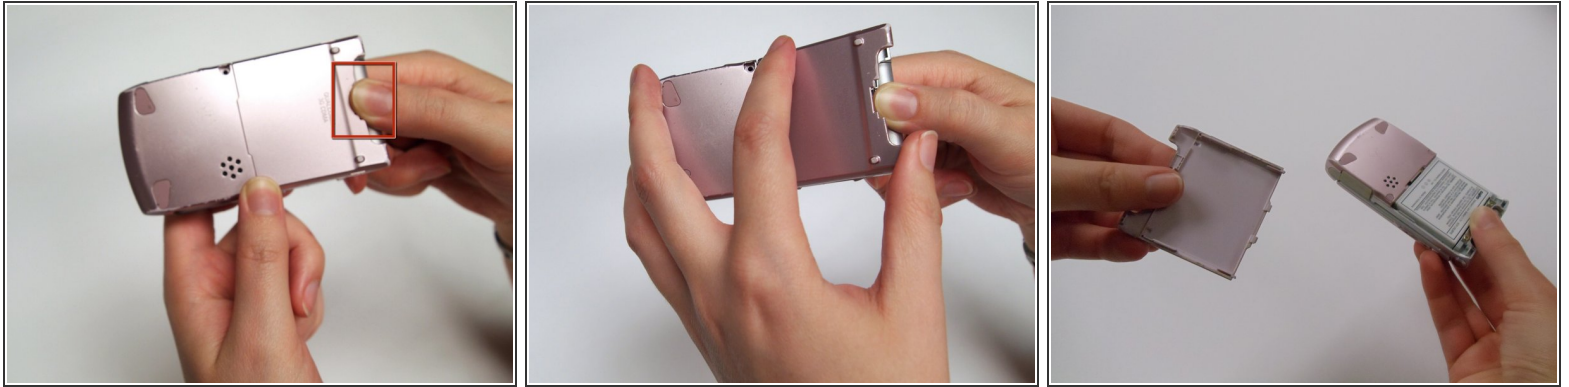


- Place thumb on the tab located at the back of the phone and slide button towards your hand and away from phone.
- While holding down the button, pull cover off with other hand.

Step 2





- Use fingers to grip the battery and remove it from the phone.

Step 3 — Back Casing

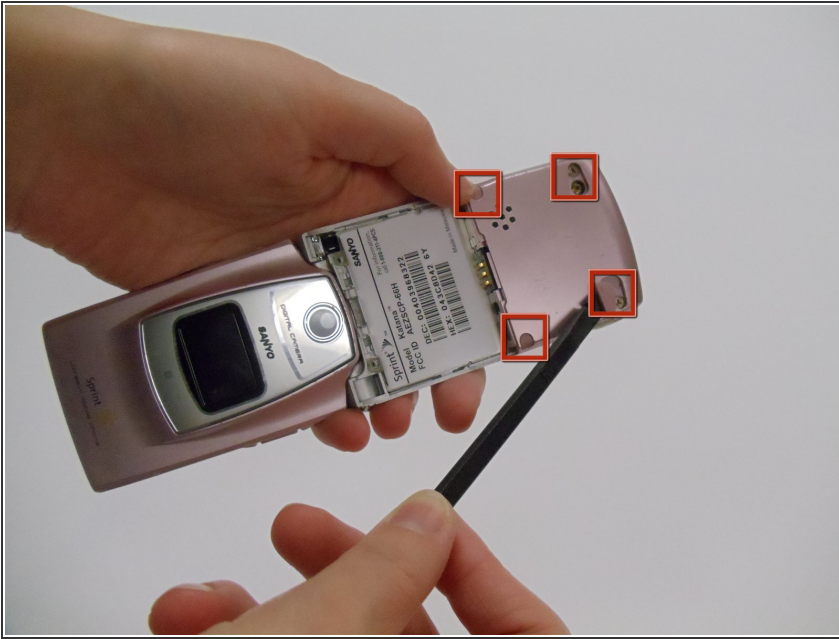


- Using a spudger, remove the four rubber coverings on the lower back plate.

Step 4

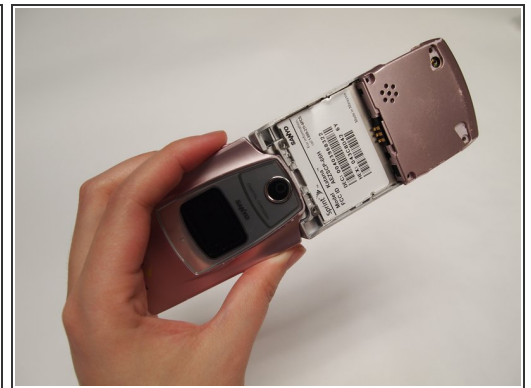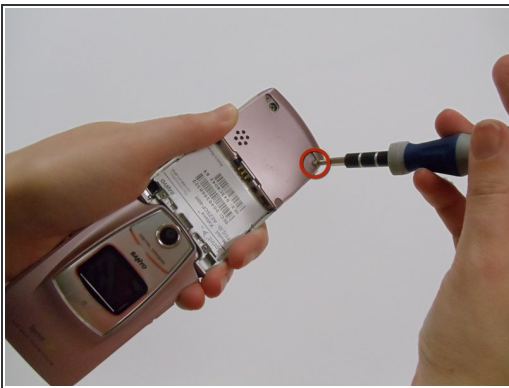


- Using a Tri-wing Y0 screwdriver, remove the four 4.4mm screws securing the back plate.

Step 5

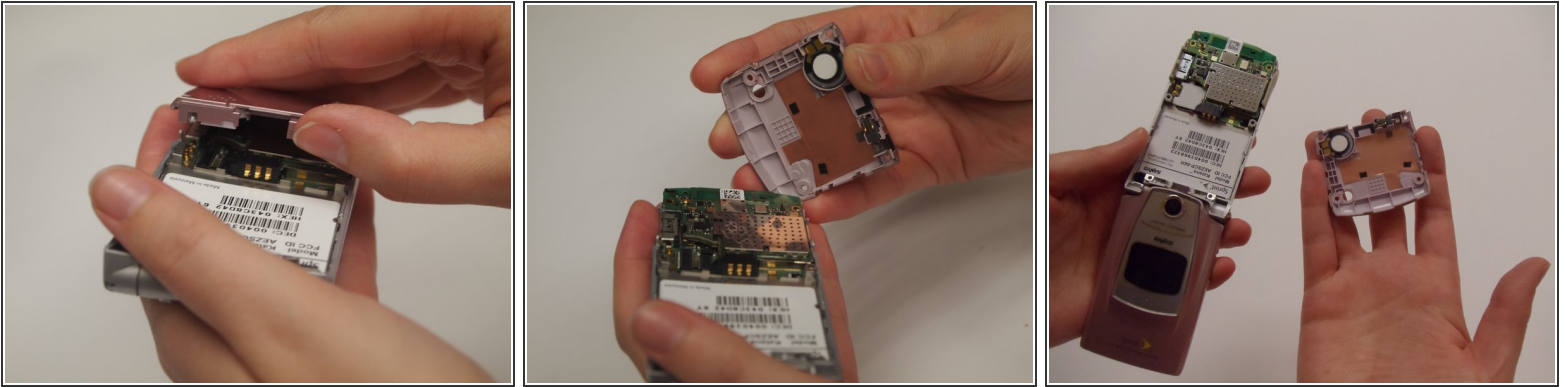

- Remove the lower back cover to reveal part of the motherboard and the circular speaker housed in the back cover plate.

Step 6 — Speaker

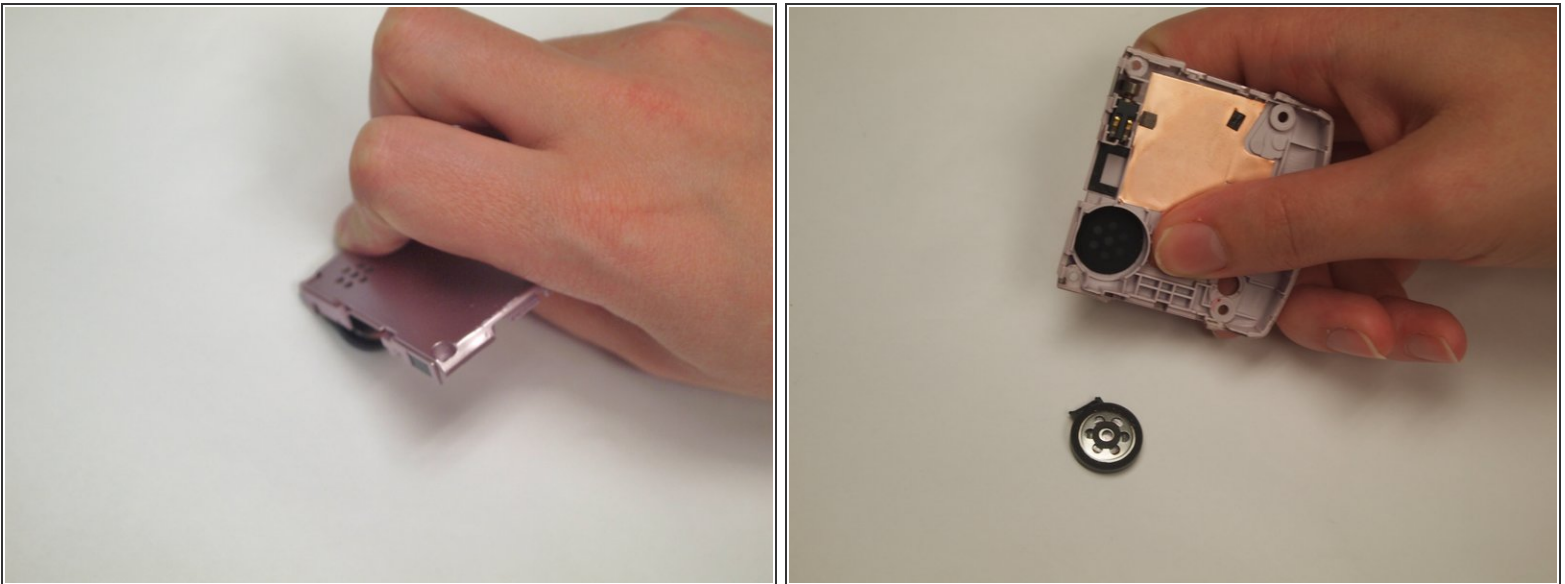

- Gently tap the lower back casing on a hard surface to remove the speaker.

To reassemble your device, follow these instructions in reverse order.