



How to Clean a Samsung DC68 Washing Machine Filter

This guide shows you how to clean the filter of...

Written By: Ishmeet Cheema



INTRODUCTION

This guide shows you how to clean the filter of your Samsung Washing Machine (Model DC68-02807A-03) to ensure your washer lasts longer and works more effectively.

A washing machine filter traps all sorts of dust, lint, and loose hair from your clothes. However, over time as the filter accumulates all this unwanted stuff and is not cleaned out regularly, your machine will function less effectively and clothes won't be washed properly. If your washing machine is not working and cleaning your clothes as well as it should, the most common reason is that your filter needs to be cleaned.

Before spending money on repairing your machine, check to see if your filter is free of debris. Often just regularly maintaining and cleaning out your filter ensures that your washing machine works as well as it should!

Note: Samsung recommends cleaning the filter once every two months.

TOOLS:



Scissors (1)

Paper Towels (1)

Shop Towels or Rags (1)

Large bowl (1)

Step 1 — How to Clean a Samsung DC68 Washing Machine Filter

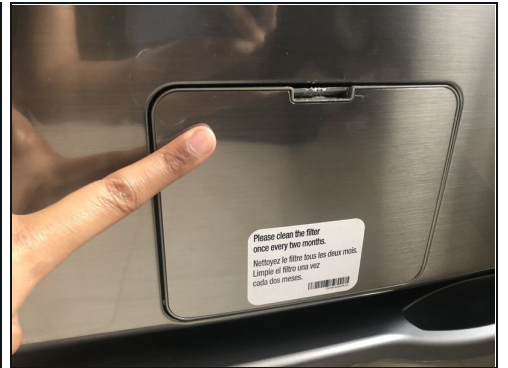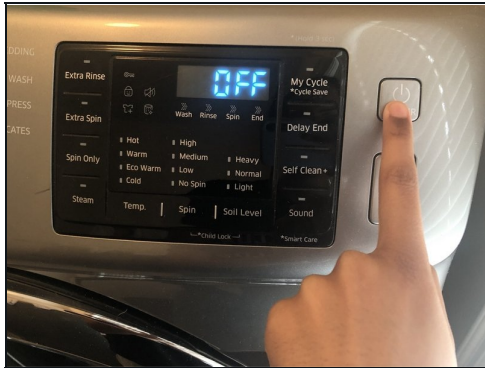

- Turn the washing machine off and locate the filter access door.
 - ① Most Samsung washing machine filters are located at the front. Sometimes they will have a sticker on them to communicate filter cleanliness best practices.

Step 2



- Gently press the top of the filter door to release and open it.
 - ① If that doesn't work, use the handle of a small pair of scissors or something similar to push down and open the access door.

Step 3



- Place a rag underneath your access door and place a basin on top.

Step 4



- Pull out the drain hose and unplug the white cap to let the excess water flow out into the basin.

Step 5



- Once the water stops coming out from the drain hose, secure it back into position.

Step 6



- Push the filter in and twist it counterclockwise.
- Remove the filter from the filter bay.

Step 7



- Remove any debris from the filter using a paper towel.
- Rinse the filter under warm water.

Step 8



- Insert the filter back and secure it by twisting it clockwise.

Step 9



- Close the access door by pushing against the machine until you hear a click sound.

You are all done!