




Asus K53SV Keyboard Replacement

Written By: iSzymon

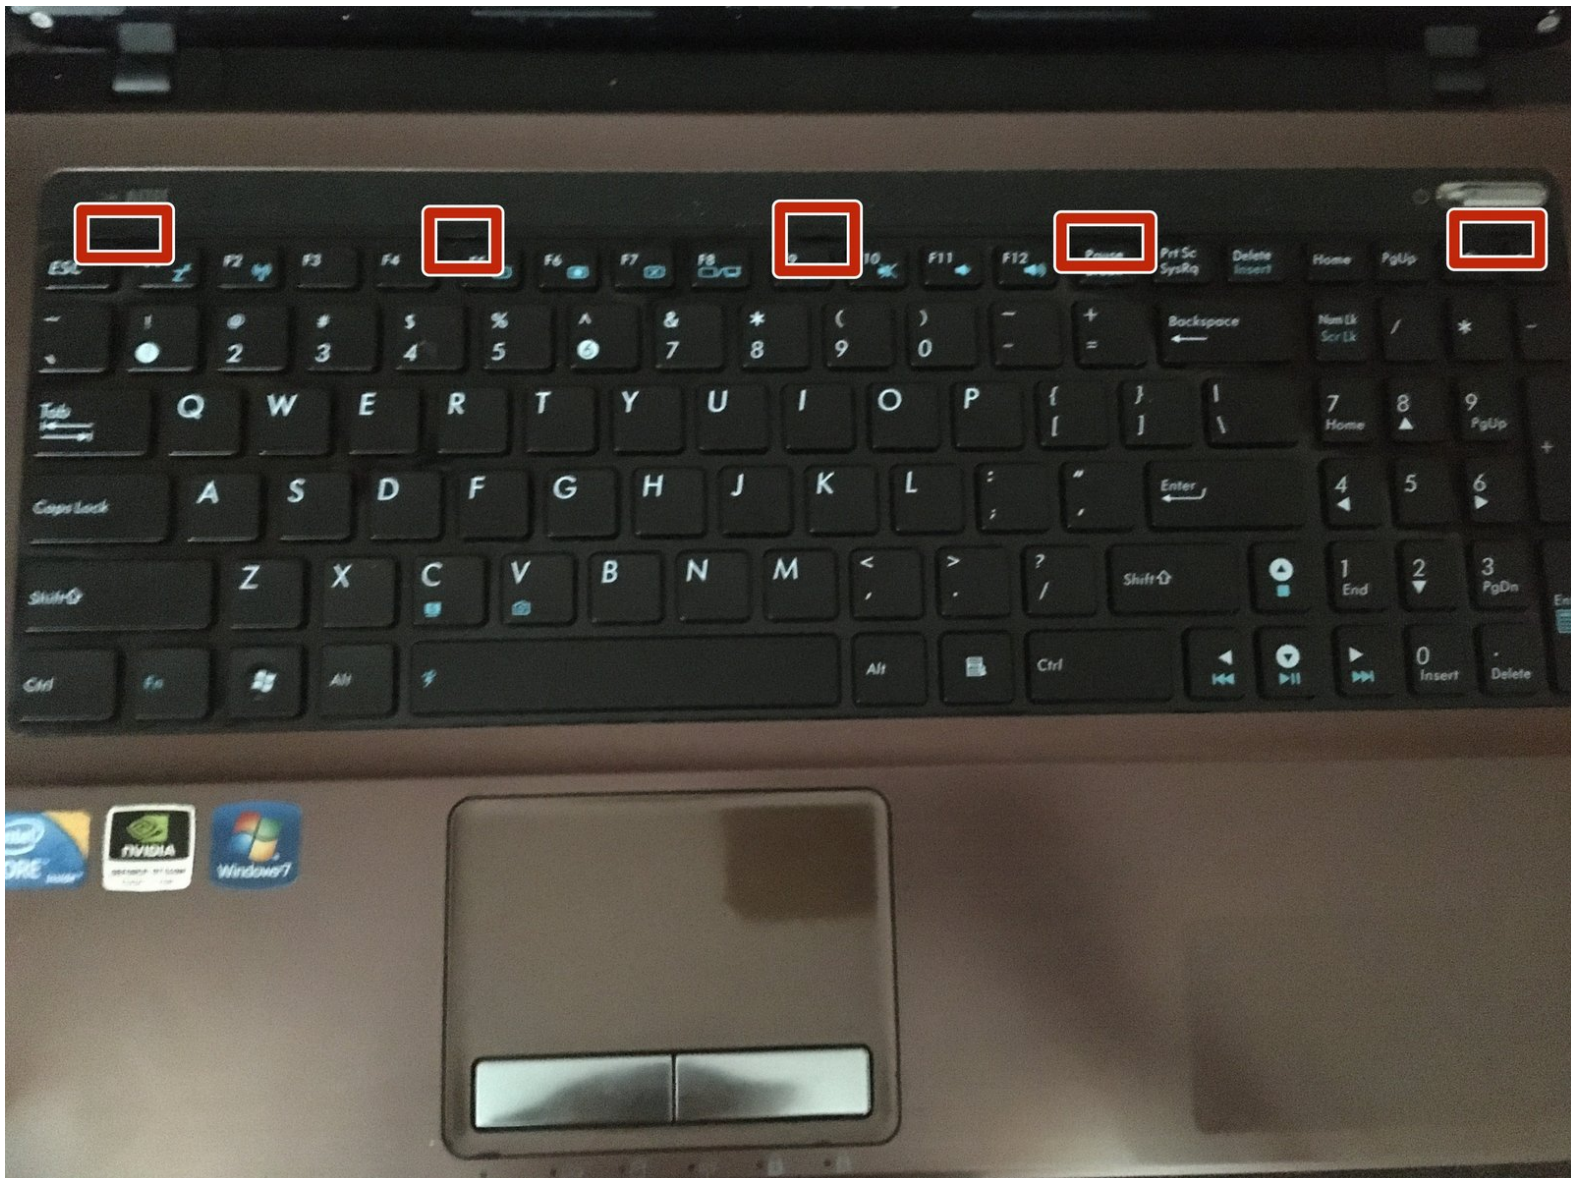

Step 1 — Unlocking the battery






- Unlock the battery by sliding the two tabs in the indicated directions.
- ⓘ The left tab doesn't stay unlocked and needs to be held in position.

Step 2 — Sliding out the battery



- The battery can now be removed by sliding it out in the indicated direction.

Step 3 — Unclip the keyboard

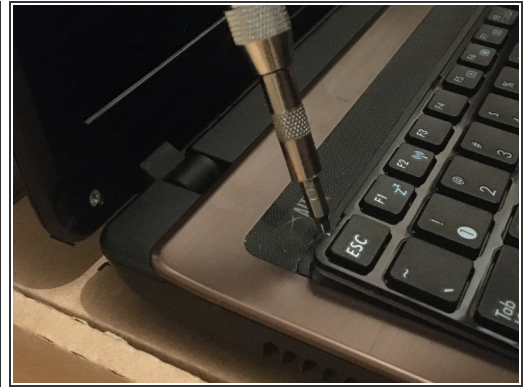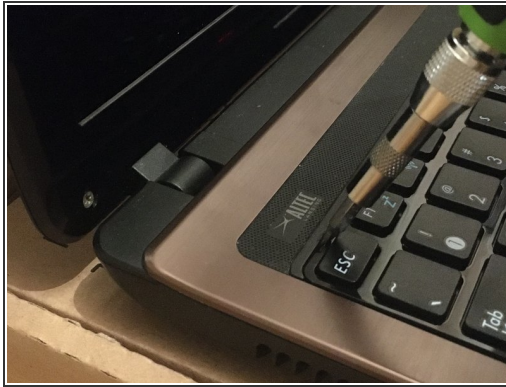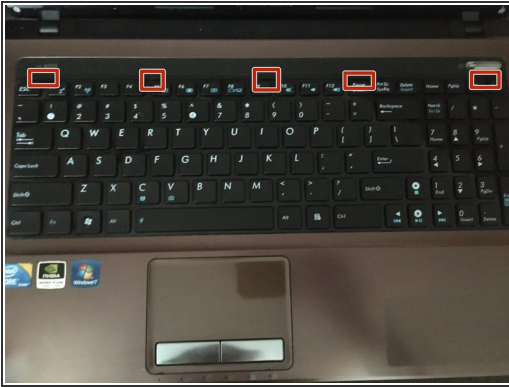

- There are several pins holding the keyboard. Insert the tool at an angle, then turn it in the opposite direction to unclip them

⚠ Be sure to not damage the pins, otherwise the keyboard might no longer stay in place!

To reassemble your device, follow these instructions in reverse order.