




Nikon 1 J5 Back Case Replacement

Written By: Terrance

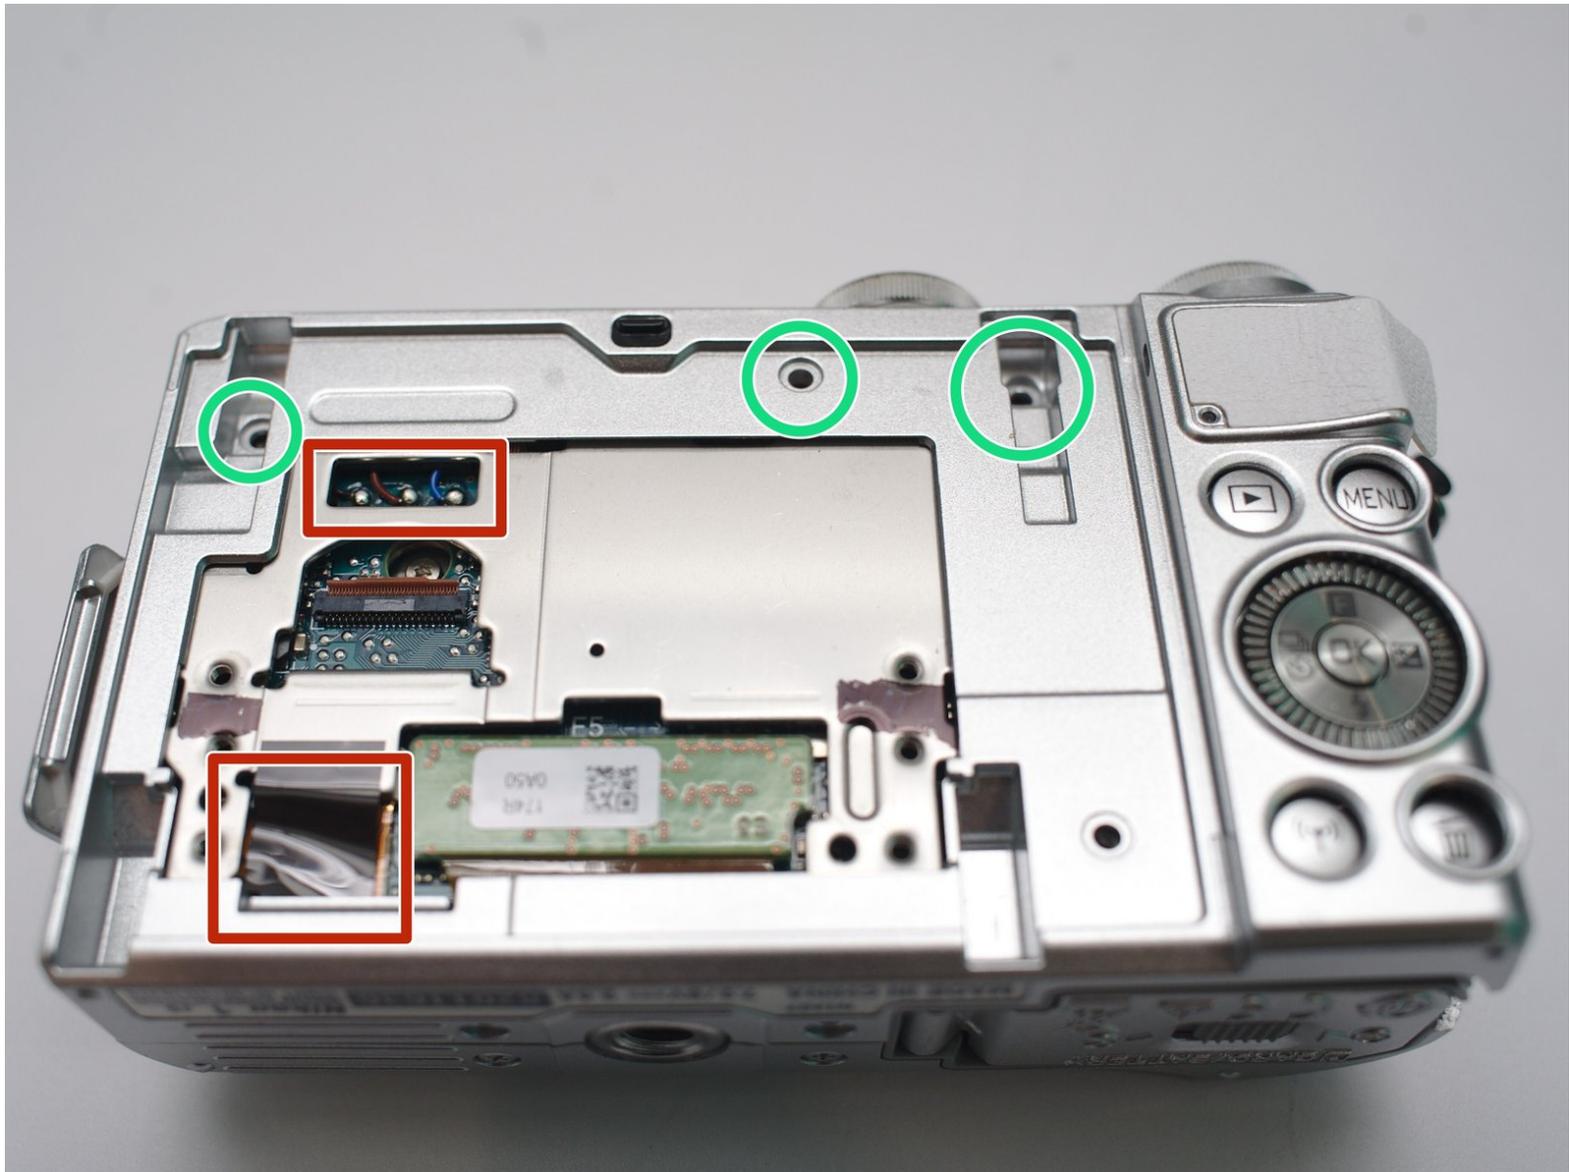

 **TOOLS:**




- Phillips #00 Screwdriver (1)
 - Tweezers (1)
-

Step 1 — Remove Micro SD card and Battery



- Remove Micro SD card and Battery

Step 2

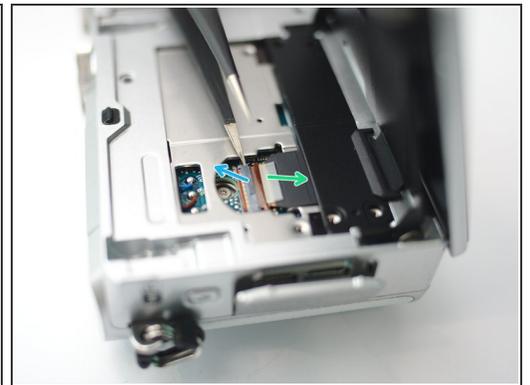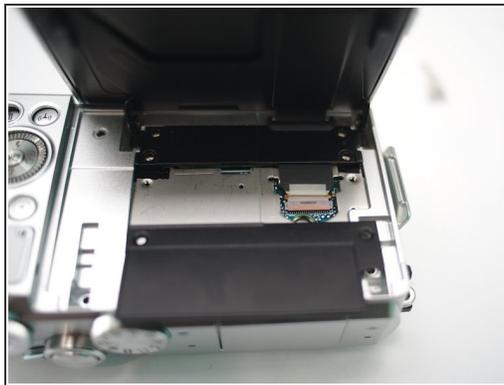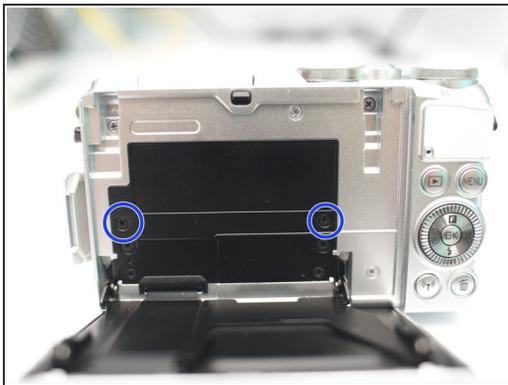


- Remove 2 screws
- Open plastic LCD connector cover
- Lift FPC connector latch
- Detach LCD FPC

Step 3



- Remove 4 screws
- Remove LCD module

Step 4 — Back Case

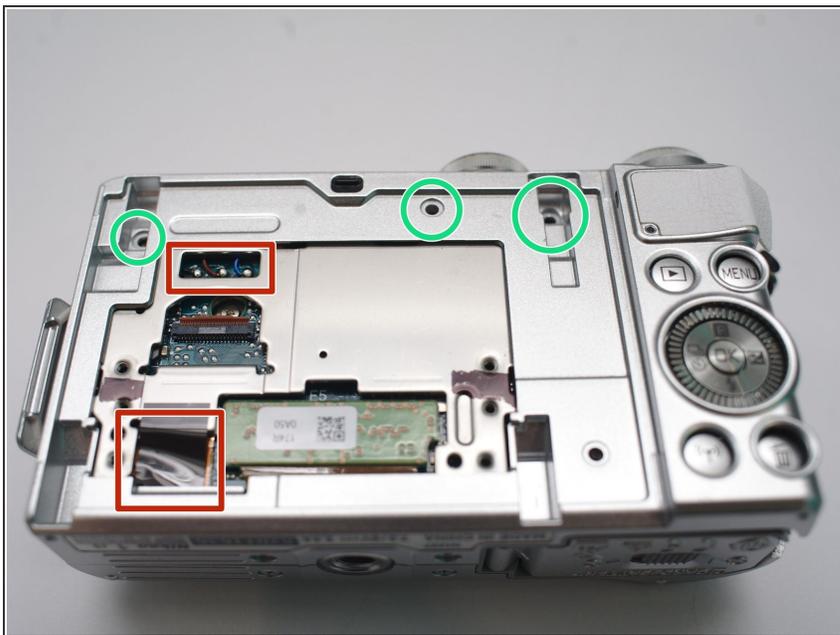

⚠ WARNING!!! DO NOT TOUCH THESE Solder joints!!! High Voltage up to 300V..

i Or discharge the flash condenser first, as per "Main PCB replace guide"

- Remove 3 screws

Step 5





- Left side, in connector bay, remove 2 screws.
- Bottom, remove 2 screws
- Right side, remove 1 screw

Step 6



- Peel here and remove 1 screw within.

Step 7

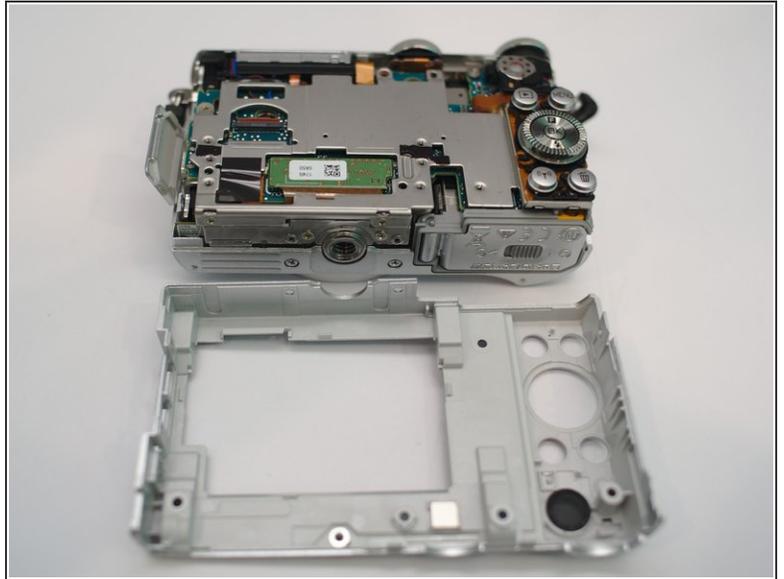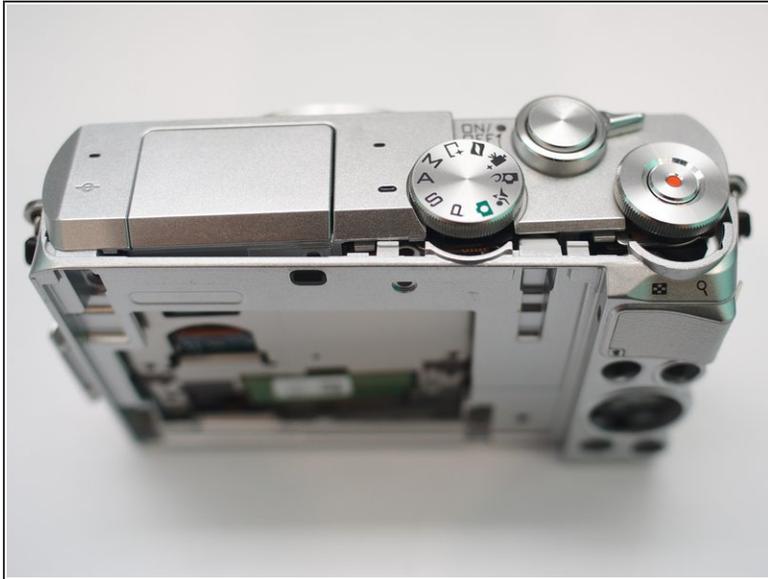

- Pop open back case and remove it from body.

To reassemble your device, follow these instructions in reverse order.