 




Nikon 1 J5 Keypad Replacement

Written By: Terrance

 
 
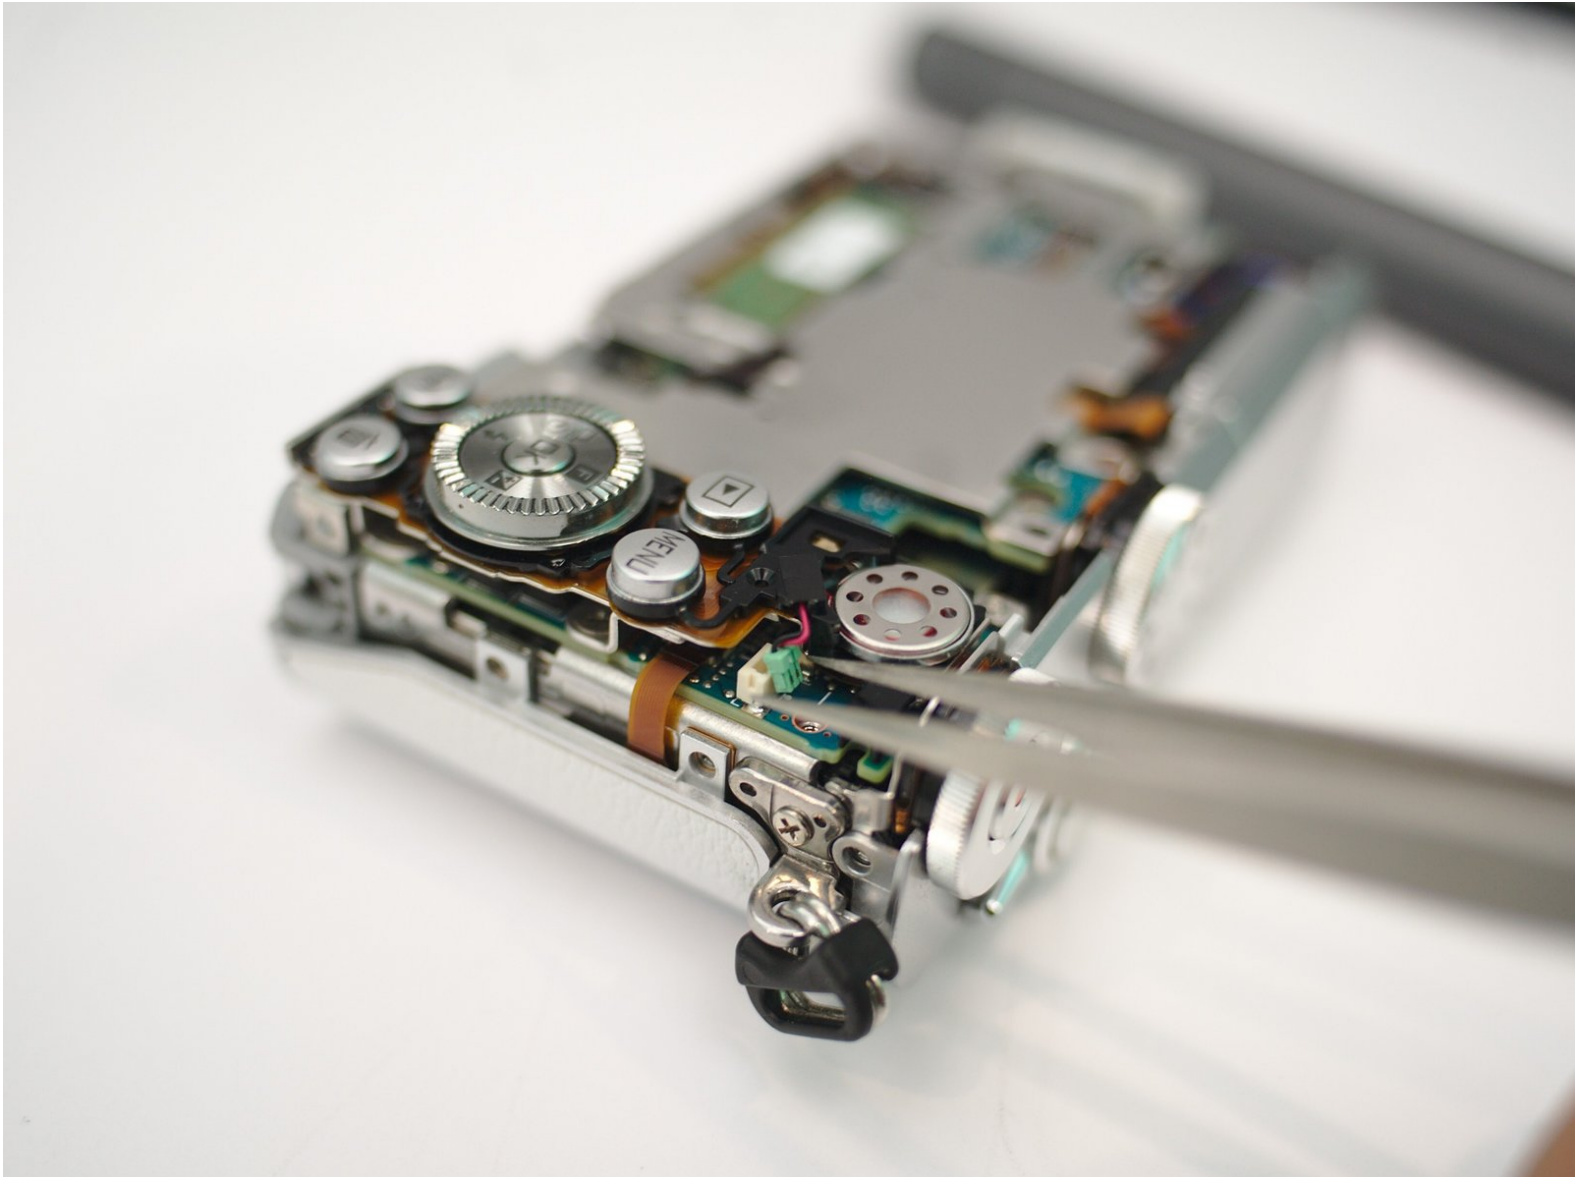 


Step 1 — Remove Micro SD card and Battery




- Remove Micro SD card and Battery

Step 2

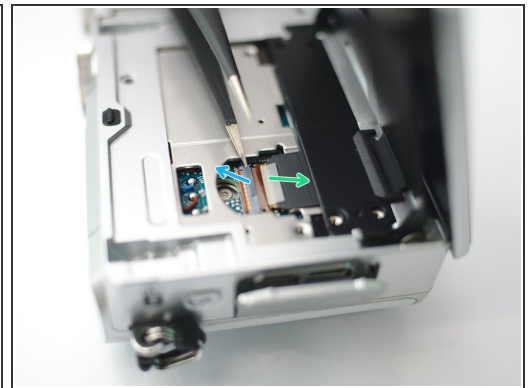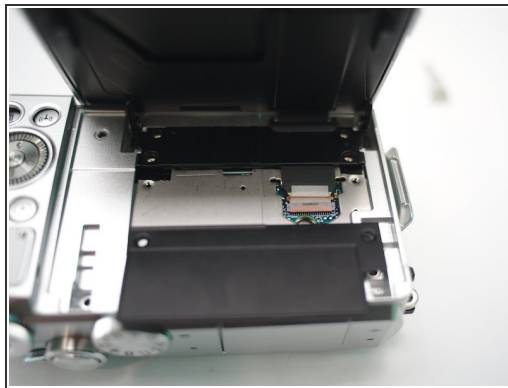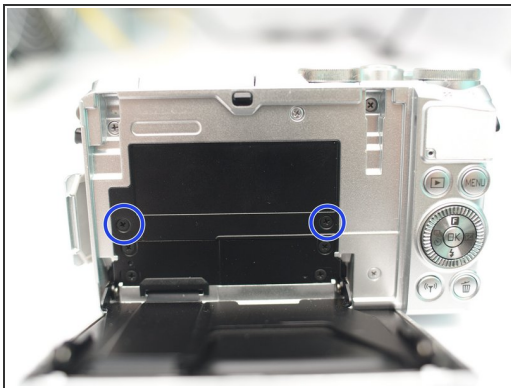


- Remove 2 screws
- Open plastic LCD connector cover
- Lift FPC connector latch
- Detach LCD FPC

 Step 3

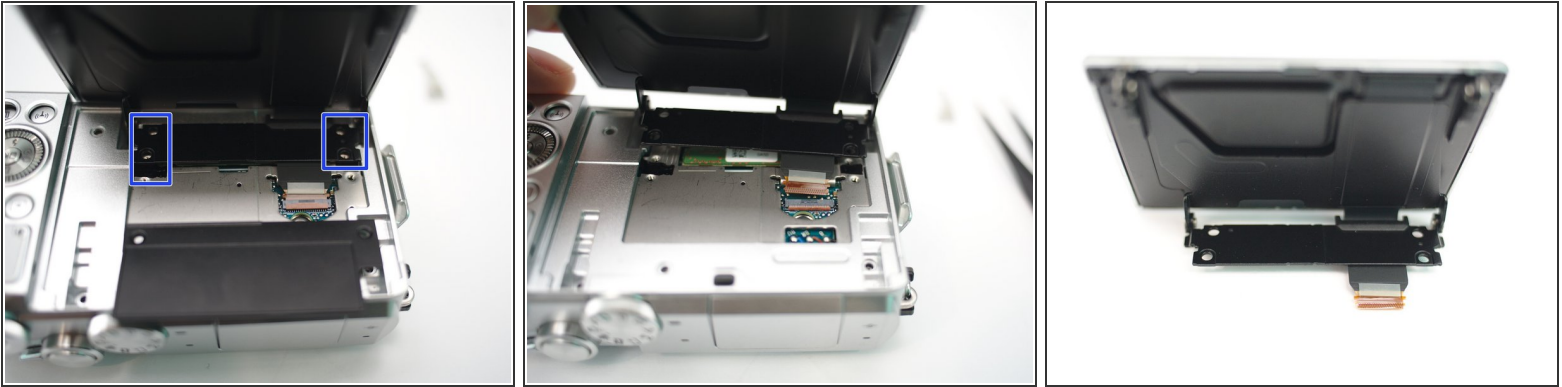

- Remove 4 screws
- Remove LCD module

 Step 4 — Back Case

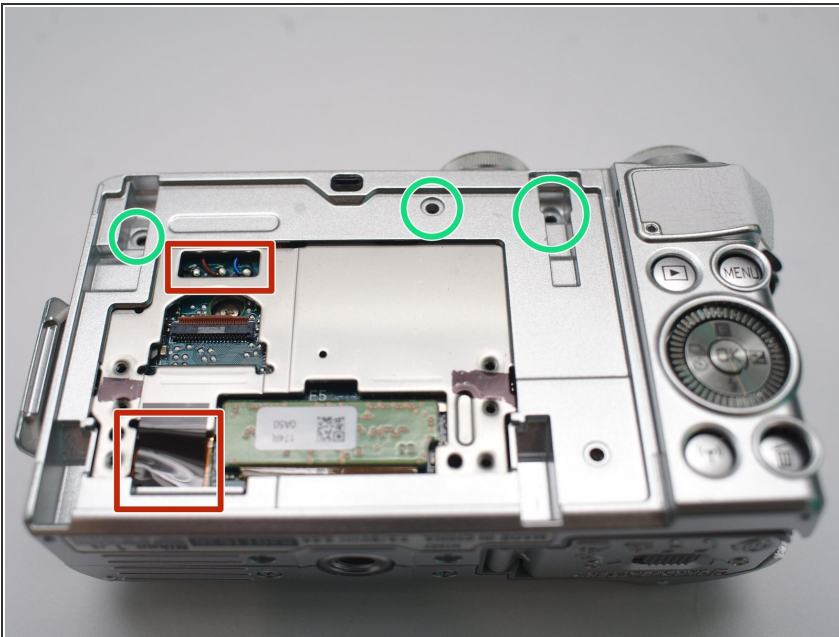

⚠ WARNING!!! DO NOT TOUCH THESE Solder joints!!! High Voltage up to 300V..

i Or discharge the flash condenser first, as per "Main PCB replace guide"

- Remove 3 screws

Step 5



 
 
- Left side, in connector bay, remove 2 screws.
- Bottom, remove 2 screws
- Right side, remove 1 screw

Step 6






- Peel here and remove 1 screw within.

Step 7

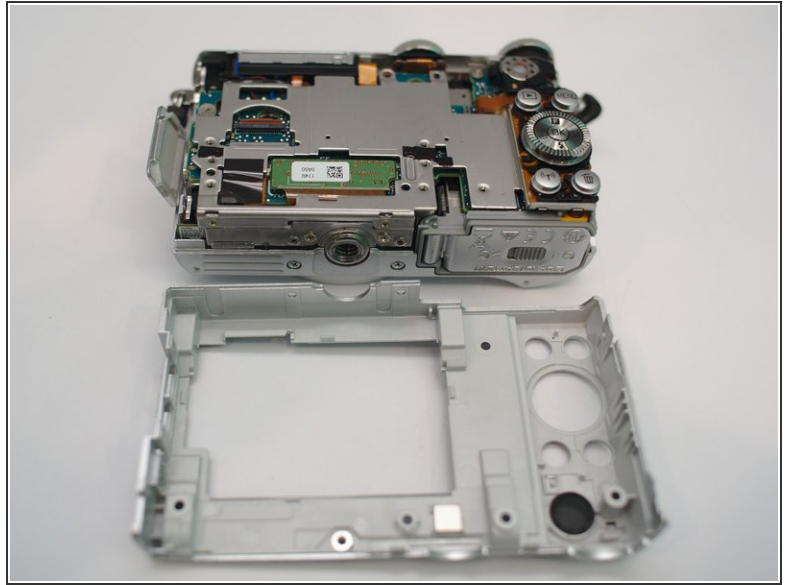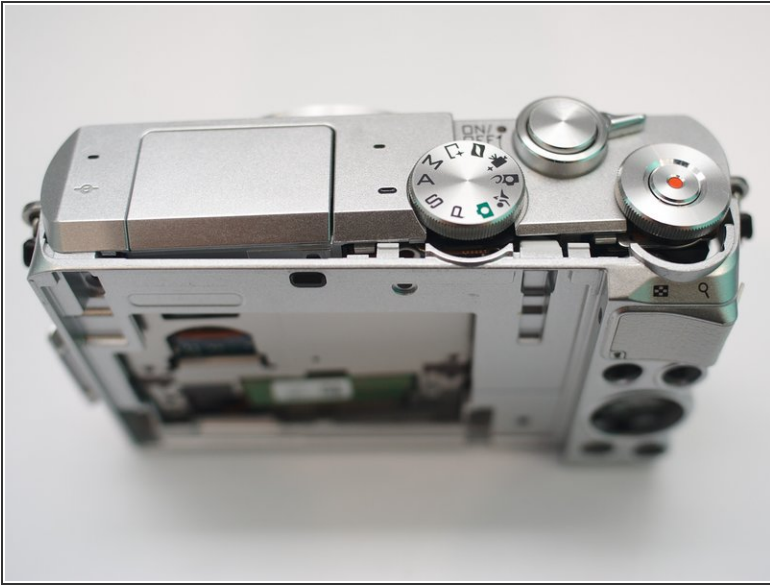


- Pop open back case and remove it from body.

   Step 8 — Keypad

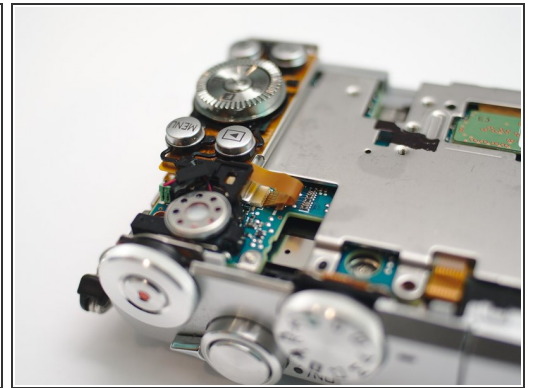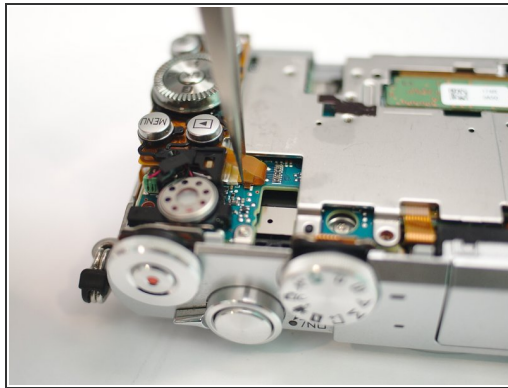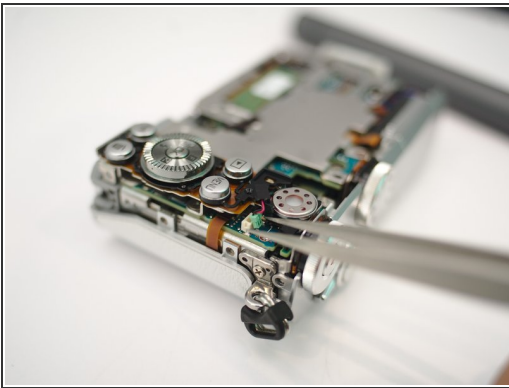

- Disconnect speaker
- Disconnect keypad FPC

 Step 9

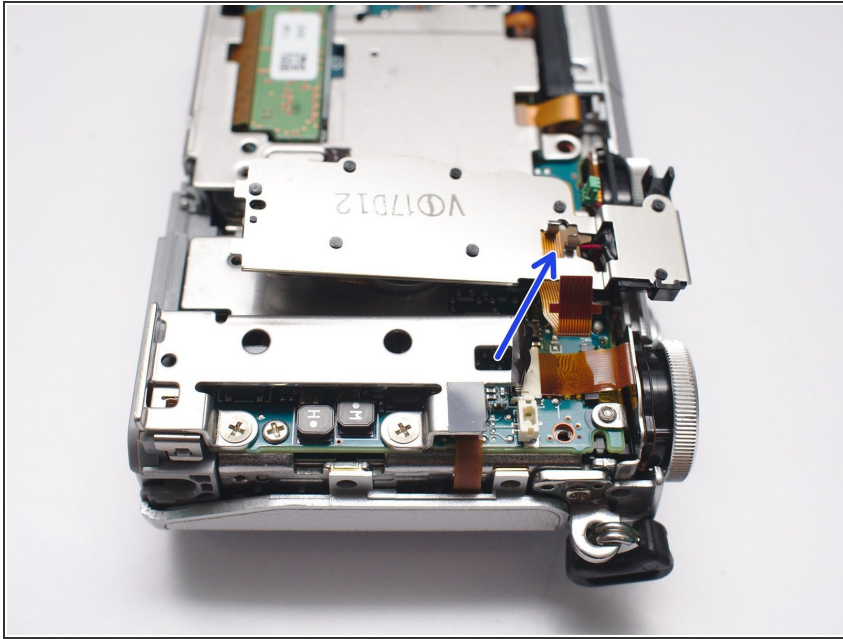

- Push latches from below
- pop up and remove keypad.

To reassemble your device, follow these instructions in reverse order.