



Lenovo ThinkPad T430s Display Replacement

This guide explains how to replace the screen...

Written By: Melissa Rogers



INTRODUCTION

This guide explains how to replace the screen in a Lenovo ThinkPad T430s. The ThinkPad T430s screen has a native resolution of 1600 x 900 pixels. It also has a matte finish and a LED backlight.

Physically damaging your ThinkPad causes injury to the screen. You should replace your screen if you notice cracks, black spots, distortion, or discoloration.

TOOLS:

[Phillips #0 Screwdriver](#) (1)
[Spudger](#) (1)

PARTS:


[04Y1269 - Lenovo Laptop LCD Screen - Genuine](#) (1)
[Lenovo ThinkPad T430 LCD Panel](#) (1)

Step 1 — Battery




- Flip your ThinkPad on its back.
- In the bottom left corner of your ThinkPad, slide the lever to the left. Hold the lever there.
- Use your other hand to lift the battery up by prying the notch to the left of the lever.
- Tilt the battery up and remove it from the ThinkPad.

Step 2 — Display

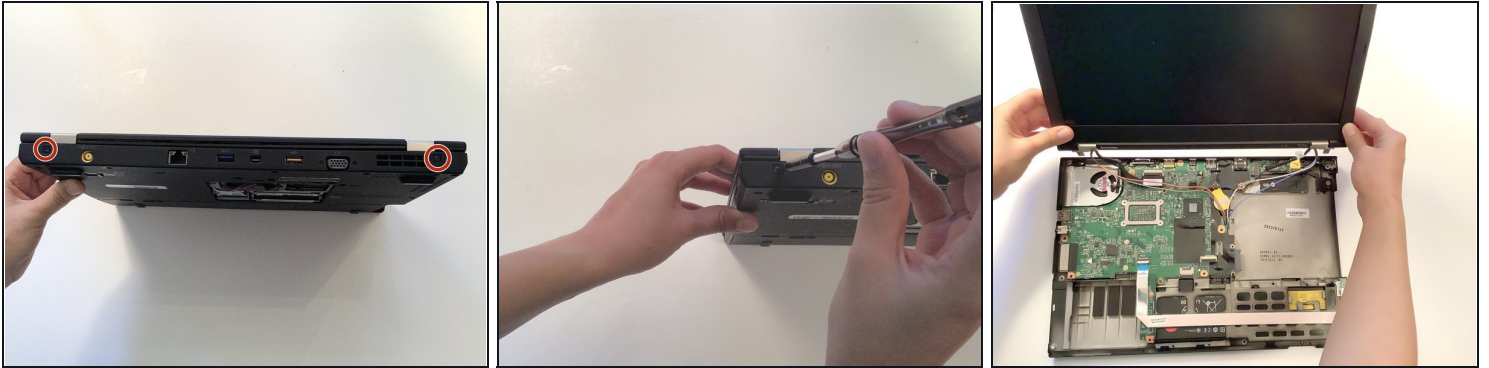


- Rotate your ThinkPad so the back side faces you.
- With the Phillips #1 screwdriver, remove the two 70 mm screws in the right and left corners.
- Open the ThinkPad so the screen faces up. Lift the screen from its hinges.

Step 3

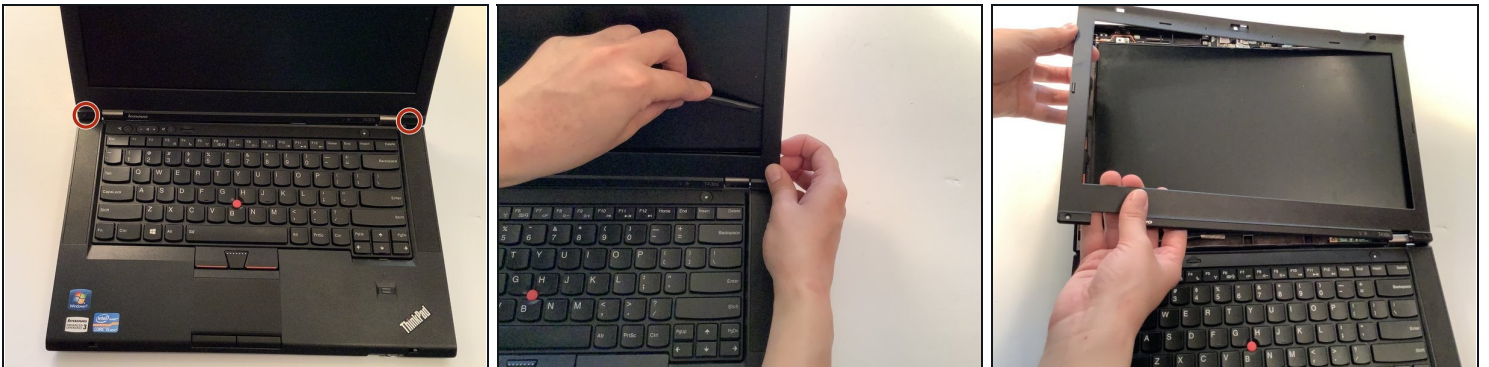


- With the Phillips #0 screwdriver, remove the two 50 mm screws securing the plastic display case.
- Wedge the flat end of the spudger in between the display case and the screen. Unsnap the top case from the bottom piece holding the screen.
- Remove the case and set it aside.

Step 4

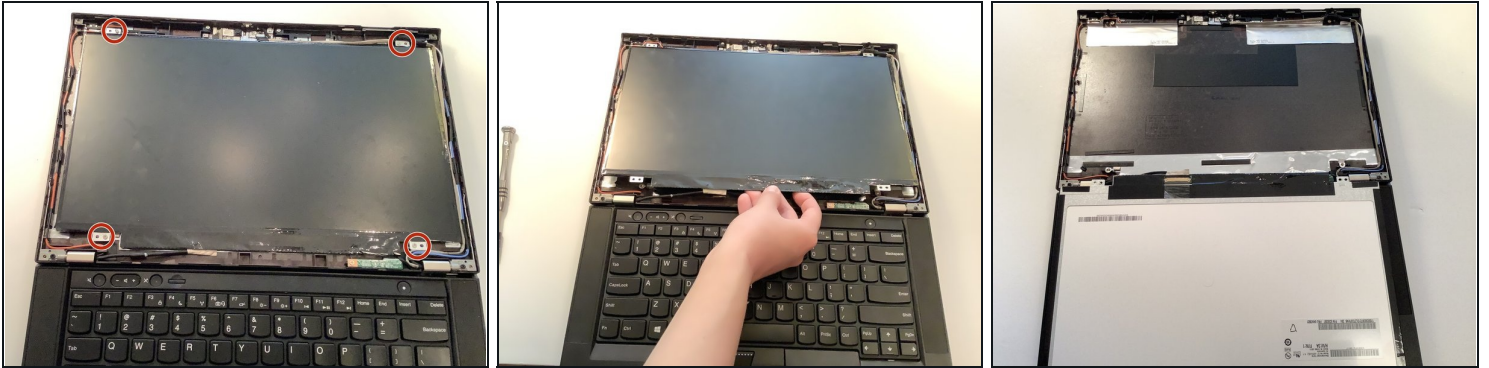

- Unscrew the four 30 mm screws holding the screen to the case.
- Lift the screen out of the case.
- Flip the screen over.

Step 5

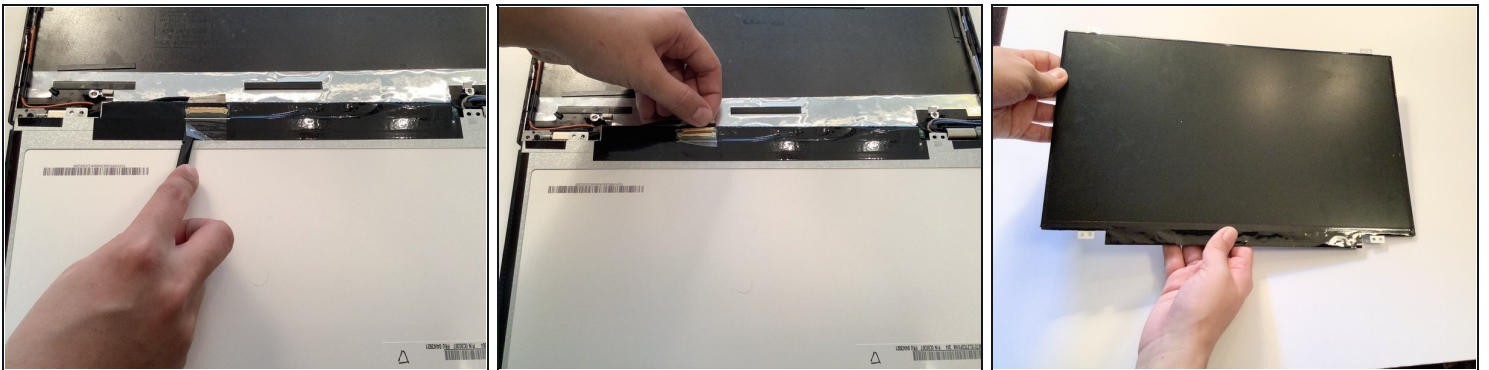

- Peel away the tape holding the cable down with the flat end of the spudger.
- Pull the cable out of its socket.

To reassemble your device, follow these instructions in reverse order.