



# Panasonic Lumix DMC-ZS3 Back Cover Replacement

Use this guide to replace the back cover of...

Written By: Juan Pablo Quinonez Weston



# INTRODUCTION

Use this guide to replace the back cover of your Panasonic Lumix DMC-ZS3 camera, which houses the back panel buttons and LCD screen.

## TOOLS:

Phillips #00 Screwdriver (1)

Spudger (1)


## Step 1 — Back Cover



- Remove the following eleven screws securing the covers to the ZS3
  - Eleven 3 mm Phillips screws

 Using too much pressure when removing the screws may strip the screws and complicate screw removal at a later time.

## Step 2

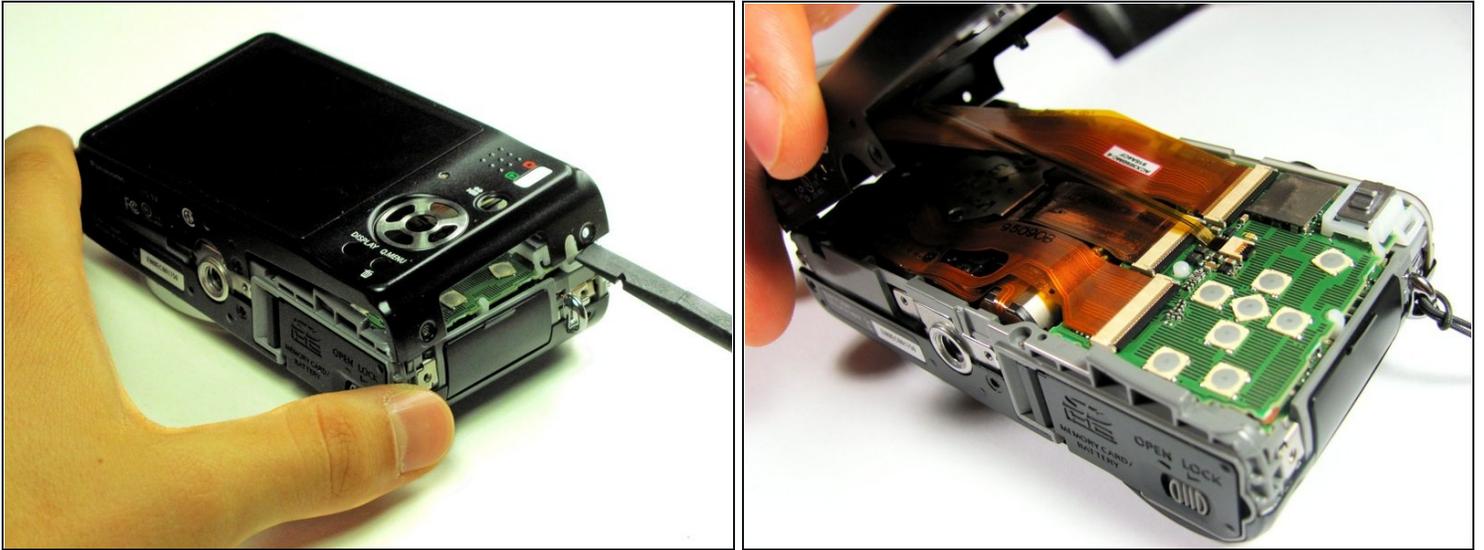

- Use the flat end of a spudger to pry apart the back cover from the rest of the unit as shown.

**⚠ Be sure to carefully and slowly lift the back cover. Forcefully lifting the back cover and fully separating it at this point may ruin internal connections.**

### Step 3



- Using your fingernail or a spudger, flip up the ZIF locking flap on the two LCD ribbon cable sockets that connect the back cover to the rest of the unit.

**⚠ Be sure you are opening the locking tab, not pulling against the socket mounted to the board.**

### Step 4



- Remove the two LCD board ribbon cables out of their sockets.

---

To reassemble your device, follow these instructions in reverse order.