



# Acer Optical Mouse Teardown

Written By: Oduelca

 




## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

## Step 1 — Gather Items

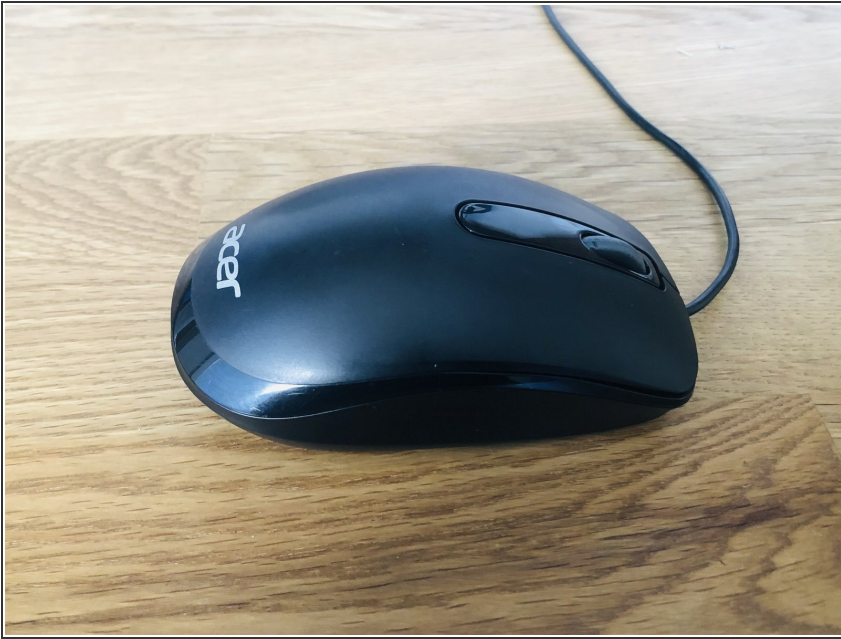

- Lay out your mouse and gather your tools.

## Step 2 — Remove sticker



- Use metal spudger to lift sticker



### Step 3 — Unscrew



 
- Using a phillips #0, unscrew the screws

### Step 4 — Lifting the lid



- Applying some force lift the mouse top up and backward at the same time to disconnect it

## Step 5 — Remove scroll wheel

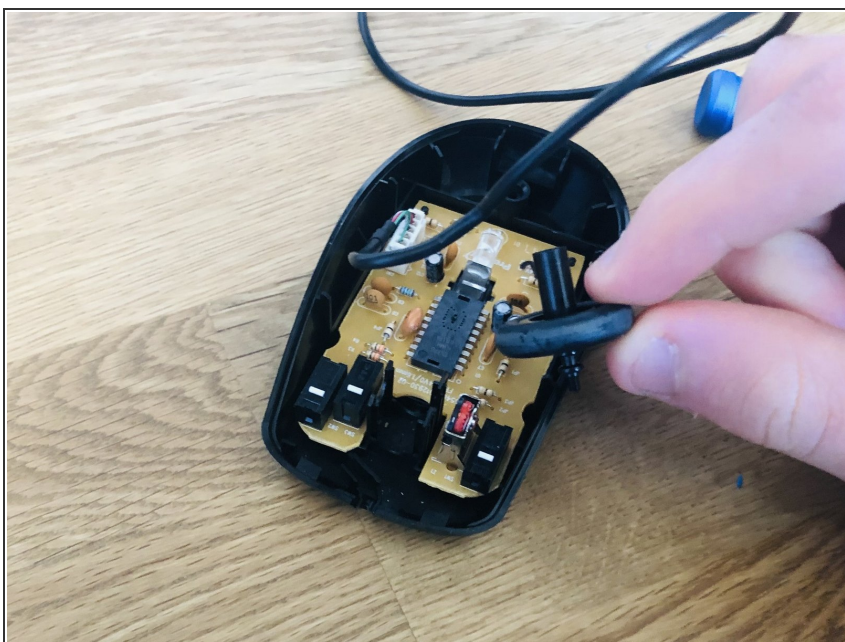

- Once inside pull on the scroll wheel to remove it from the board

## Step 6 — Remove motherboard



- Pull on the cable and the board should come out



## Step 7 — Remove plastic



- Then pull out the plastic at the bottom

## Step 8 — All done



- All done just follow guide in reverse to reassemble