



# Nintendo WaveBird Wireless Controller

## Batteries Replacement

Remove the batteries from the Nintendo WaveBird Wireless Controller.

Written By: Travis Taylor



## INTRODUCTION

This guide will show you how to remove the batteries that power the device. If the device [won't turn on](#), try replacing the batteries.

## Step 1 — Batteries



- Pull down on the battery cover release lever and pull back to remove the cover.

## Step 2



- Remove both batteries from the device.

To reassemble your device, follow these instructions in reverse order.