


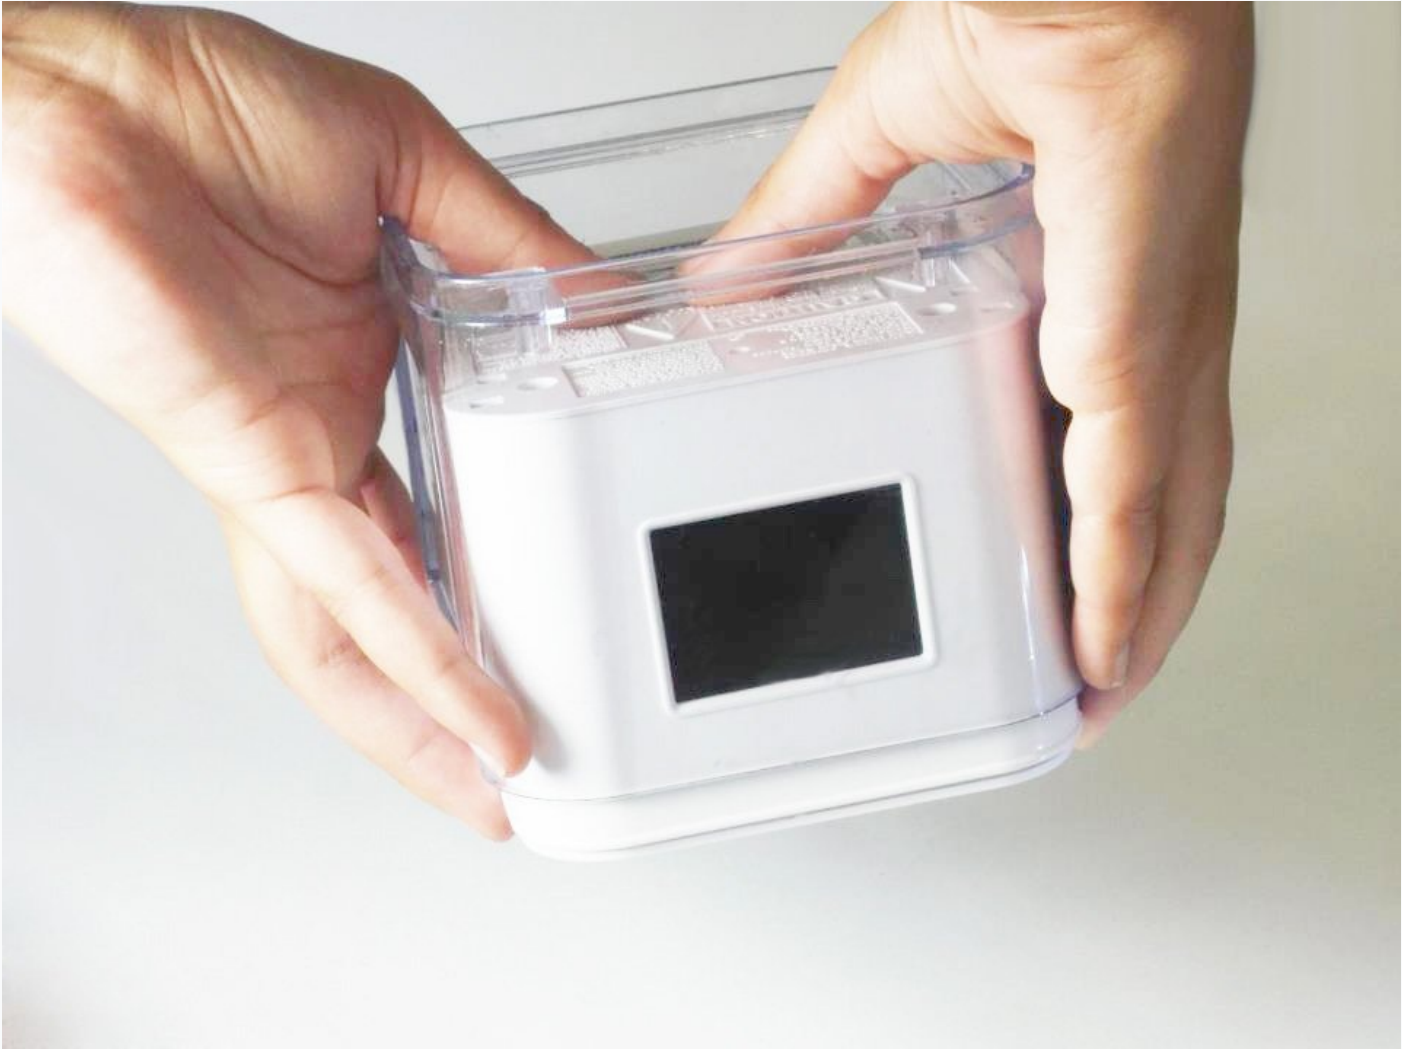

# Audiovox CR8030iE5 Top-Casing Replacement

The purpose of this guide is to show you how to...

Written By: Savannah Smith



# INTRODUCTION

The purpose of this guide is to show you how to open up your Audiovox. Once inside, you will be able to check out all of the different internal components, and begin repair if necessary!


---

## TOOLS:

Phillips #1 Screwdriver (1)

---

### Step 1 — Top-Casing

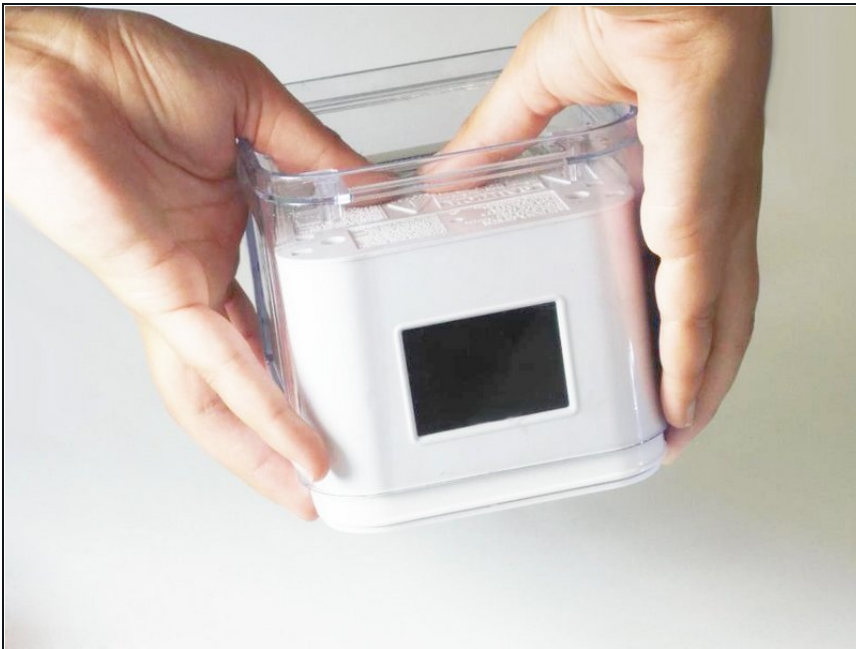

- Turn the device upside down.
- Apply constant pressure to the base of your Audiovox, while holding the plastic casing until the casing is completely removed.

## Step 2



- Remove the four screws from the base using a Phillips #1 screwdriver.

## Step 3




- Turn the device right-side up.
- Gently pull the top panel off of the device.

## Step 4



- Using a Phillips #1 screwdriver, remove the screw found in the middle of the board.

## Step 5

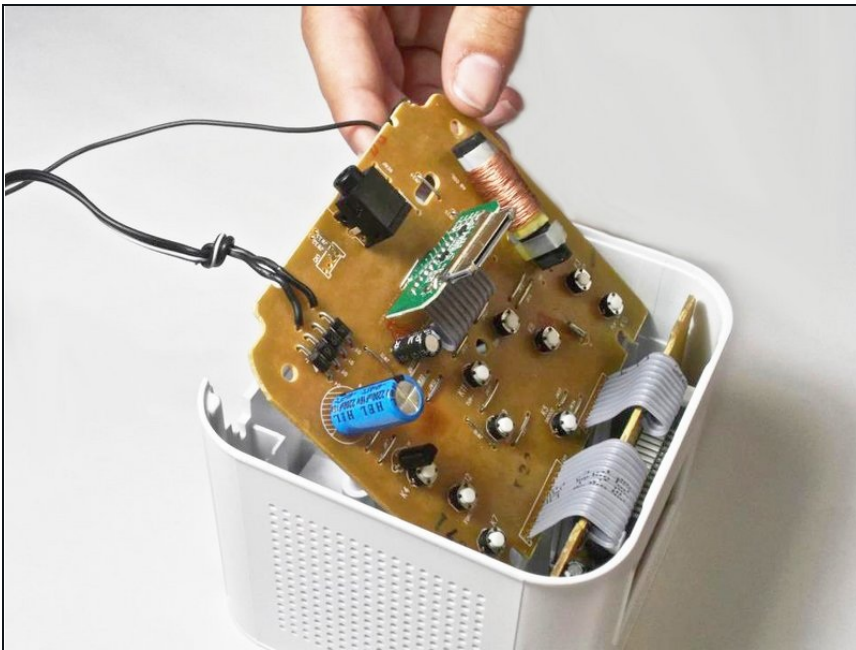

- Pull back the board gently to avoid disconnecting the attached wires.
- ① This allows you to view the soldered connections on the other side, and the internal components.

---

To reassemble your device, follow these instructions in reverse order.

