

# **Dell Latitude E6530 Motherboard Replacement**

This guide will help you replace the motherboard in your Dell Latitude E6530 laptop.

Written By: Jonathan M.




TOOLS:	DARTS:
<ul> <li>Phillips #00 Screwdriver (1)</li> </ul>	<ul> <li>Thermal Paste (1)</li> </ul>
<ul> <li>Phillips #1 Screwdriver (1)</li> </ul>	<ul> <li>Dell Latitude E6530 motherboard (1)</li> </ul>

# Step 1 — Battery



• Pull back the 2 battery tabs.

# Step 2

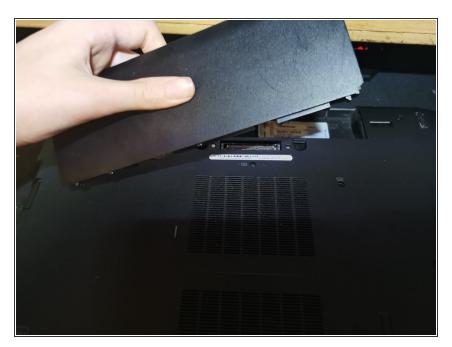


• Pull out the battery.

# Step 3 — DVD Drive



• Push the button next to the DVD drive.

# Step 4

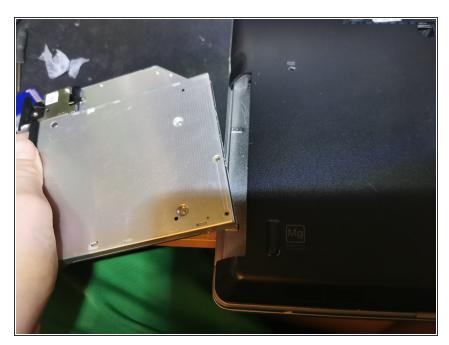

• Pull out the DVD Drive.

# Step 5 — Hard Drive



• Undo the 2 Phillips #00 screws.

# Step 6



• Pull out the hard drive.

# Step 7 — Back Cover



• Remove the 5 Phillips #00 screws.

# Step 8



• Remove the back cover.

# Step 9 — Keyboard



• Flip over and open the laptop.

# Step 10



• Use your fingernail or opening tool to remove the keyboard bezel.




• Remove the 3 Phillips #00 screws.

# Step 12




- Carefully remove the keyboard.
- Do not lift up the keyboard too much, as it is still attached via a ribbon cable.

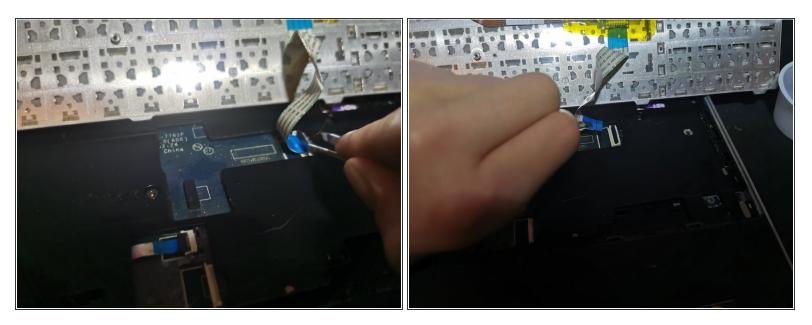

- Use a pair of tweezers or your fingernail to lift up the ribbon cable lock.
- Use a pair of tweezers or your finger to remove the keyboard ribbon cable
- Set the keyboard aside.

#### Step 14 — Palmrest

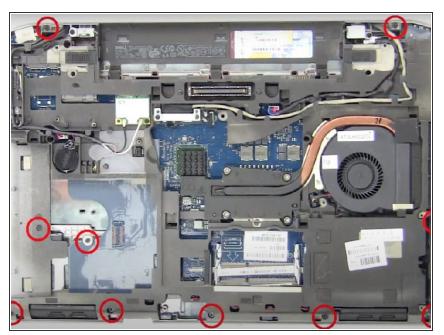


• Remove the 10 Phillips #00 screws.




- Flip over and open the laptop.
- Remove the 8 Phillips #00 screws,

# Step 16

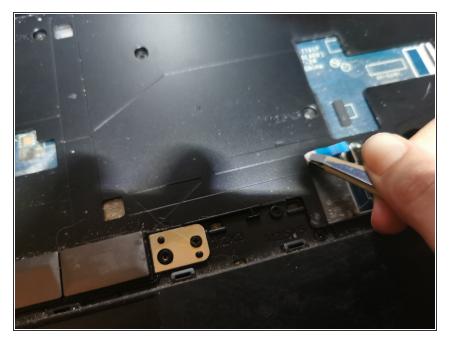

• Use a pair of tweezers to remove the trackpad ribbon cable.

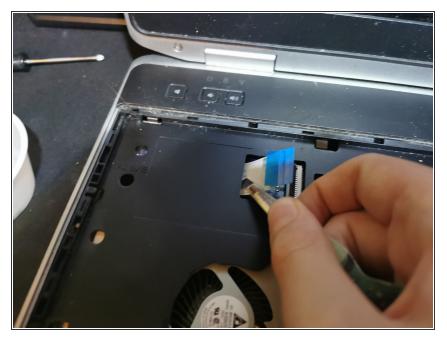

• Use a pair of tweezers to remove the ribbon cable for the lights and buttons.

# Step 18



• Lift off the laptop's palmrest.

#### Step 19 — Wi-Fi and cellular cards




- Close and flip over the laptop.
- Remove the antenna cables and screws from the Wi-Fi card and the cellular card.

# Step 20




• Remove the Wi-Fi and cellular cards.

# Step 21 — CMOS battery

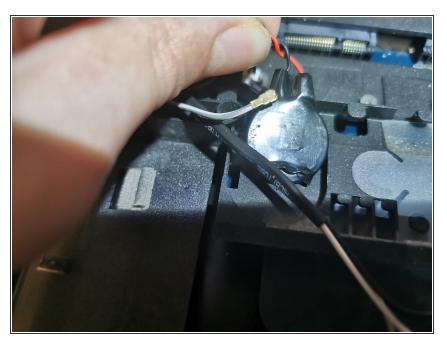

• Disconnect and remove the CMOS battery.

#### Step 22 — Heatsink

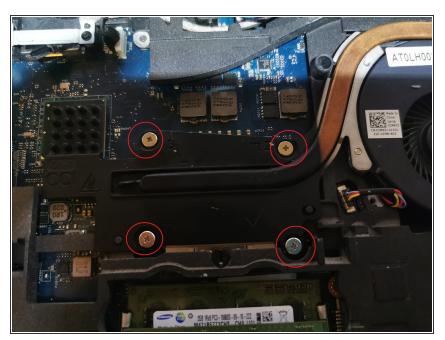

• Remove the 4 heatsink screws.



- Disconnect and remove the heatsink.
- Make sure you have thermal paste before doing this! You will need to reapply the CPU's thermal paste.

#### Step 24 — CPU



- Use a knife or flathead screwdriver to turn the CPU lock counterclockwise.
- Remember to turn the CPU lock clockwise when reassembling the laptop! If you don't, the system will not turn on.




• Remove the CPU

Be VERY CAREFUL to not bend ANY pins on the CPU.

#### Step 26 — Display Cable



• Unscrew and remove the bracket.

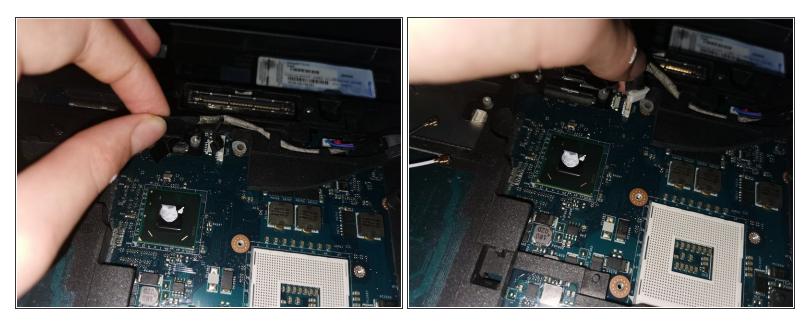

• Disconnect the display cables.

#### Step 28 — Motherboard




- Flip over and open the laptop.
- Remove the 2 motherboard cables.




• Remove the 5 motherboard screws.

# Step 30

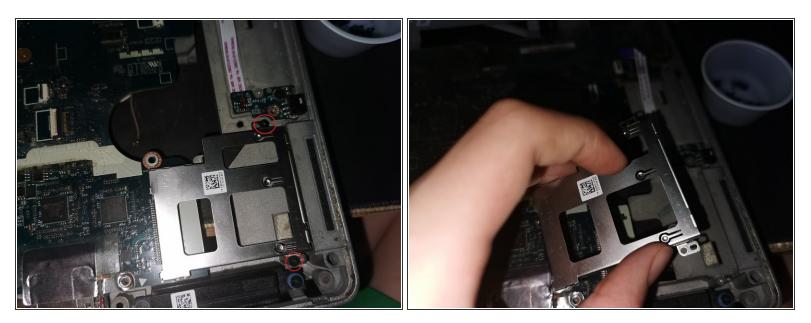

- Remove the 2 bracket screws.
- Remove the bracket.

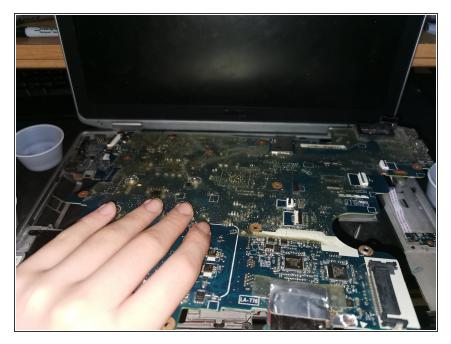

• Remove the motherboard.

To reassemble your device, follow these instructions in reverse order.