



# 2003-2007 Honda Accord Headlight Bulb Replacement

This guide will show you the process of removing and replacing a dead headlight bulb in a 2003-2007 Honda Accord.

Written By: Brooklyn Jarvis



## INTRODUCTION

The purpose of this guide is to show how to replace the standard headlight bulb of a **Honda Accord**. This guide is specifically for **Accords** manufactured in-between **2003 and 2007**. Newer or older models may be similar, but not exactly the same. Avoid touching the glass of the **headlight bulb** as oil and dirt on the glass can hamper its performance and lifespan.



### TOOLS:

- [Adjustable Wrench](#) (1)
- [WD-40](#) (1)



### PARTS:


- [9006 Halogen Headlight Bulb 2 Pack](#) (1)

## Step 1 — Headlight Bulb



- Enter your vehicle from the driver's side, and locate the hood lever (in the footwell) near the far left side of the vehicle.

## Step 2

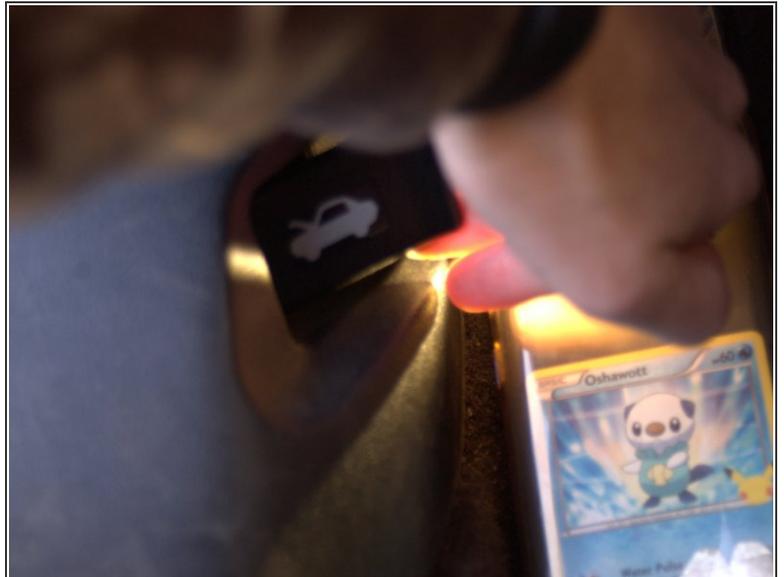


- Pull the hood lever towards you in order to pop the hood of your vehicle.

### Step 3



- Reach underneath the front middle of the hood to open the hood.

### Step 4

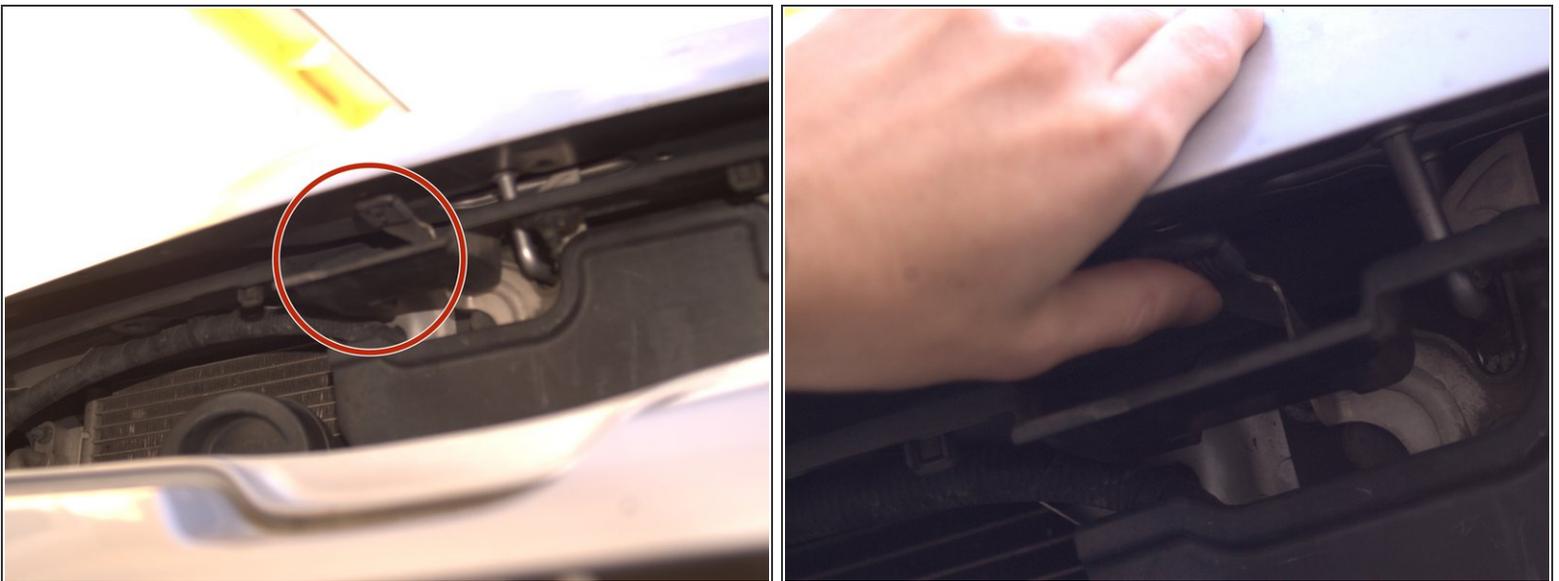

- Press upwards on the lever on the underside of the hood in order to fully open the hood.

## Step 5



- Once the hood is lifted, secure the hood by lifting up the hood prop.

## Step 6



- ⓘ I attempted to highlight the location of the plug for the bulb as best as possible, so you can at least know what area we are attempting to access.

- The bright white object is the plug.

## Step 7




- ⓘ In order to replace the bulb on the driver's side, we need to remove the battery.
- Use the adjustable wrench to loosen the two hex nuts located on either side.
- ☑ Don't fully unscrew the nuts holding the mount to the battery.

## Step 8



- Once you have removed the mount, carefully lift the battery out of the vehicle.
- ⚠ The car battery is much heavier than it looks and is very easy to underestimate. Proceed carefully.

## Step 9

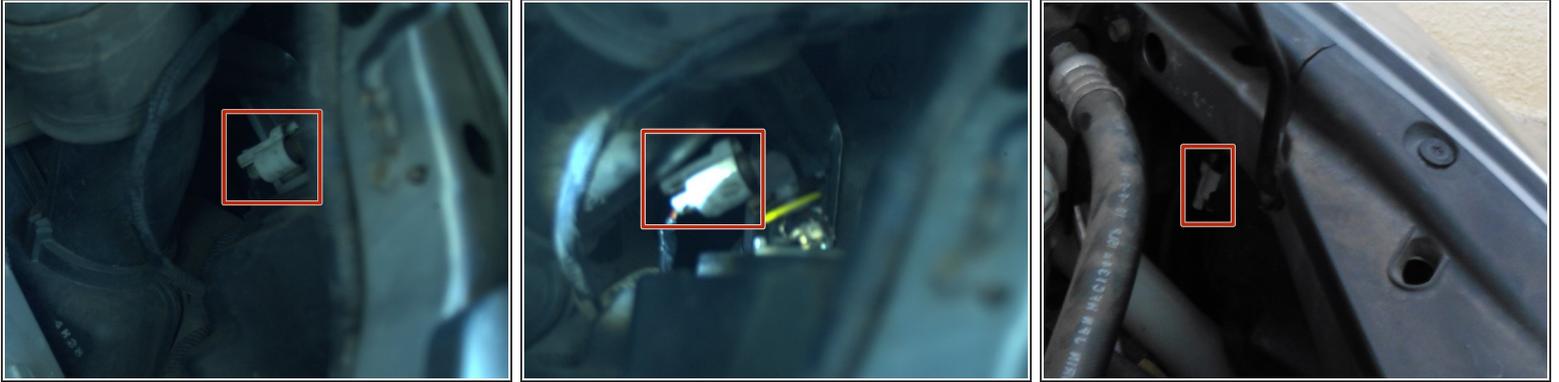


- Grab the plug and twist it counterclockwise to loosen it. It should pop out fairly easily.

⚠ If it does not come out easily, do not force it. The plastic will break.

- ⓘ Attempt to spray the **compressed air** in the area of the plug. Sprayed in the crevice where it turns, this should allow it to move easier.

## Step 10

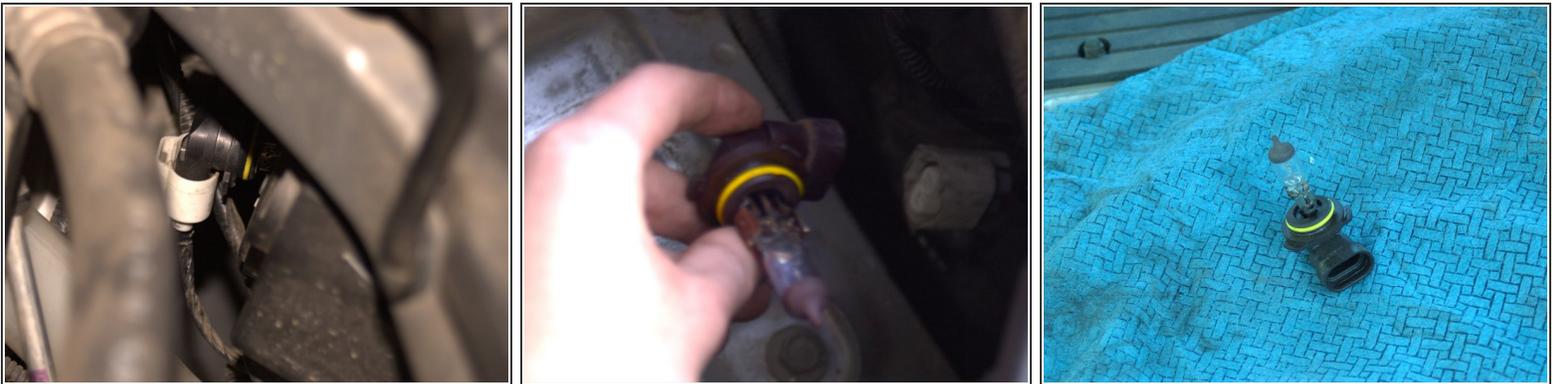

- Pull the bulb out from the vehicle.

- ⓘ Avoid touching the glass of the **bulb** as oil and dirt on the glass can hamper its performance and lifespan.

To reassemble your device, follow these instructions, starting from step 12, until step 5, in reverse order.