



2005 Honda Accord Headlight Replacement

This guide will show you how to replace the headlight bulb for a 2005 Honda Accord headlight.

Written By: Diego Avila



INTRODUCTION

Most people do not know how to change their headlight bulbs but it is a very easy thing to do. In this guide we will show the steps you need to take and some brief instructions.

 **TOOLS:**

- Gloves (1)

 **PARTS:**

- Headlight Bulb (1)

Step 1 — Headlight Bulb



- Pop open the hood of the vehicle.

Step 2



- Remove the headlight connector by depressing the clip and pulling it away from the vehicle.

Step 3



- Turn the headlight counter clockwise to release it from the headlight assembly.

Step 4



- Pull the headlight bulb out of the socket.

Step 5



- Inspect your old headlight bulb and compare with new one to ensure it is the same.

Step 6



- Align notches and insert the headlight bulb into the socket.

Step 7



- Turn it clockwise until the headlight clips in.

Step 8



- Reconnect the headlight pigtail.
- ⓘ You will hear a click when the connector is fully seated.

Step 9



- Turn on the vehicle to make sure the headlight lights up.

To reassemble your device, follow these instructions in reverse order.