



iPhone Pentalobe screws Replacement

Use this guide to remove or replace the two...

Written By: Tobias Isakeit



INTRODUCTION


Use this guide to remove or replace the two screws securing the iPhone display panel. These are the only screws on the exterior of the iPhone. They use a five-point design that is unique to Apple, requiring a specialty P2 pentalobe driver for removal.

If you need additional iPhone screws you can get those [in our store](#).


TOOLS:

[P2 Pentalobe Screwdriver iPhone](#) (1)

Step 1 — Remove the two Pentalobe screws

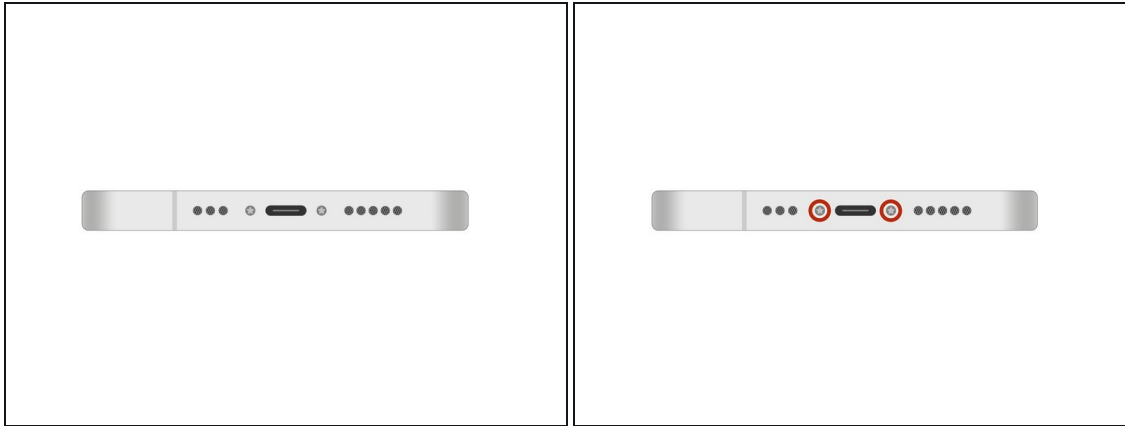

 **Caution:** Before you begin, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
 - Remove the two 6.75 mm long pentalobe P2 screws at the bottom edge of the iPhone.
 -  Opening the iPhone's display will compromise its waterproof seals. Have replacement seals ready before you proceed past this step, or take care to avoid liquid exposure if you reassemble your iPhone without replacing the seals.
-

To reassemble your device, follow these instructions in reverse order.