



India Mark II Riser Main Coupling Replacement

Prerequisite guide to install a coupling to the riser main before removing it from the well.

Written By: Andrew Optimus Goldheart



INTRODUCTION

Prereq only.

TOOLS:

- [Pipe Wrench](#) (1)
 - [T-Handle](#) (1)
-

Step 1 — Riser Main Coupling



- Place a coupling over the pump rod, on top of the rod vise.

Step 2



- Reattach the T-handle to the top of the pump rod.

Step 3



- Loosen and remove the rod vise from the pump rod.
- ⓘ The coupling will drop down onto the riser main.

Step 4



- Screw the coupling onto the end of the riser main.
- Use a pipe wrench to tighten the coupling onto the riser main.

To reassemble your device, follow these instructions in reverse order.