



# Samsung Galaxy Note Display Assembly Replacement

Replace the display assembly on your Samsung Galaxy Note.

Written By: Sam Goldheart



# INTRODUCTION

Use this guide to replace the front panel display assembly in your Samsung Galaxy Note.



## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)



## PARTS:

- [Galaxy Note \(AT&T\) Screen](#) (1)

## Step 1 — Stylus



- Grasp the cap of the stylus and remove it from its slot in the midframe.

## Step 2 — Rear Case



- Pry with a plastic opening tool, or your fingernail, in the divot to the right of the rear-facing camera, near the volume rocker.

### Step 3



- Lift and remove the rear case from the phone.

### Step 4 — Battery



- Insert your finger in the notch of the battery compartment.
- Press the battery toward the rear facing camera while pulling outward.




## Step 5 — MicroSD Card



- Use the flat end of a spudger, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
  - After the click, release the card and it will pop out of its slot.
- ☑ For reassembly, push the microSD card into the slot until it clicks in place.

## Step 6

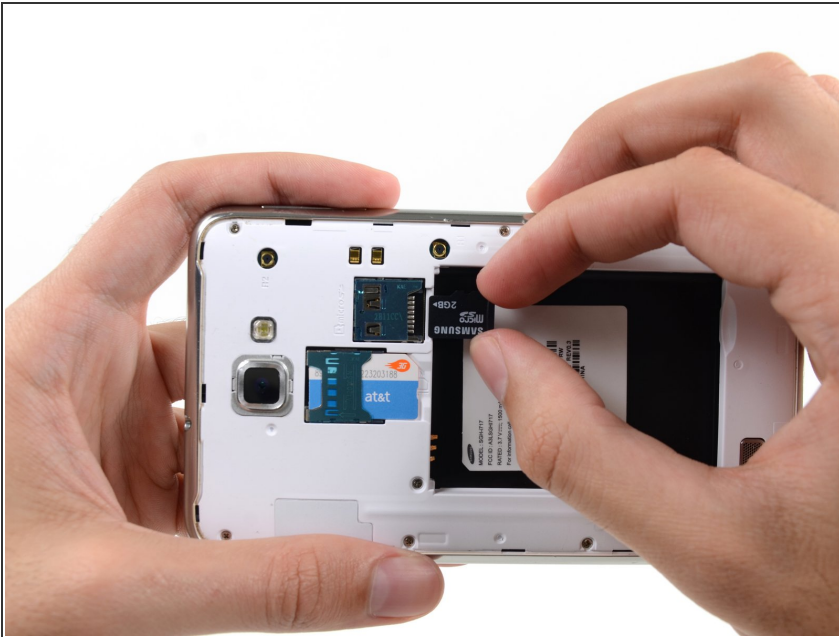

- Remove the microSD card from its slot in the midframe.

## Step 7 — SIM Card



- Use a plastic opening tool, or your fingernail, to push the SIM card out of its compartment.

## Step 8



- Slide the SIM card out the rest of the way with your thumb and remove it from the device.

## Step 9 — Midframe



- Remove the nine 3.4 mm Phillips #00 screws securing the midframe to the display assembly.

## Step 10



- Insert your plastic opening tool to the left of the power button between the midframe and the front panel assembly and pry.



## Step 11



- Slide the plastic opening tool down the seam.


## Step 12



- Insert your plastic opening tool to the left of the headphone jack between the midframe and the display assembly.
- Slide the opening tool along the top edge of the phone.
- Continue to run the plastic opening tool around the perimeter of the phone until the midframe is separated.





## Step 13

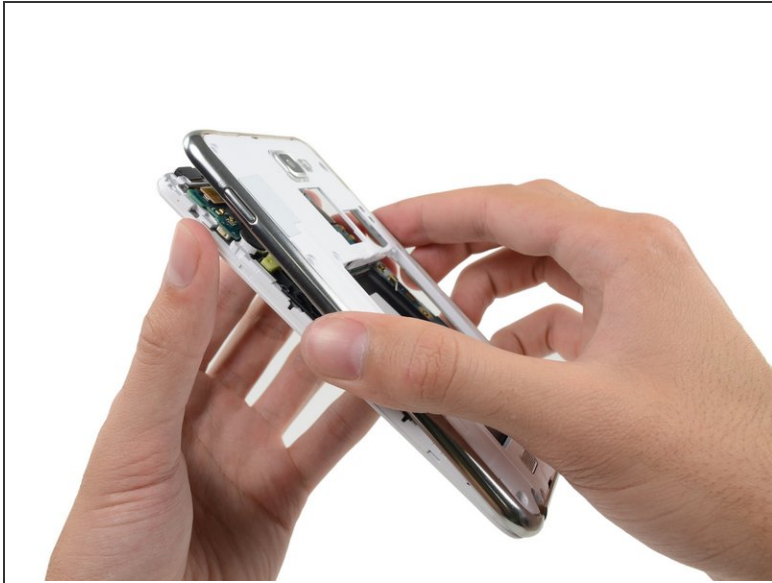

- Remove the midframe from the display assembly.

## Step 14 — Motherboard Assembly

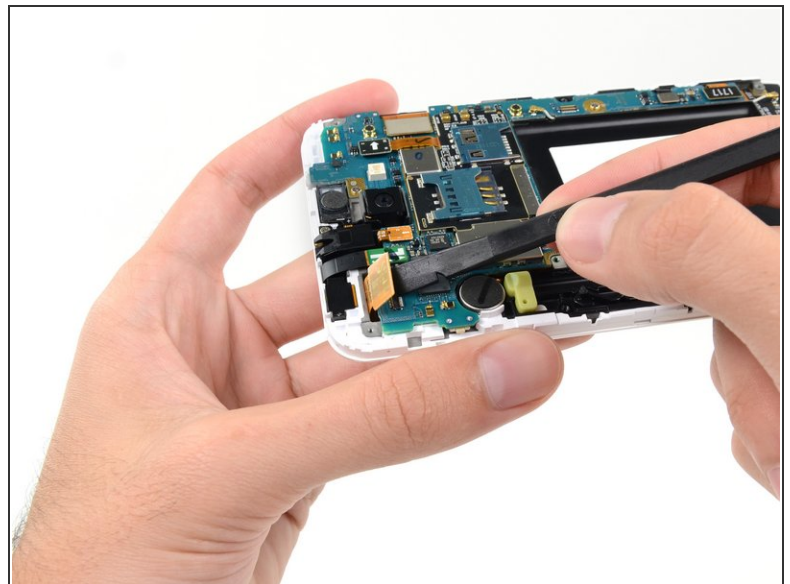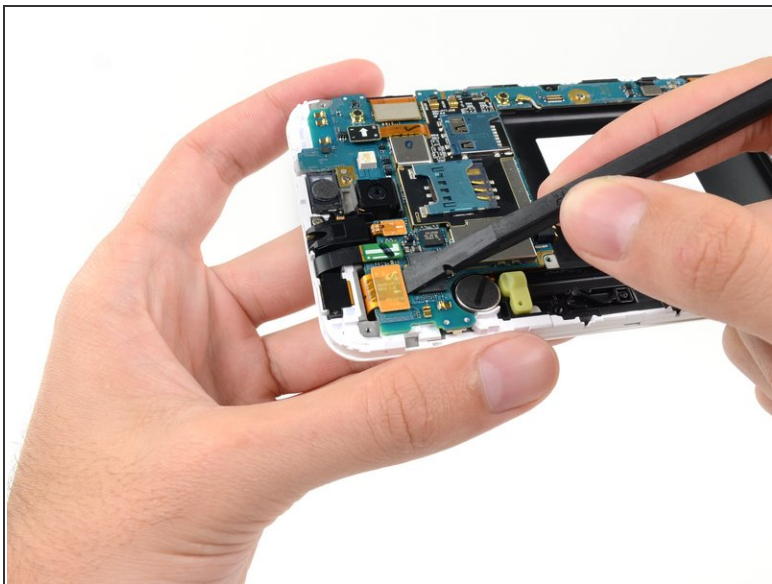

- Use the flat end of a spudger to carefully disconnect the display cable connector.

## Step 15



- Use a spudger to disconnect the front-facing camera assembly cable connector.
- Disconnect the headphone jack/earpiece speaker assembly cable connector.
- Disconnect the digitizer cable connector.

## Step 16





- Disconnect the soft button cable connector with the flat end of a spudger.
- Use a spudger to disconnect the USB board cable connector.
- Disconnect the antenna cable connector.

## Step 17



- Remove the two 3.4 mm Phillips #00 screws securing the motherboard to the display assembly.


## Step 18

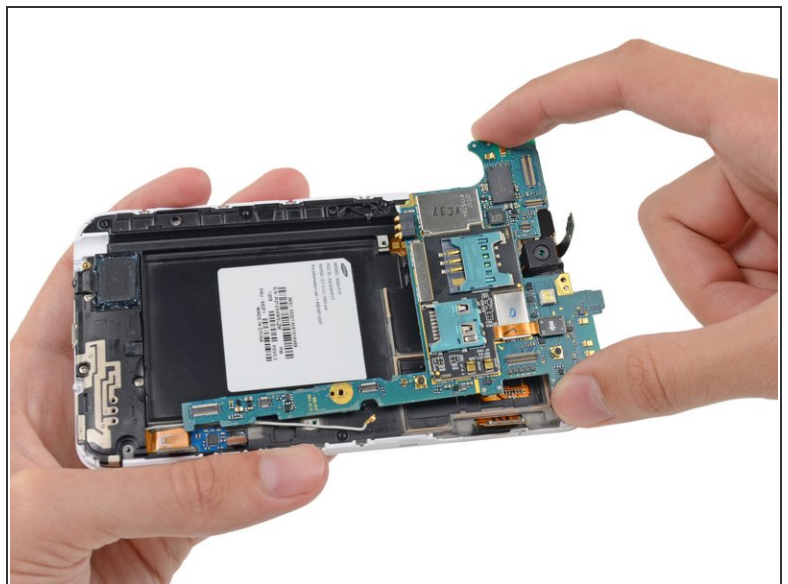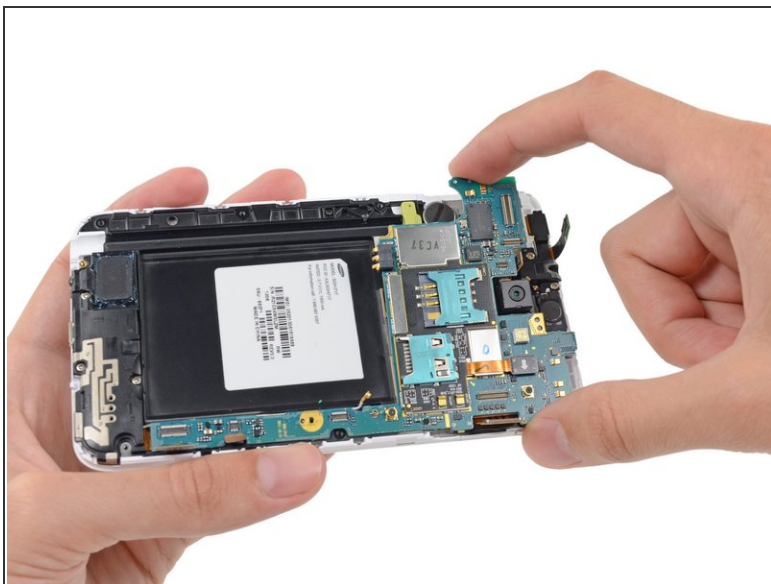

- Remove the motherboard assembly from the display assembly.



## Step 19 — Display Assembly

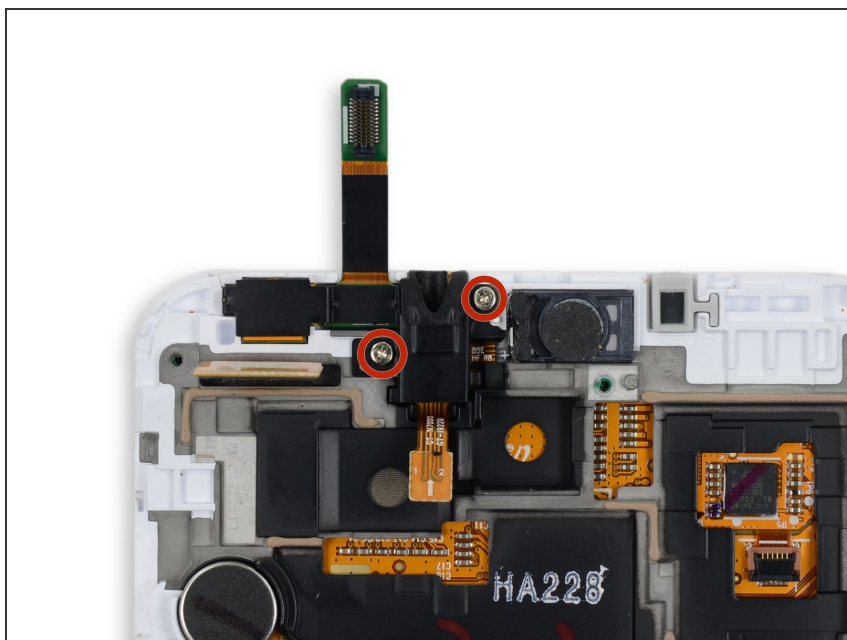

- Remove the two 3 mm Phillips #00 screws securing the upper display assembly bracket.


## Step 20



- Use a pair of tweezers, or your fingers, to remove the upper display assembly bracket.





## Step 21

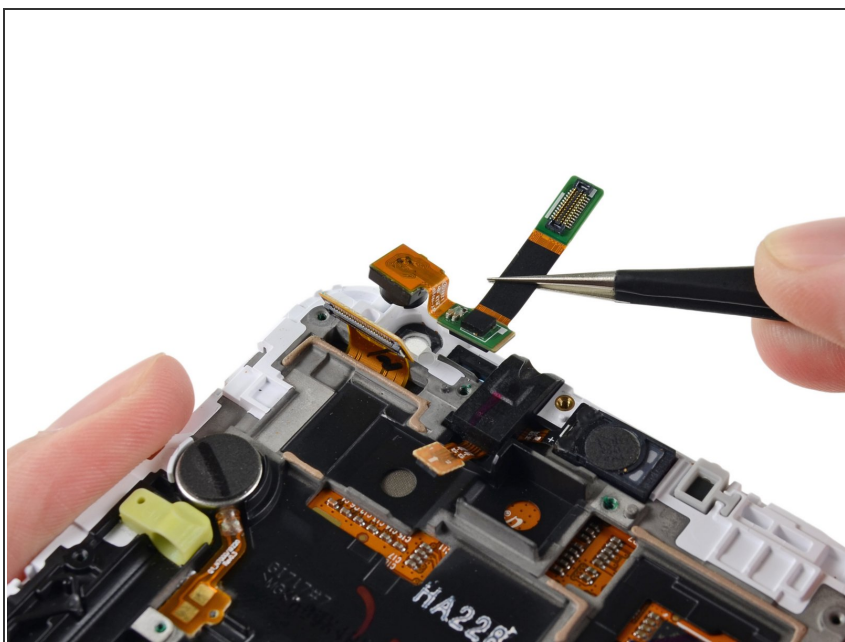

- Using tweezers, or your fingers, remove the front-facing camera assembly.

## Step 22

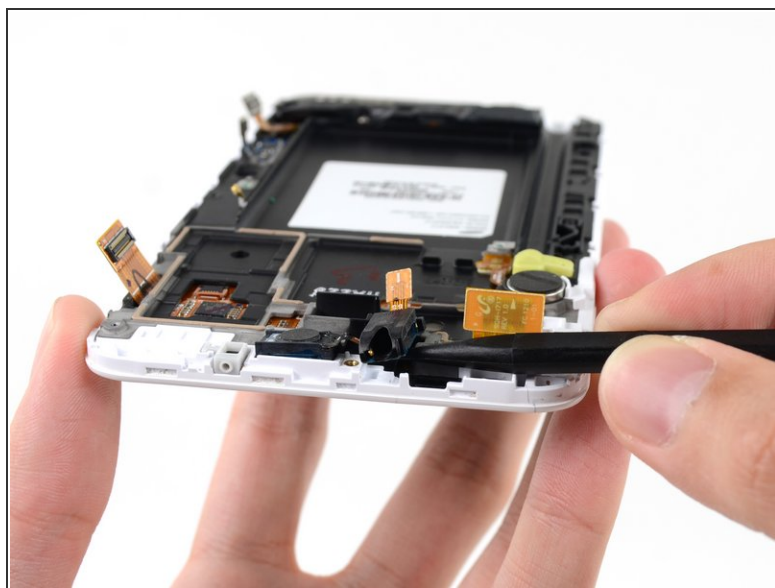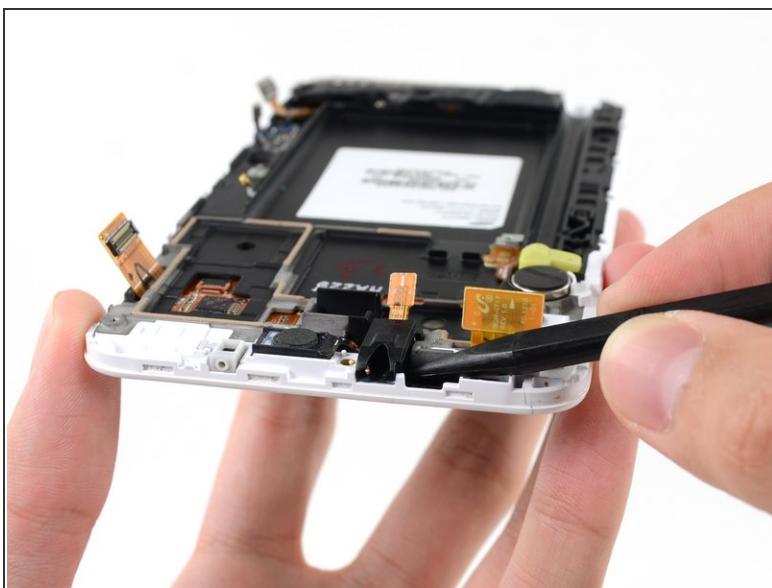


- Use the tip of a spudger to pry the headphone jack/earpiece speaker assembly out of its recess in the display assembly.

## Step 23



- Use tweezers, or your fingers, to remove the headphone jack/earpiece speaker assembly.

## Step 24

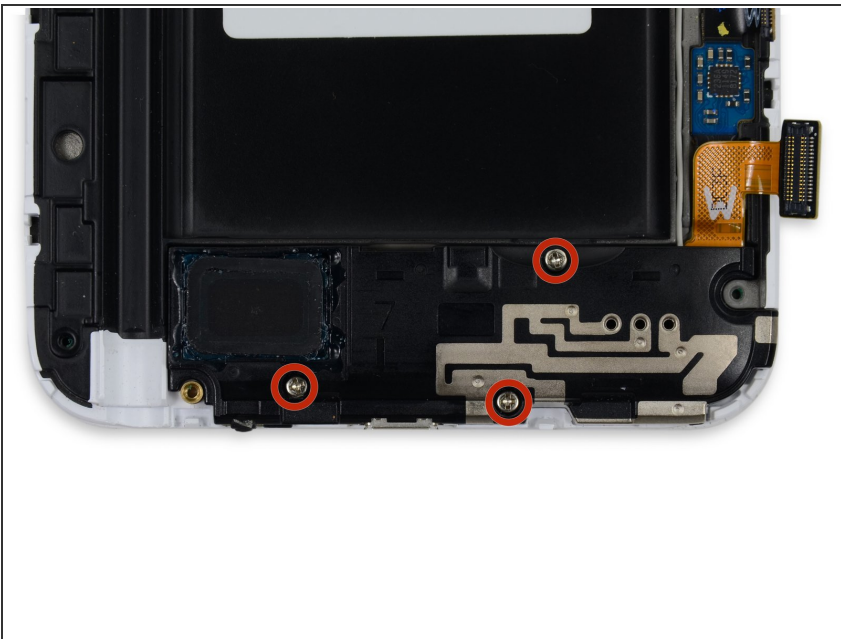

- Remove the three 3 mm Phillips #00 screws securing the speaker enclosure to the front panel assembly.

## Step 25



- Lift the speaker enclosure from the display assembly.

## Step 26



- Use the tip of a spudger to disconnect the antenna cable connector from the USB board.
- Remove the antenna cable.




## Step 27



- Push the flat end of a spudger under the USB board to separate it from the display assembly.

⚠ Insert the spudger at a shallow angle to avoid bending or damaging the USB board.

## Step 28

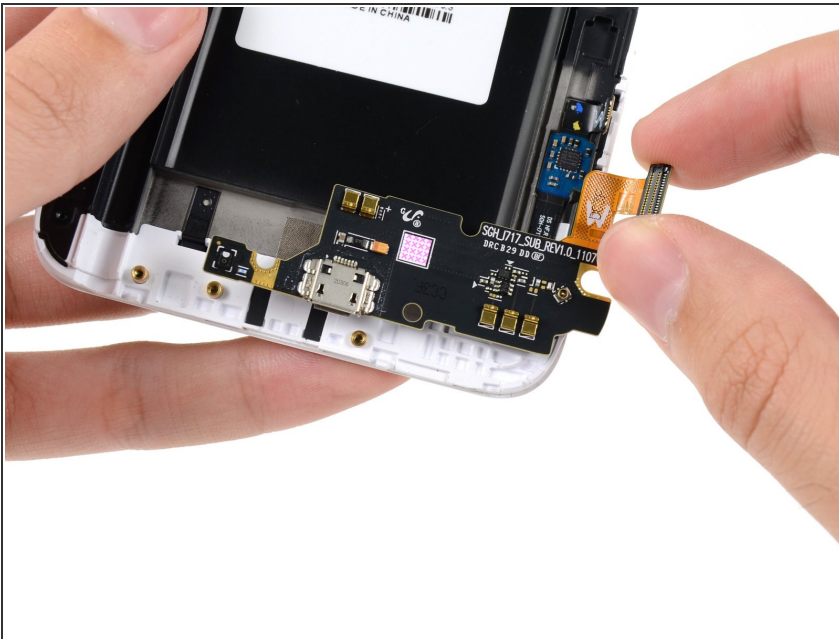

- Remove the USB board.



## Step 29



- Insert the tip of a spudger under the vibrator connector cable near the contacts then slide toward the vibrator itself.

## Step 30



- Insert the flat end of a spudger under the vibrator connector cable, and pry it up from the adhesive.

## Step 31



- Remove the vibrator from the display assembly.

To reassemble your device, follow these instructions in reverse order.