


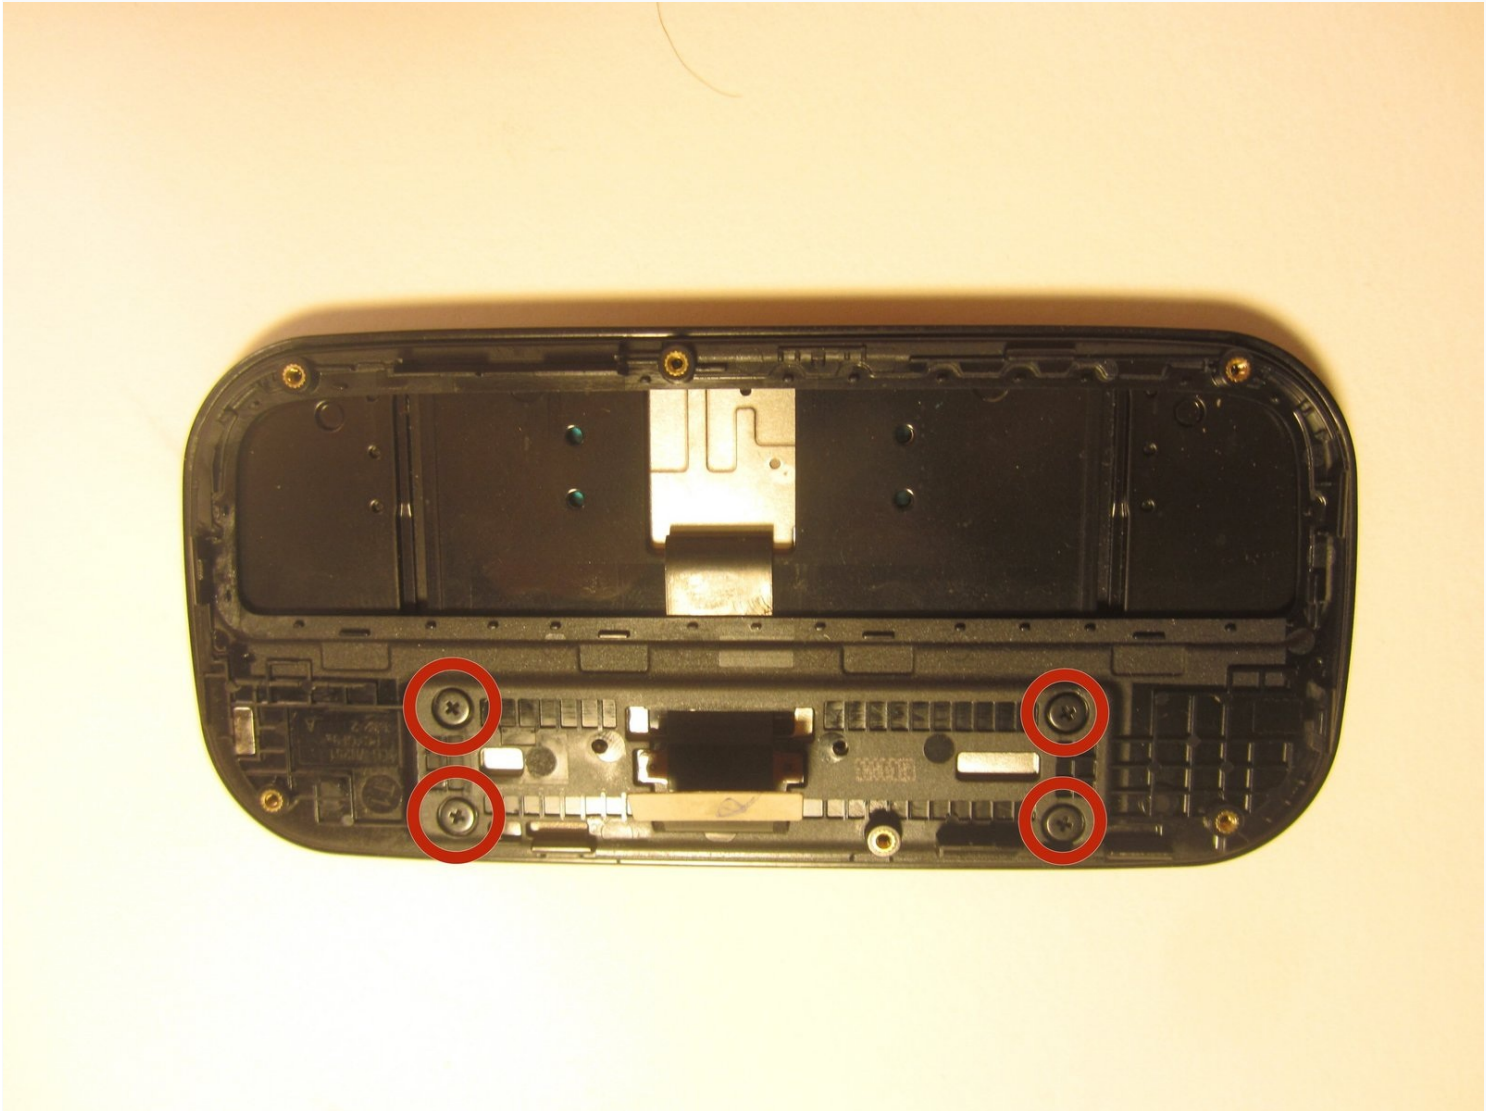

LG Cosmos 2 Option Buttons Replacement

Most of the LG Cosmos 2 must be disassembled...

Written By: Nick White



INTRODUCTION

Most of the LG Cosmos 2 must be disassembled prior to replacing the buttons. Follow these steps to complete this task.

TOOLS:


[iFixit Opening Tool](#) (1)

[64 Bit Driver Kit](#) (1)

[Tweezers](#) (1)


[Spudger](#) (1)

Step 1 — Battery

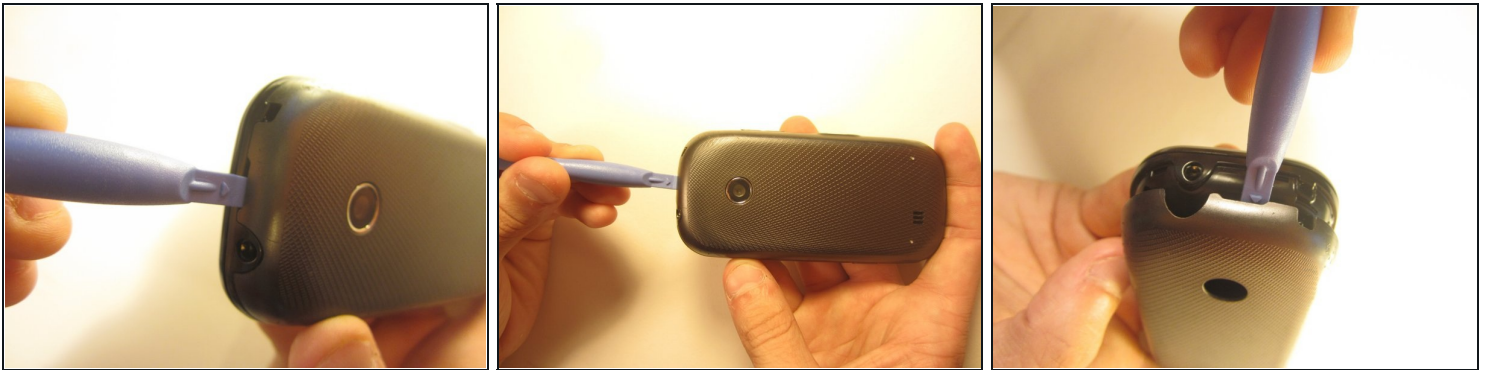

- Insert the plastic opener into the slot at the top of the device.
- Apply gentle pressure with the plastic tool to pop the back case off.

Step 2

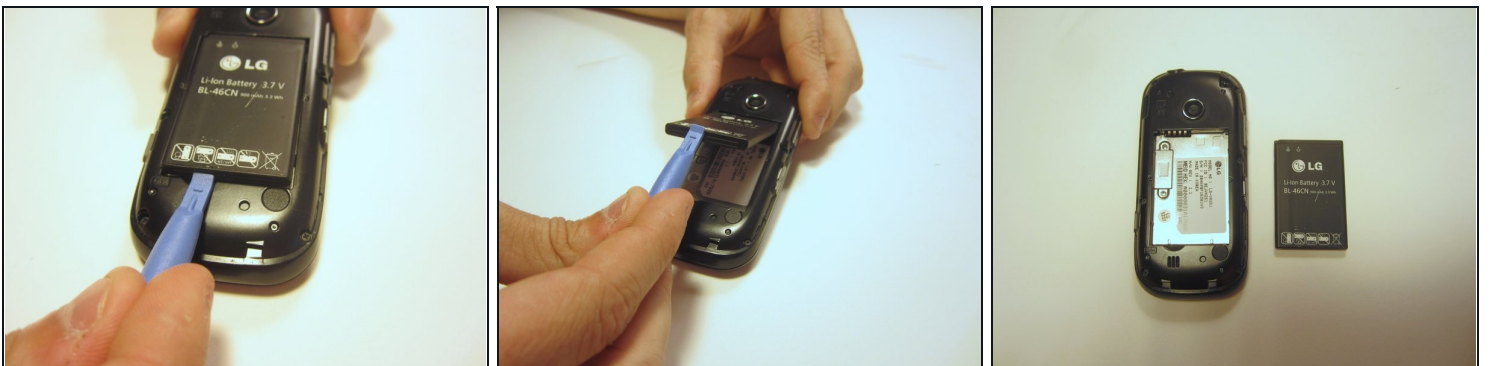

- Use the plastic opener to lift, and remove, the device battery.

Step 3 — Rear Case



- Use a screwdriver and corresponding bit to remove the six 2mm screws that are located along the edge of the rear case. Set the screws aside.

Step 4




- Use the plastic opener to pry the rear case loose.
 - ⓘ This can be difficult. You will need to pry around the entire edge of the rear case, not just in one place.

Step 5 — Motherboard




- Use a screwdriver and corresponding bit to remove the two 3mm screws that attach the motherboard to the front case. Set the screws aside

Step 6

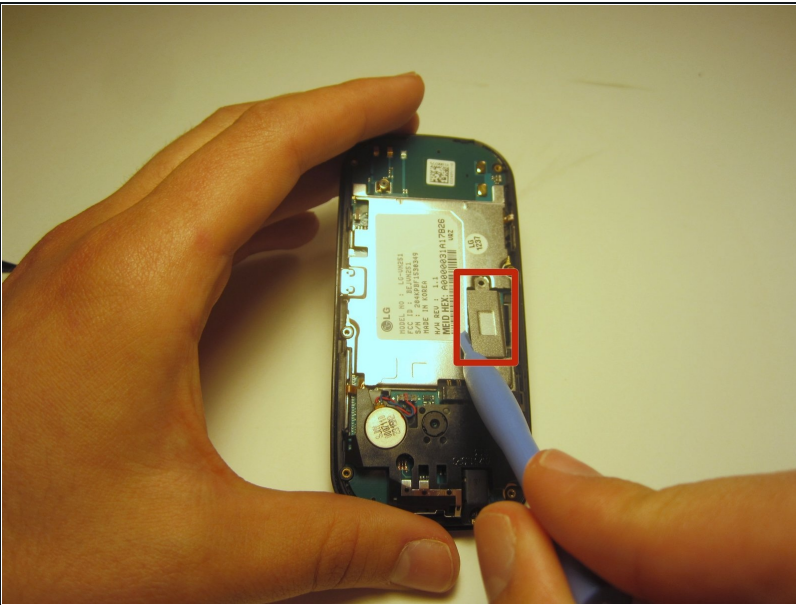



- Rotate the phone 180 degrees and use the plastic opener to lift the metal piece that covers the ribbon cable.

Step 7

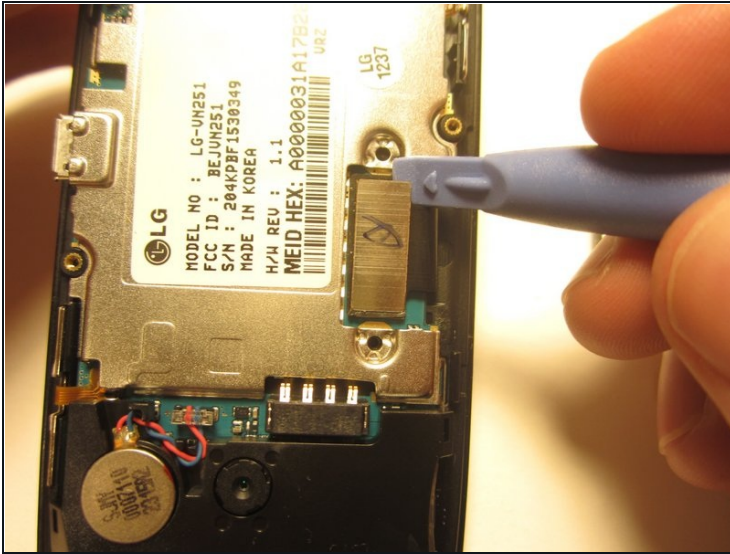


- Use the plastic opener to disconnect the ribbon cable.

Step 8

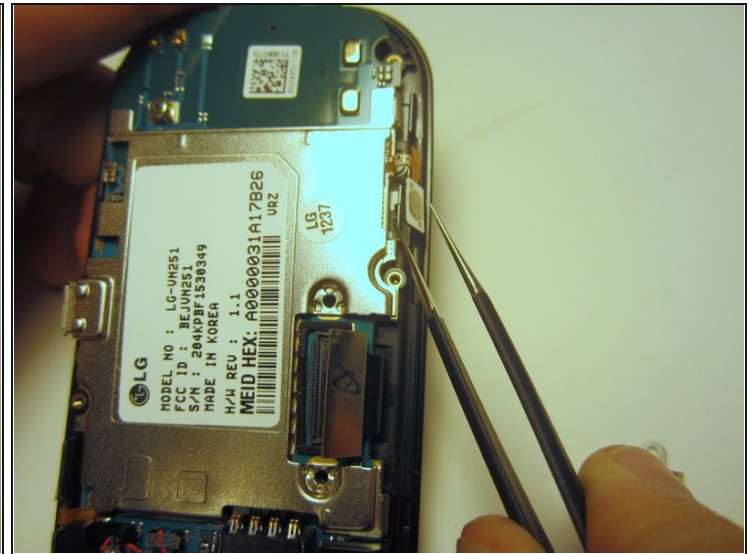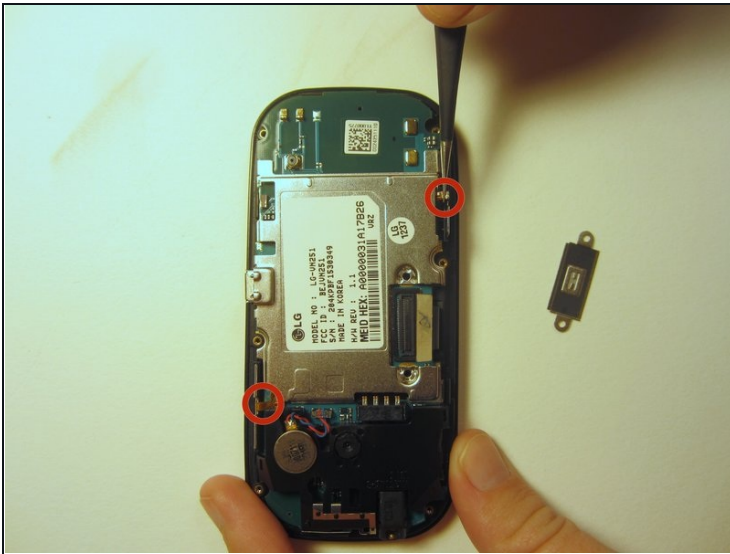

- Use [tweezers](#) to disconnect the two cables that attach the motherboard to the case.
⚠ Note: Pull on the cables gently to prevent damage for future use.

Step 9

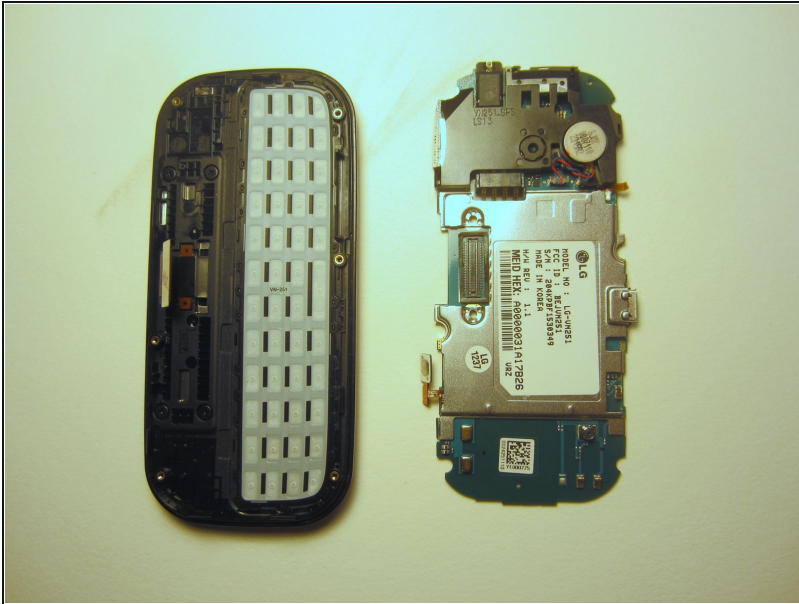


- Remove the motherboard from the front case.

Step 10 — Option Buttons




- Use a screwdriver and corresponding bit to remove the four 1mm screws. Set the screws aside.

Step 11

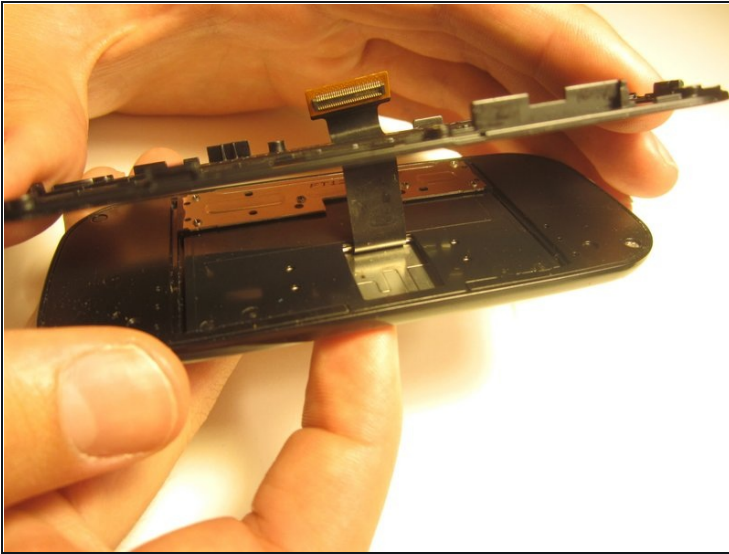



- Pull the ribbon cable through the slit in the keyboard case to separate it from the sliding mechanism.

Step 12

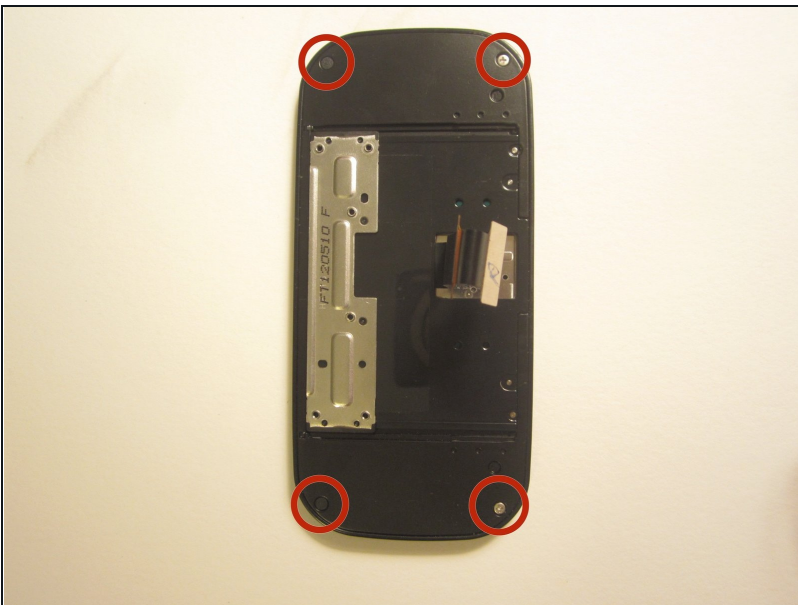


- Use a screwdriver and corresponding bit to remove the four 3mm screws. Set the screws aside.
- ⓘ Note: Two of the screws may be hidden underneath a black rubber film. Pull off this film if necessary.

Step 13

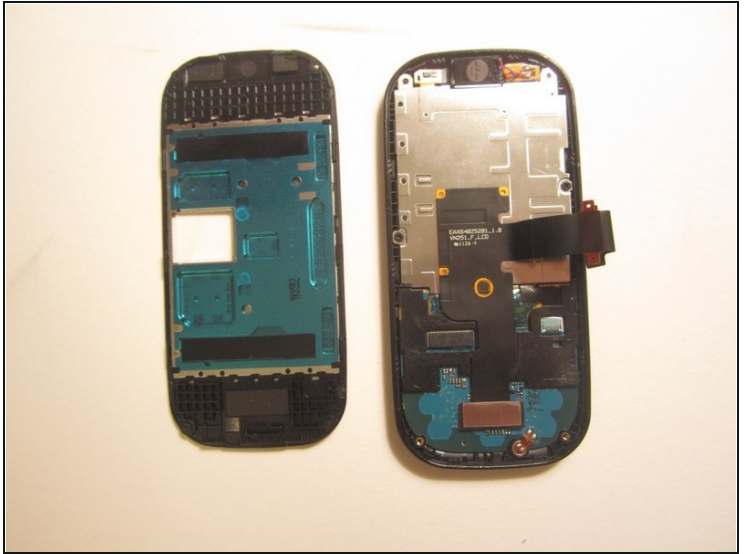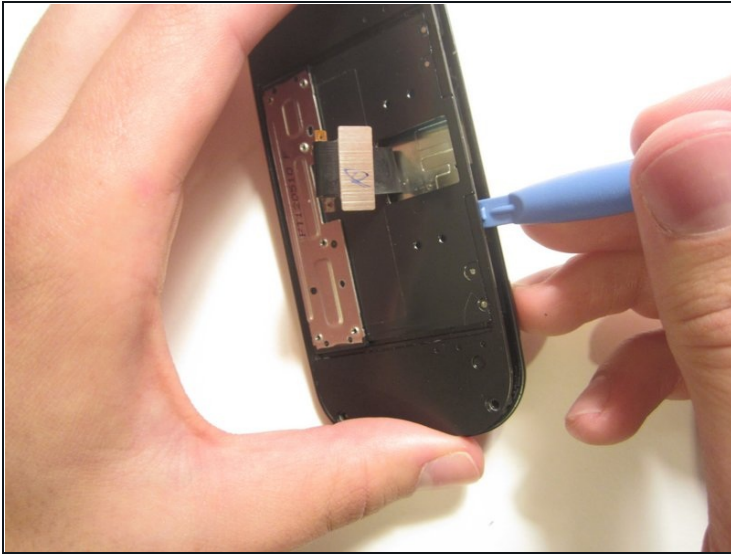


- Use the plastic opener to pry open the front of the phone.
- Slip the ribbon cable through the slit to fully separate the two pieces.

Step 14

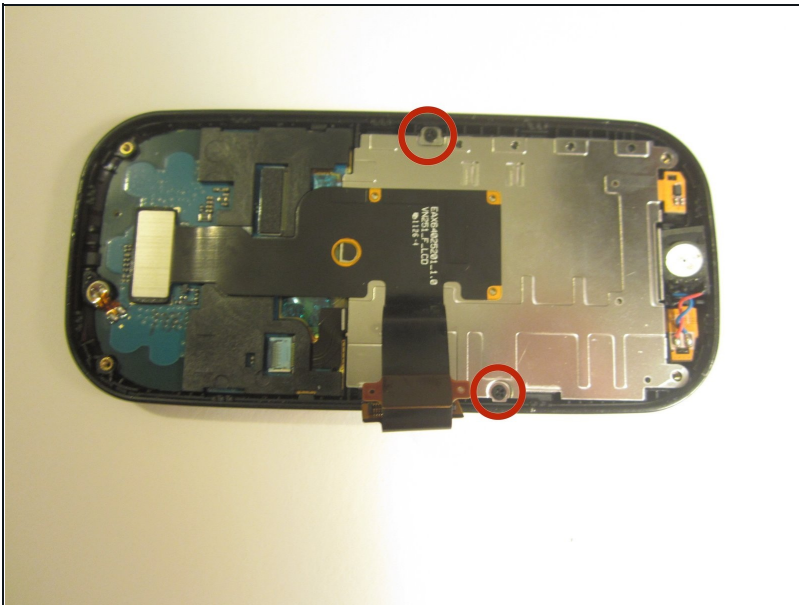



- Use a screwdriver and corresponding bit to remove the two 1mm screws. Set the screws aside.

Step 15

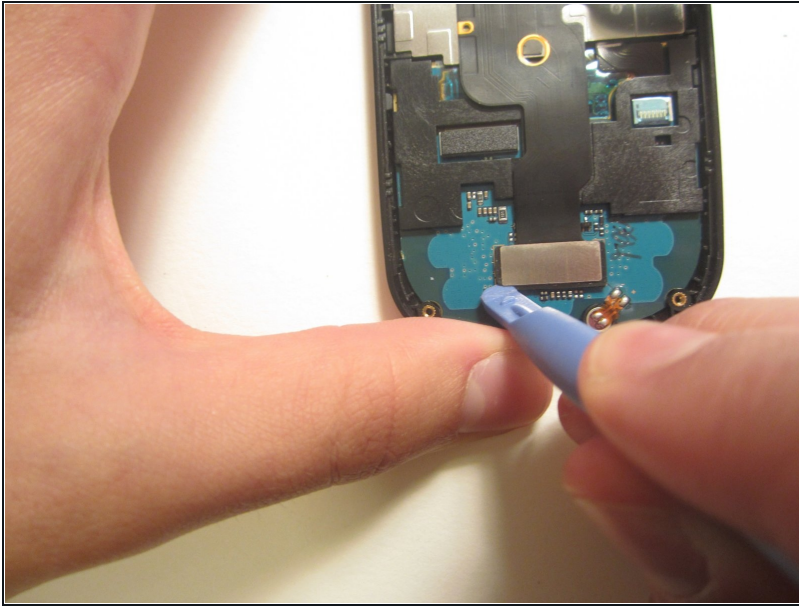


- Detach the ribbon cable with the plastic opener.

Step 16

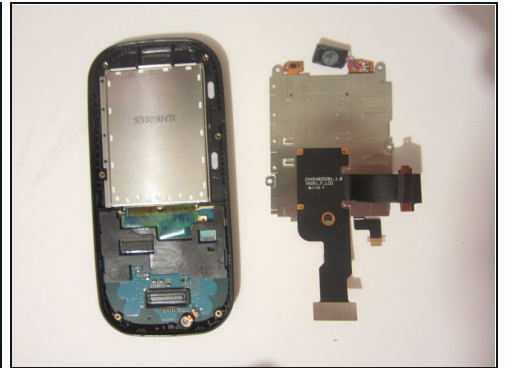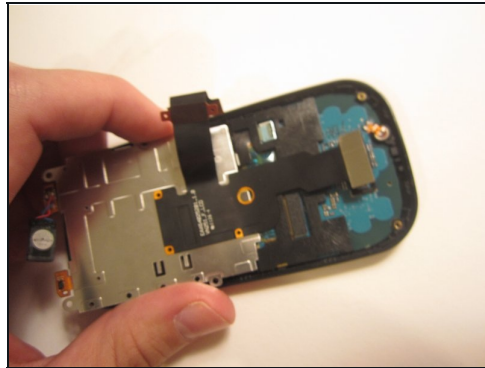

- Use the spudger to pry the metal piece loose.
- Remove the metal piece along with the two ribbon cables.

Step 17

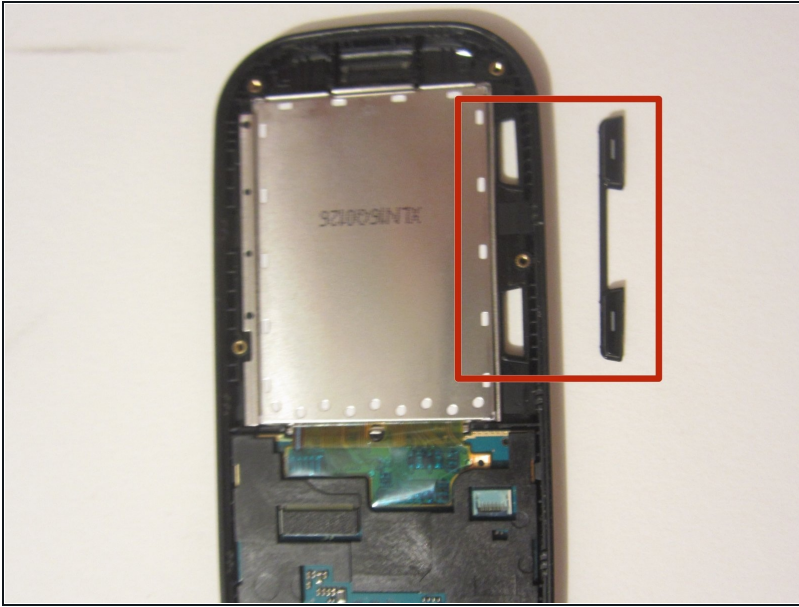

- Flip the front of the phone over and the old option buttons will fall out.
- Insert new option buttons.

To reassemble your device, follow these instructions in reverse order.