



Sony Cyber-Shot DSC-W330 Battery Replacement

Instructions on how to properly replace a battery pack.

Written By: Hunter Stewart



Step 1 — Battery



- Hold the camera with the bottom edge facing you and find the battery cover on the bottom left of the camera.
- Use the black latch to unhook the cover by sliding it to the "Open" position.
- The battery cover should easily open by gently lifting it away from the camera.
- The battery compartment is now open and the battery can be replaced.

(i) *NOTE: Battery not shown in guide.*

To reassemble your device, follow these instructions in reverse order.