



# LG Encore GT550 Earphone Replacement

This guide breaks down the steps necessary to...

Written By: Lindsey Harding



---

## INTRODUCTION

This guide breaks down the steps necessary to replace the earphone on the LG Encore GT550. The earphone on the LG Encore GT550 is primarily used for phone calls. The user makes use of this little speaker during a phone call when the device is held to the ear of the user. Many different factors may have caused the speaker to fail.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tool](#) (1)
-

## Step 1 — Earphone



- Slide off the back cover of the phone.

## Step 2



- Remove the battery by gently lifting it up from the bottom.

### Step 3




- Use a Phillips #0 screwdriver to remove the six screws around the edge of the device.

### Step 4




- Using a prying tool, separate the frame of the phone.

## Step 5

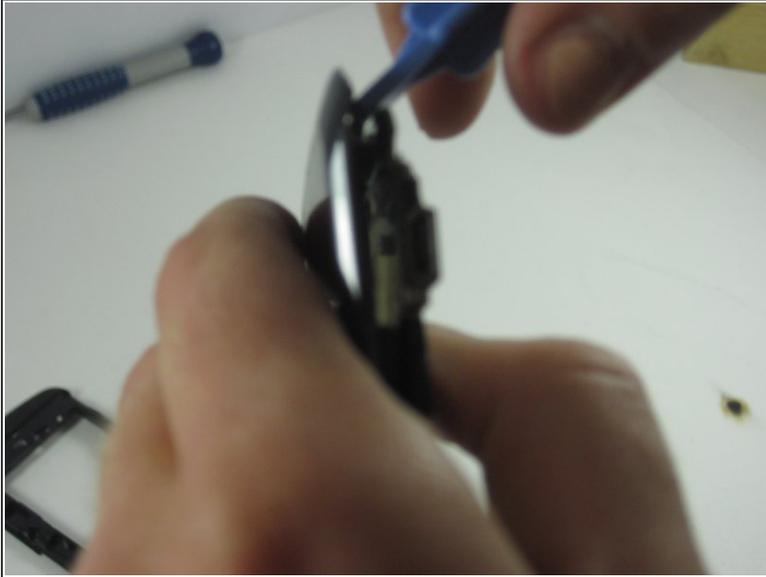

- Using a prying tool, separate the screen from the motherboard.

## Step 6

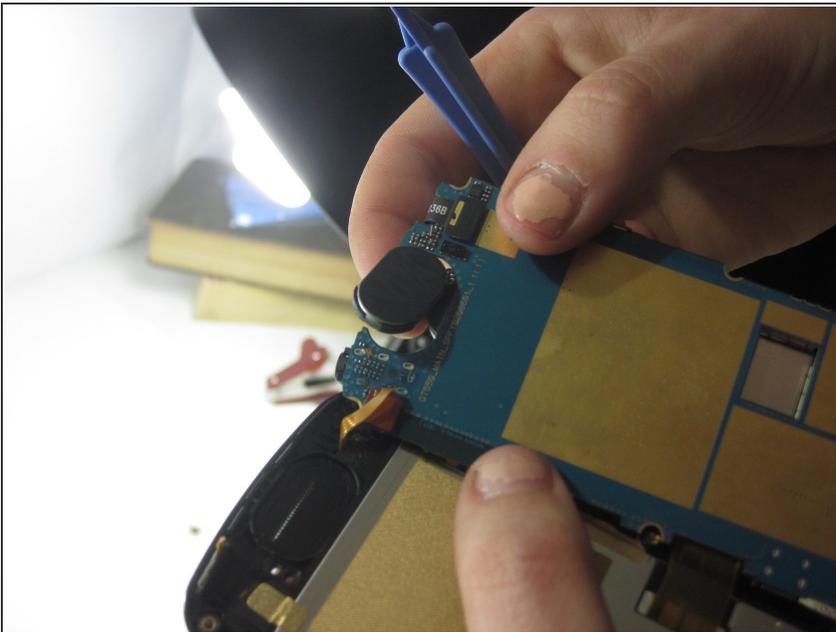

- Remove the speakerphone and replace it.

To reassemble your device, follow these instructions in reverse order.