



# Nikon D70 Bottom Cover Replacement

Written By: Andrew Bookholt



---

## INTRODUCTION

Remove the bottom cover to access most components inside the D70.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Bottom Cover



- Remove the following eight screws securing the bottom cover to the D70:
  - Six 5.8 mm Phillips screws
  - One 10.7 mm Phillips screws
  - One 8.2 mm Phillips screws

## Step 2



- Carefully pull the bottom cover to separate it from the body of the D70.
- Remove the bottom cover from the D70.

To reassemble your device, follow these instructions in reverse order.