




Mr. Coffee TF6 Dust Cover Replacement

This guide provides step by step instructions on how to replace the dust cover on the Mr. Coffee TF6.

Written By: Jordan

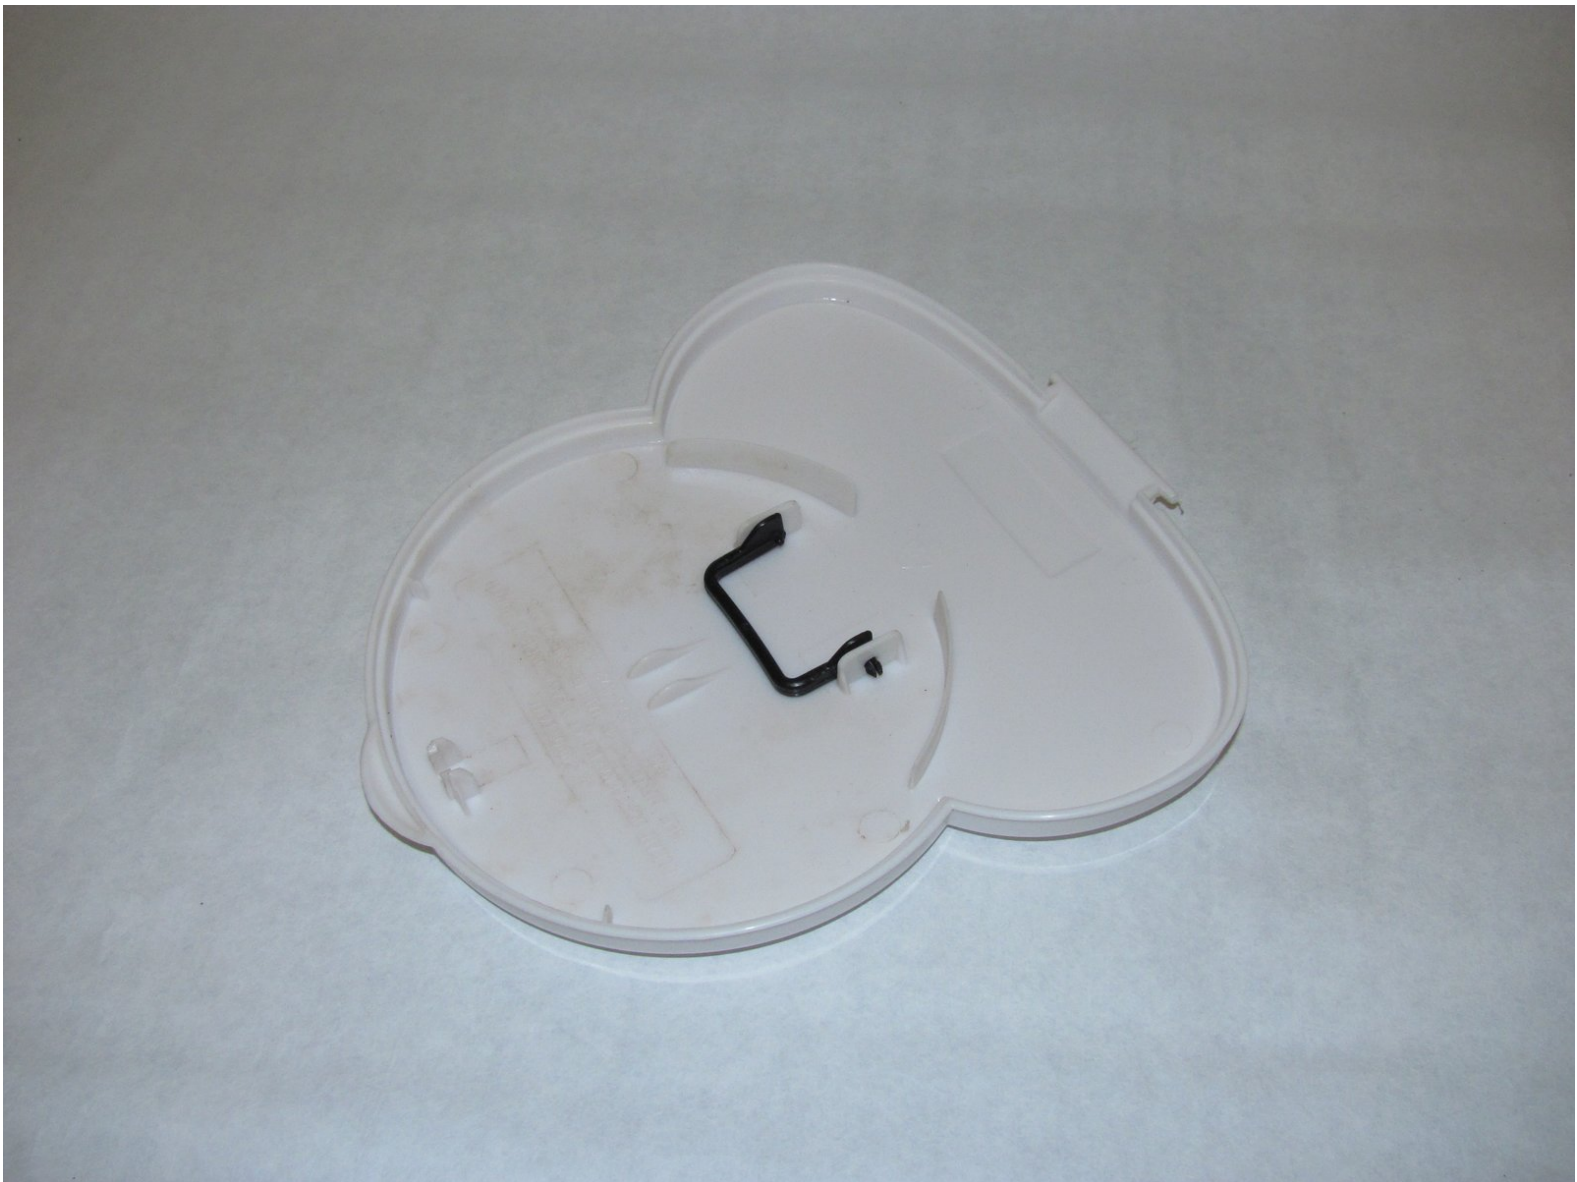

INTRODUCTION

Replacement of the TF6's dust cover is necessary when it is cracked or broken. Replacement dust covers can be obtained from any Mr. Coffee TF series coffeemaker or online at Mr. Coffee's website.



PARTS:

- [Dust Cover \(Mr. Coffee TF6\)](#) (1)
-

Step 1 — Dust Cover



- Facing the front of the TF6, gently lift the dust cover along its hinge until it reaches its designed stopping point.

Step 2



- Orient the retaining bracket upwards (away from the main body of unit).
- ⚠ Do not push the retaining bracket beyond its designed range of motion. It may snap if too much force is applied outside its limit.

Step 3



- With the retaining clip in its released position, pull the spout down towards the filter basket.

Step 4



- Carefully detach the dust cover by disengaging the locking pins, starting at one side.

⚠ Extra force may be required to disengage the dust cover's locking pins. Refrain from applying excessive upward force on the dust cover, as doing so may cause the pins to snap under pressure.

Follow these steps in reverse order with a new Dust Cover.