


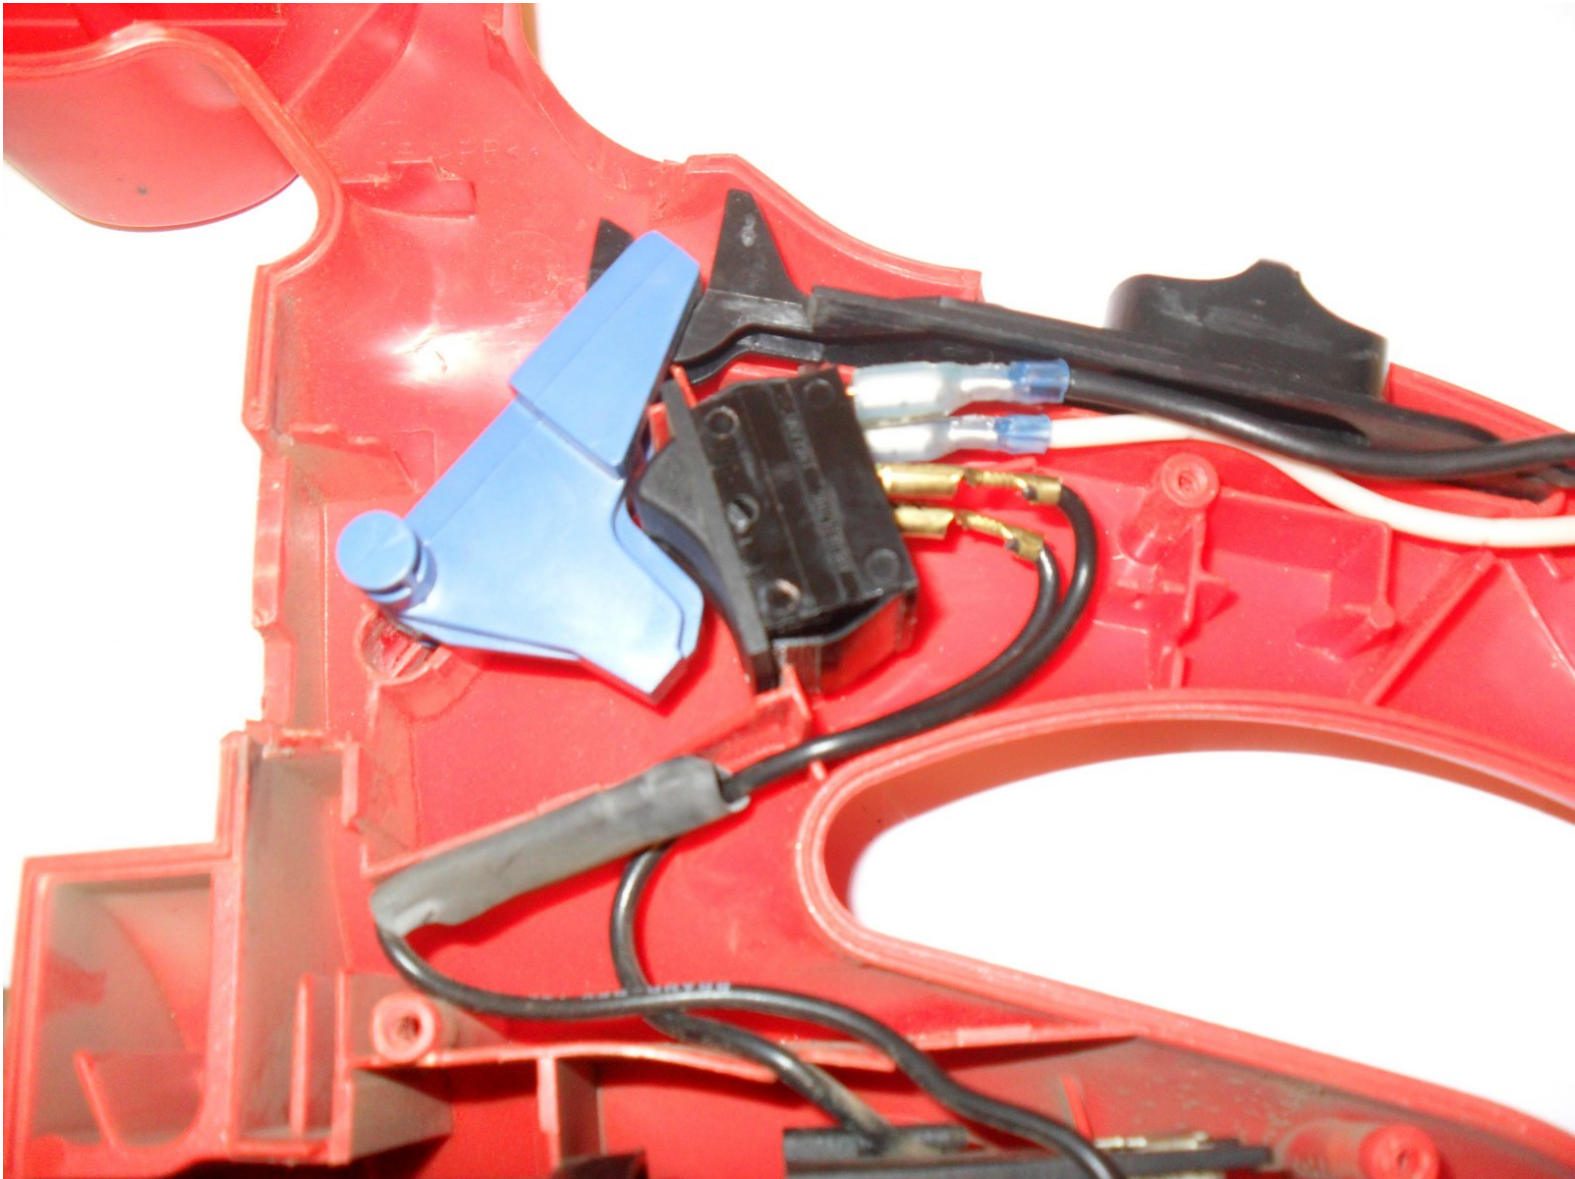

# Black and Decker BV2500 Type 4 Switch Replacement

Replacing the switch on the Black and Decker BV2500 Type 4.

Written By: Jon Gori



---

## INTRODUCTION


This guide will take you through the process of replacing the switch on the Black and Decker BV2500 Type 4.



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Clamshell (Black Outer Casing)

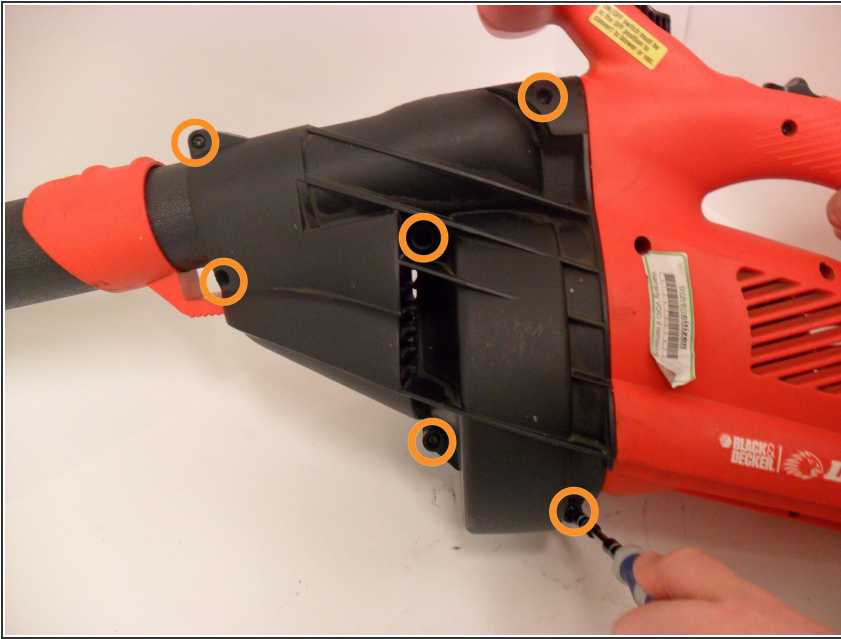

- Using a Phillips #2 screwdriver, remove the six 20 mm screws in the black plastic casing (clamshell).

## Step 2



- Using your hands, remove the blower tube and clamshell.
  - To remove the clamshell, pull apart starting from the bottom until it is pulled out from the notches. Then slide it out away from the device.






## Step 3 — Switch




- Locate and unscrew the ten 20 mm Phillips #2 screws in the orange casing with a Phillips #2 screwdriver.
- Using your hands, lift off side of the orange casing with the screws facing you.

## Step 4

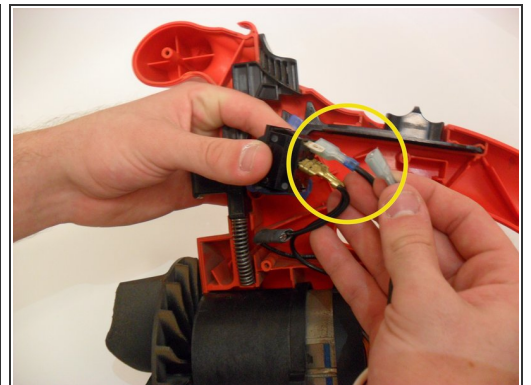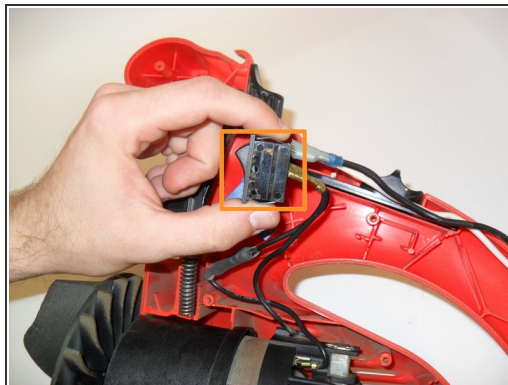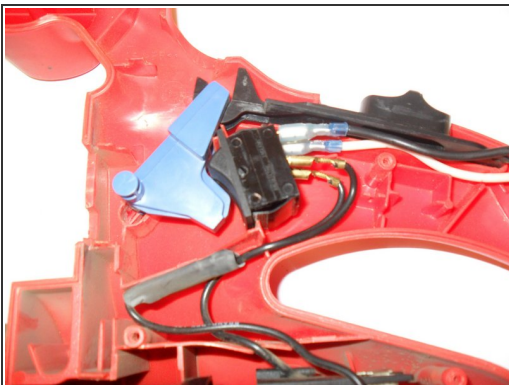

- Locate the switch on the handle of the blower.
- Carefully remove the four wires that are attached to the switch.
  - Use your hand to push in the sides of the switch and slide out the wires.

## Step 5

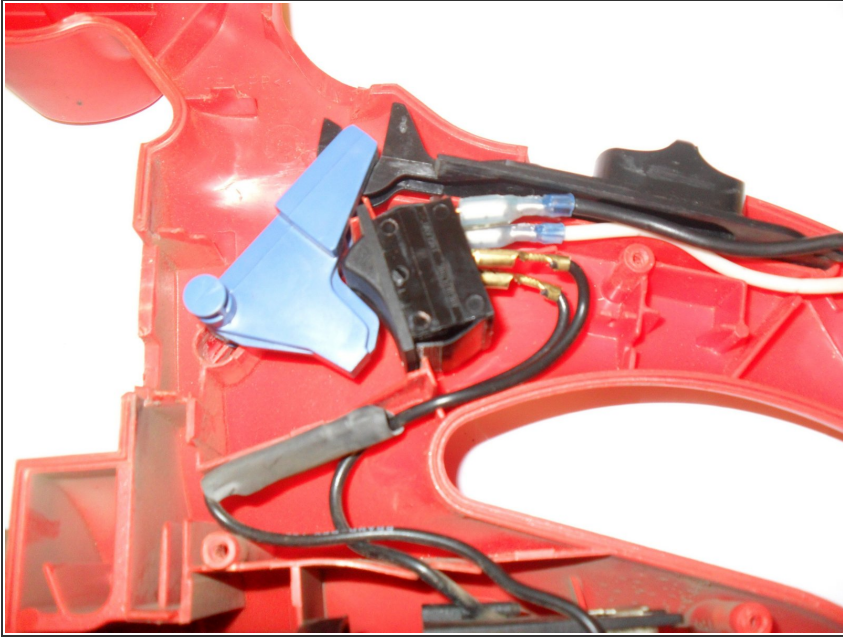

- Note for reassembly: Be sure to put this back the way it was found.

To reassemble your device, follow these instructions in reverse order.