




How to properly install the flex cable on the 4th Generation Touch

El objetivo de esta guía es analizar uno de los...

Written By: fibocellphone

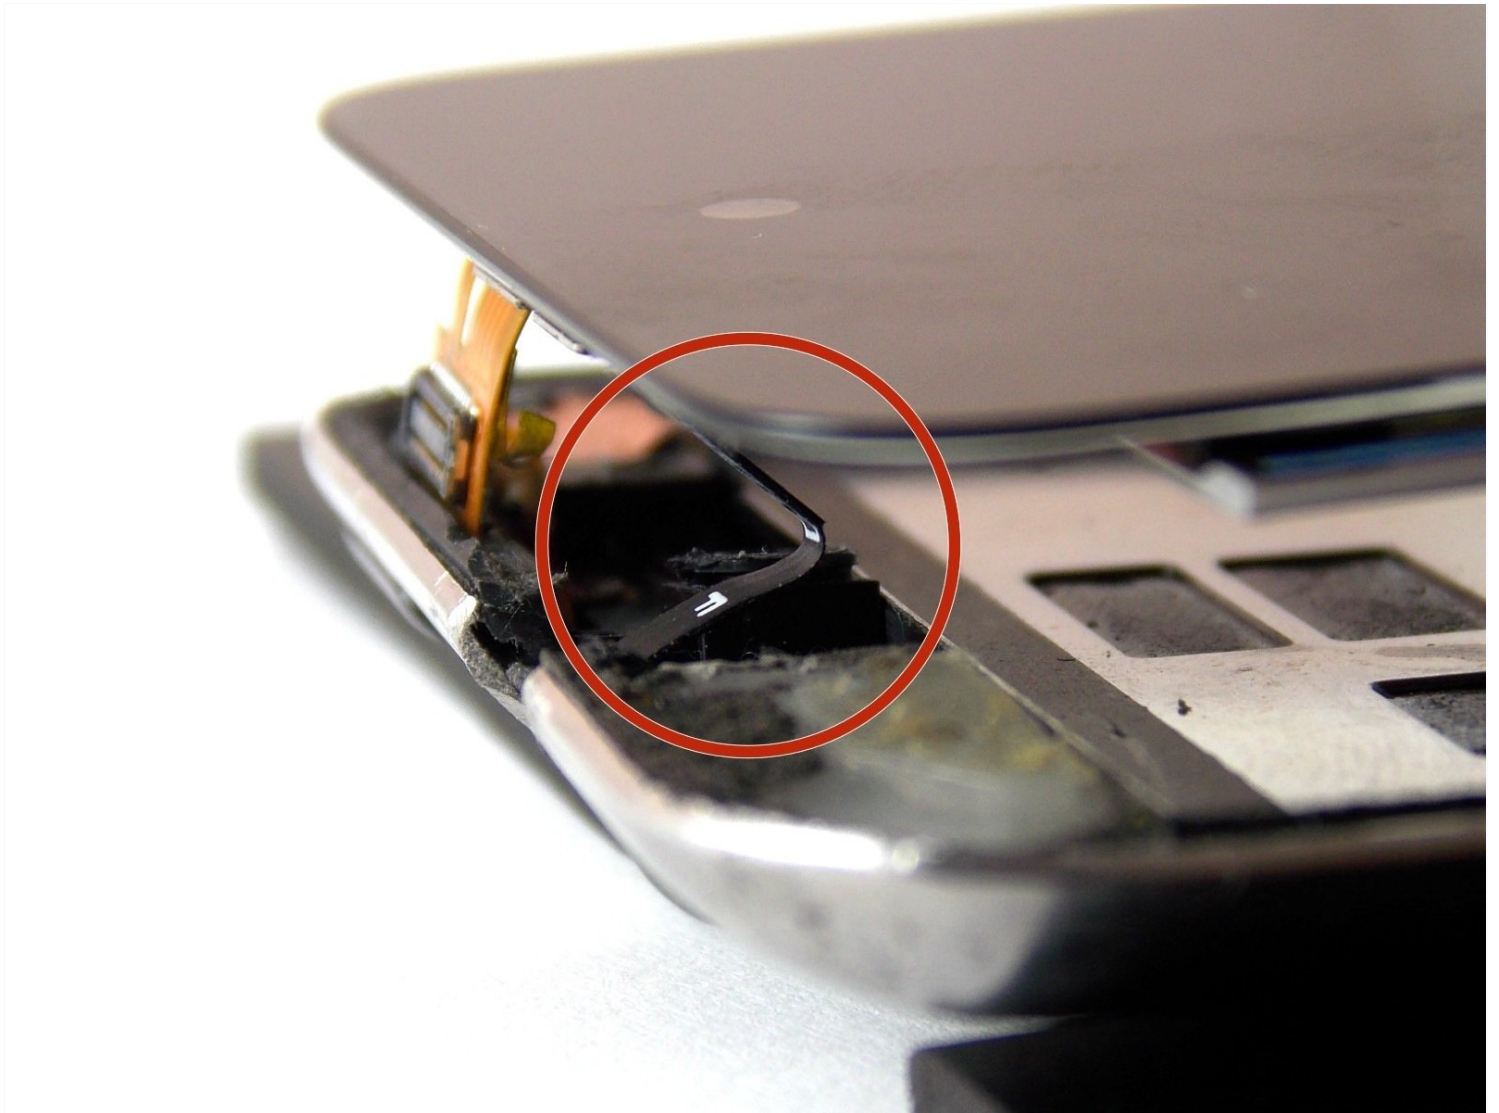


INTRODUCTION

El objetivo de esta guía es analizar uno de los errores mas comunes en la instalación de la pantalla para el iPod touch 4.


English: The purpose of this guide is to analyze one of the most common mistakes in installing the screen to the iPod touch 4.

Step 1 — How to properly install the flex cable on the 4th Generation Touch

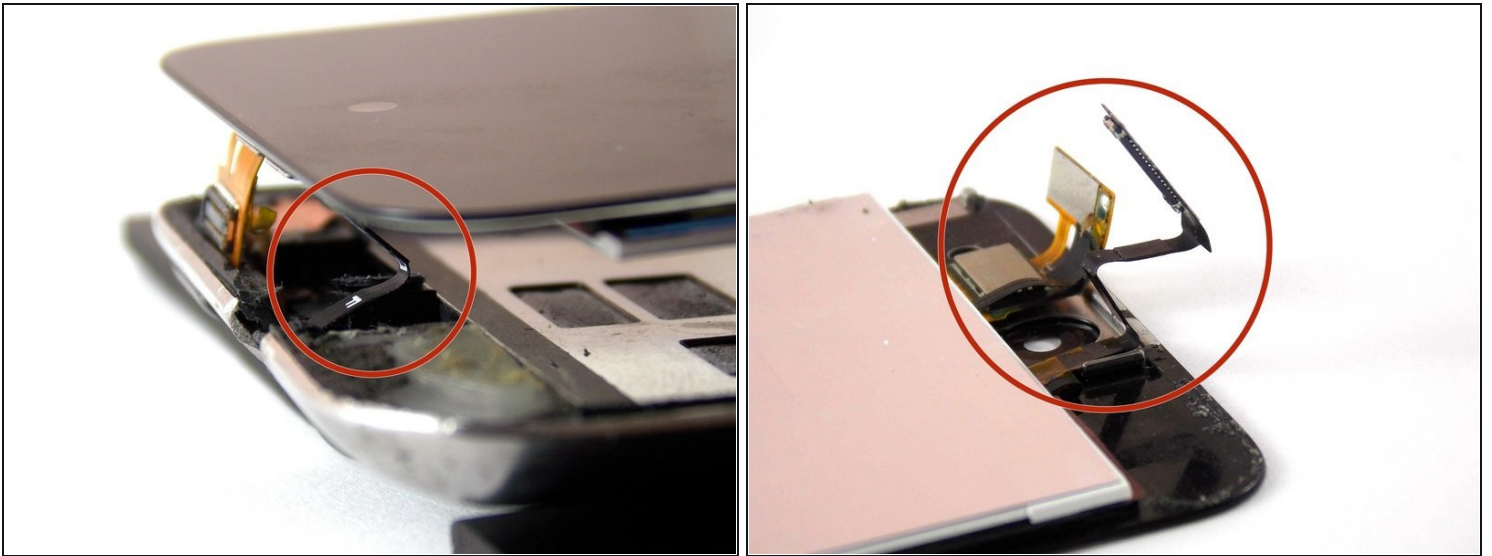

- ☑ Esta es la forma correcta de doblar el cable flex de la pantalla.
- ☑ English: This is the correct way to bend the flex cable to the display.


Step 2

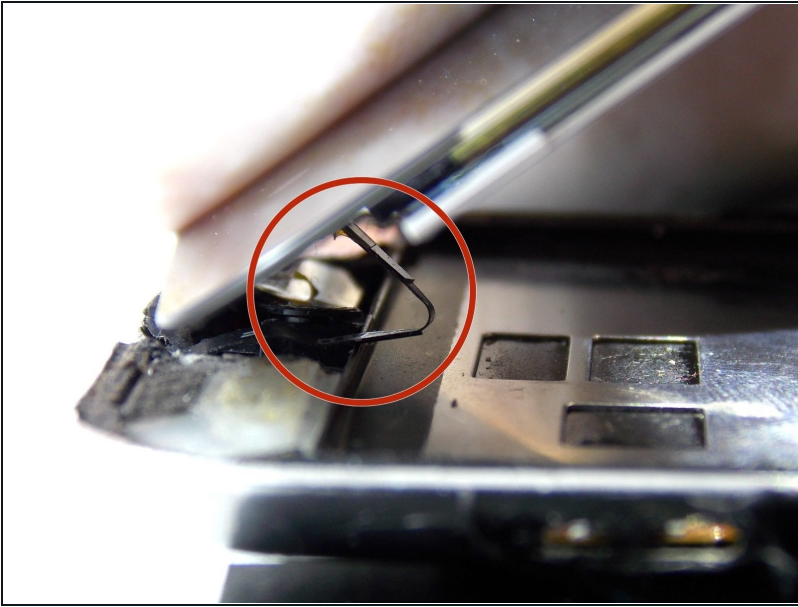

⚠ No doblar el cable flex de esta forma.

⚠ English: Do not bend the flex cable this way.

Step 3

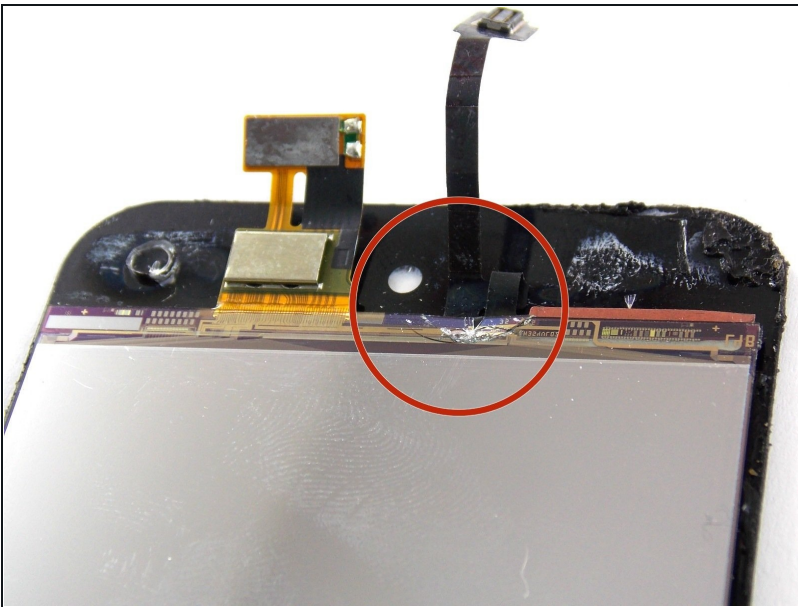

ⓘ Al doblar el cable flex de forma incorrecta la pantalla no entra completamente en el socket y se quiebra al tratar de cerrar el iPod.

ⓘ English: When bending the flex cable incorrectly the screen does not fit completely into the socket and breaks when trying to close the iPod.

To reassemble your device, follow these instructions in reverse order.