




Uniden TCX905 Button Keypad Cleaning Guide

This guide will show the user how to clean the silicon buttons thoroughly.

Written By: Gary Pence

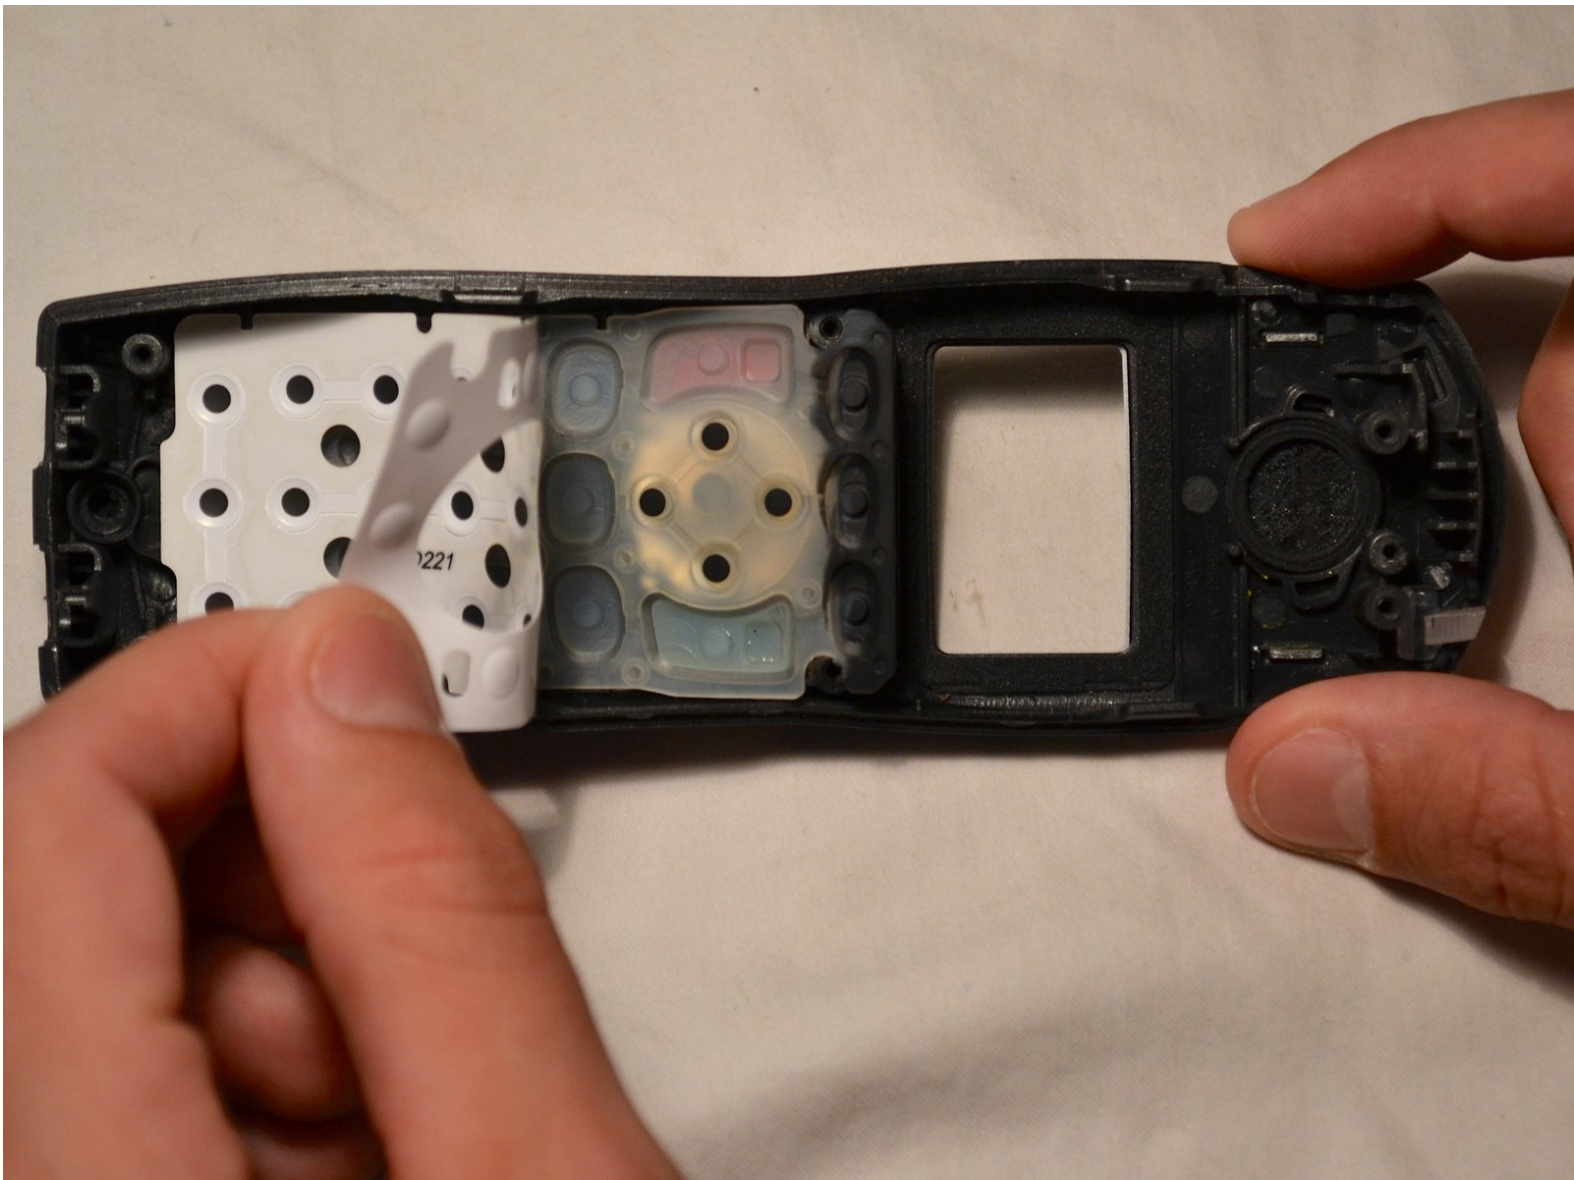

INTRODUCTION

If problems occur with the button keypad, this guide will show the user how to thoroughly clean them.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Clean Rag](#) (1)
 - [Cotton Swabs](#) (1)
- as many as needed to clean
-

Step 1 — Battery Cover



- Starting from the top of the cover, slide down and away from the phone with your thumb
- Lift battery cover off of batter and place it to the side

Step 2 — Battery Pack

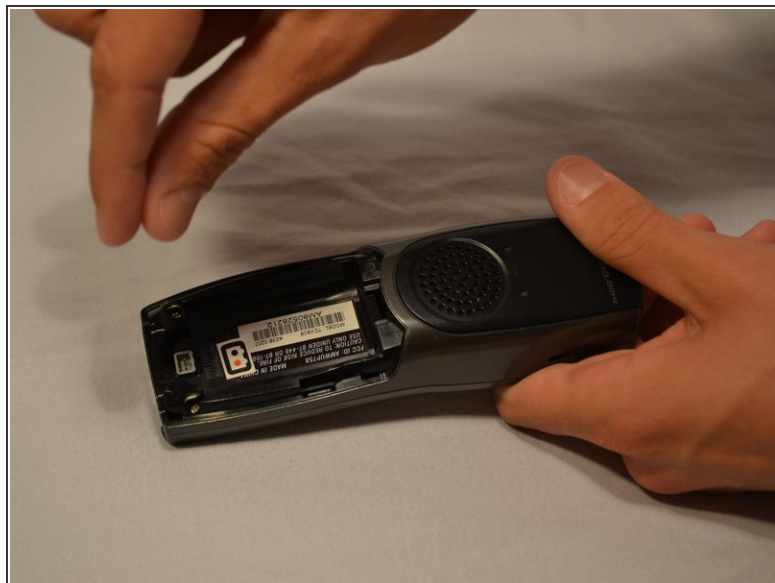


- Once battery cover is removed, place your thumb and index fingers on the the wires near the receptacle
- Gently pull straight up on the wires until a click is heard which signifies the battery is completely disconnected
- Place battery pack to the side

Step 3 — Back Shell




- Remove the two 11mm screws inside the battery storage compartment using Phillips #1 screwdriver (located near the very bottom of the phone)

Step 4

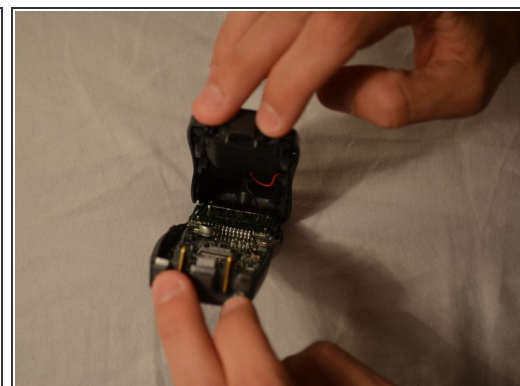


- Gently open phone casing along the seam at the bottom of the phone using index and middle fingers of both hands

Step 5

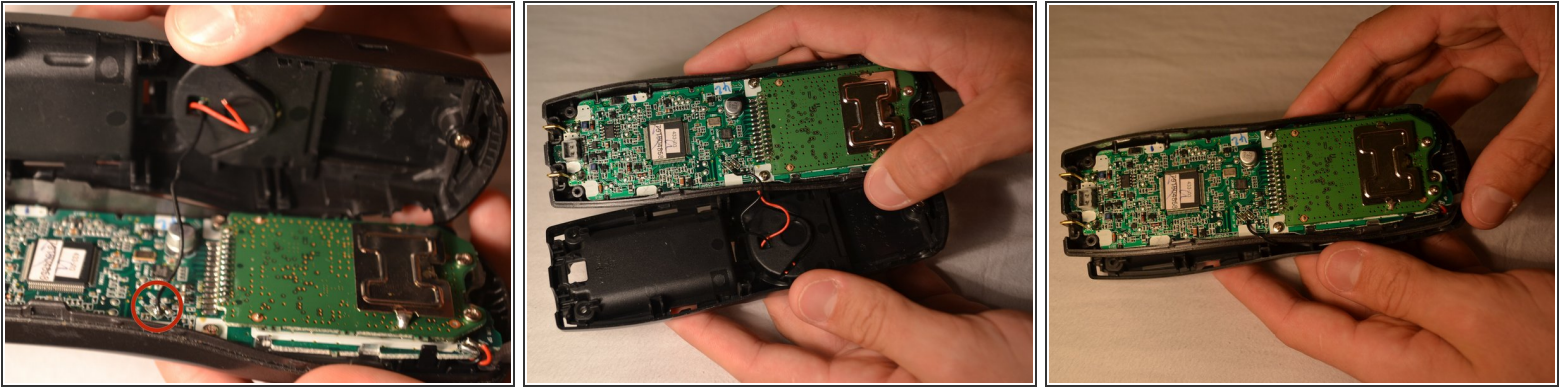


- Ensure that wired connection between circuit board and back shell is not strained
- Fold the back shell underneath the front shell and circuit board

Step 6 — Circuit Board

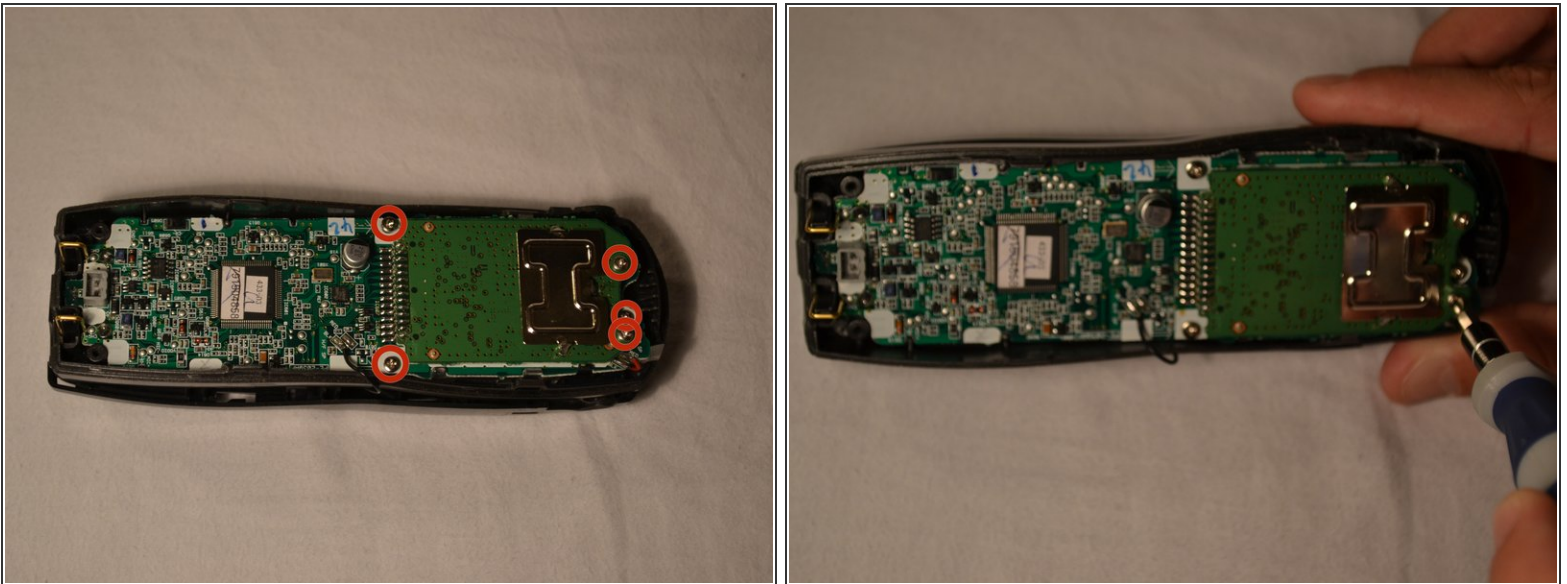


- Carefully remove the middle two 7mm screws, the outer top 9mm screws, and the top middle 7 mm screw that hold the logic board to the front shell of the phone casing using the Phillips #1 screwdriver

Step 7

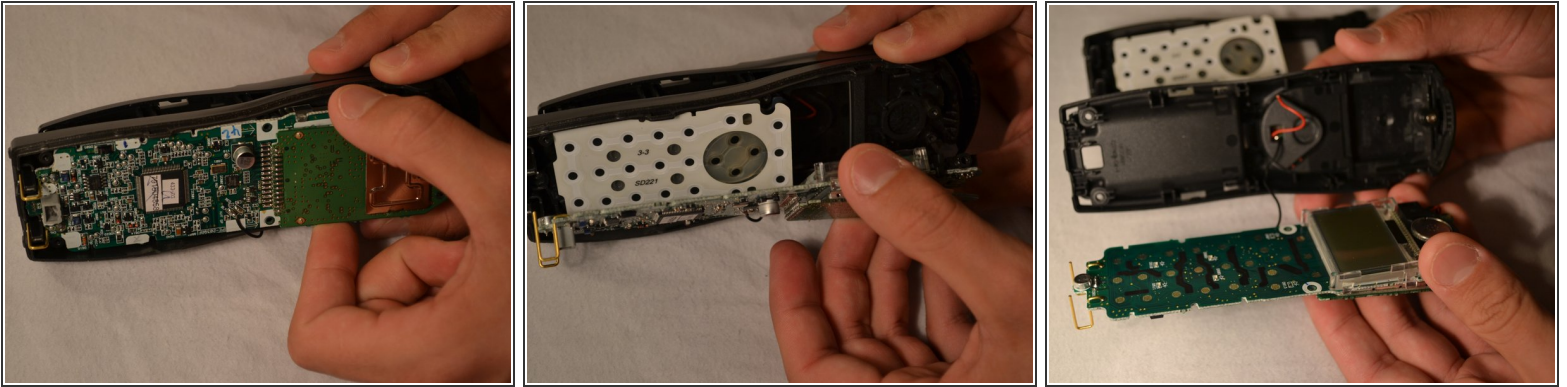


- Using index finger and thumb, carefully remove the circuit board from the front shell of phone

Step 8 — Button Keypad

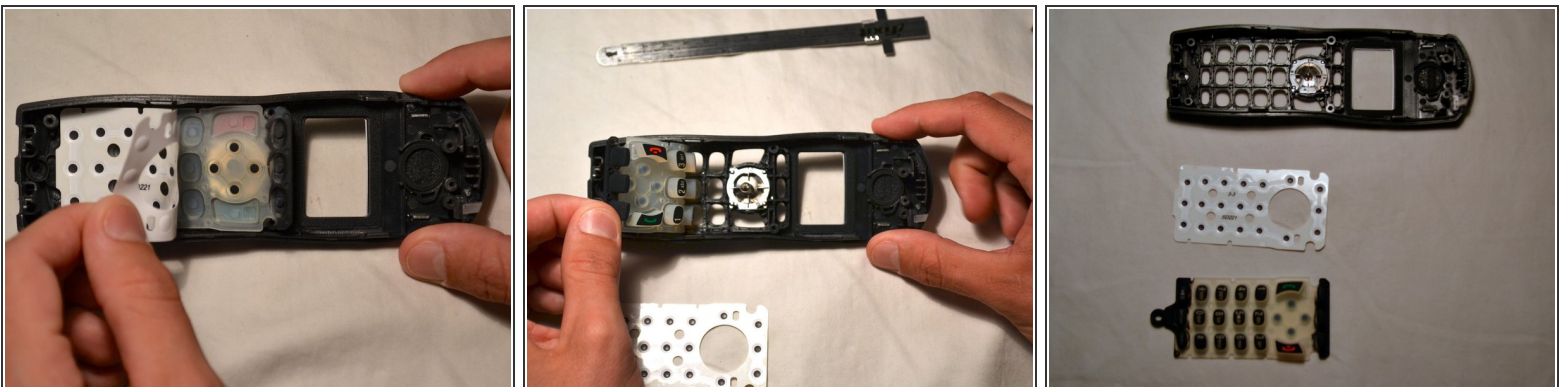

- Remove the white plastic sheet covering the button pad with your fingers
- Gently remove the silicon button pad

Step 9

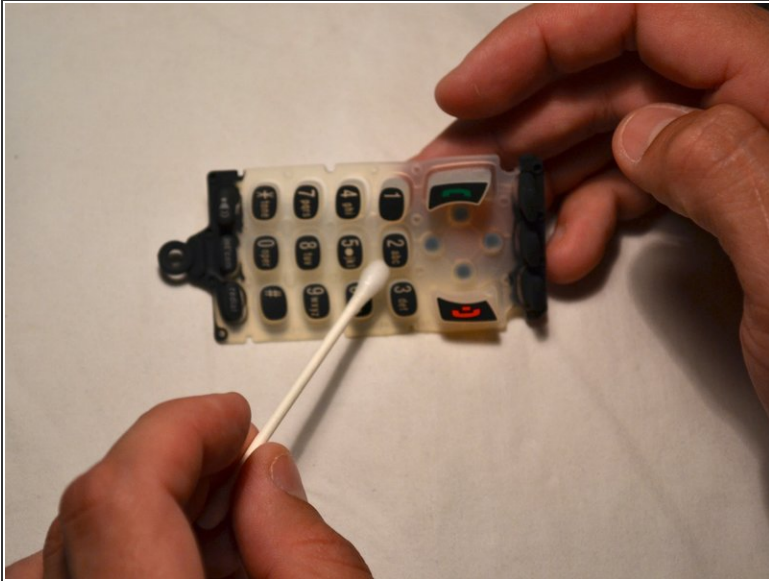

- Wet one end of the cotton swab with water and clean button pad as needed
- Repeat process with multiple cotton swabs if needed
- Dry the button pad with a clean, soft rag before replacing

To reassemble your device, follow these instructions in reverse order.