



Samsung Portable Dualband Tri-Mode Backplate Replacement

Use this repair guide to replace the backplate on a Samsung Portable Dualband Tri-Mode.

Written By: Kali Kupp



INTRODUCTION

The removal of the backplate may be necessary in the event that the backplate becomes damaged. The removal of the backplate is a prerequisite for reaching the electrical components of the phone. This guide addresses both of these issues.



TOOLS:

- [Tweezers](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Slide the battery out from the battery compartment on the back of the phone.

Step 2 — Antenna



- Unscrew the antenna top.

Step 3



- Clasp the antenna with tweezers and push toward the top.
- Remove the antenna.

Step 4 — Backplate



- Remove the four screws (3 mm) from the battery compartment.
- Press the release buttons located on the side of the phone while gently prying the back plate off.

To reassemble your device, follow these instructions in reverse order.