



# Kodak EasyShare M2008 LCD Screen Replacement

How to safely and properly remove the LCD Screen from the device.

Written By: Brian



---

 **TOOLS:**


- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Place thumb firmly on battery cover.
- Slide thumb right, the cover should follow and pop up.

## Step 2

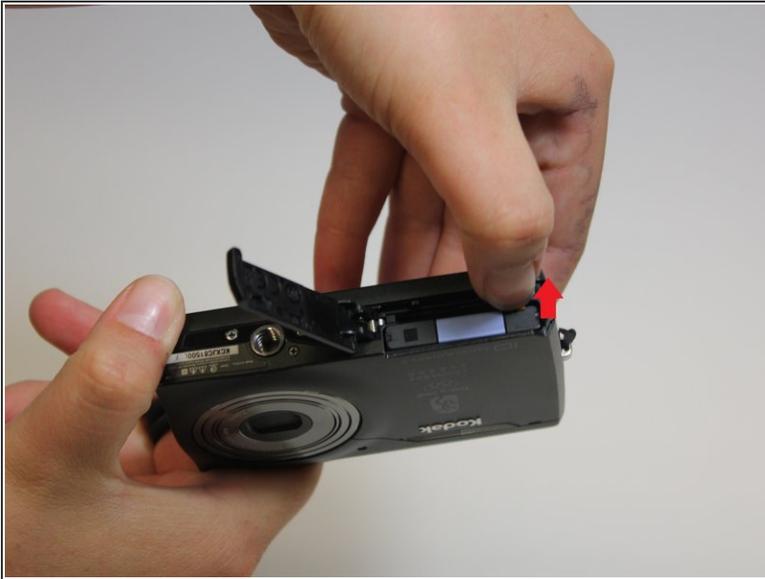

- Place thumb on orange tab and pull back towards screen.
- The battery should pop up.
- Gently lift battery out.

## Step 3 — Device Casing



- Remove screws from along outer edge of casing.
- There are 6 screws in total.
- ⓘ Righty tighty, lefty loosey!

## Step 4




- Gently lift off front and back casing.

## Step 5




- Remove screws along side.
- Gently peel off side casing.

## Step 6 — LCD Screen

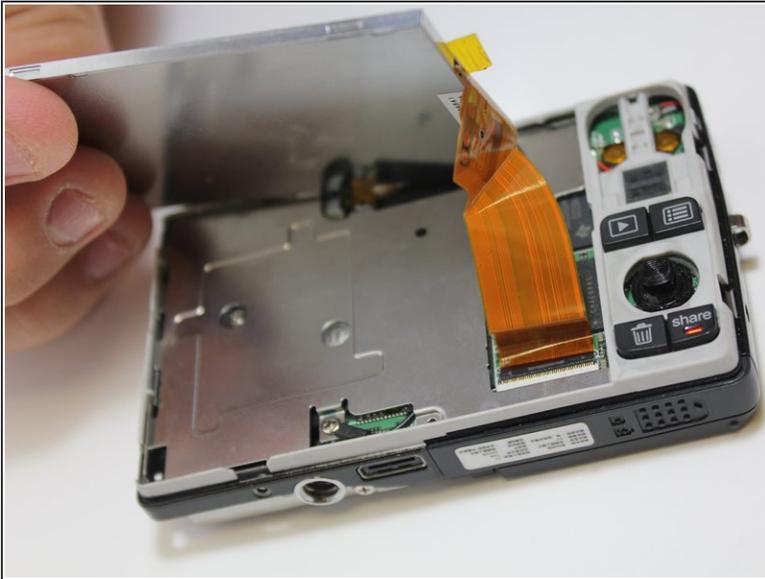

- Gently lift up the LCD screen after removing back casing.
- Find the point where the orange ribbon cable attaches to mother board.

## Step 7

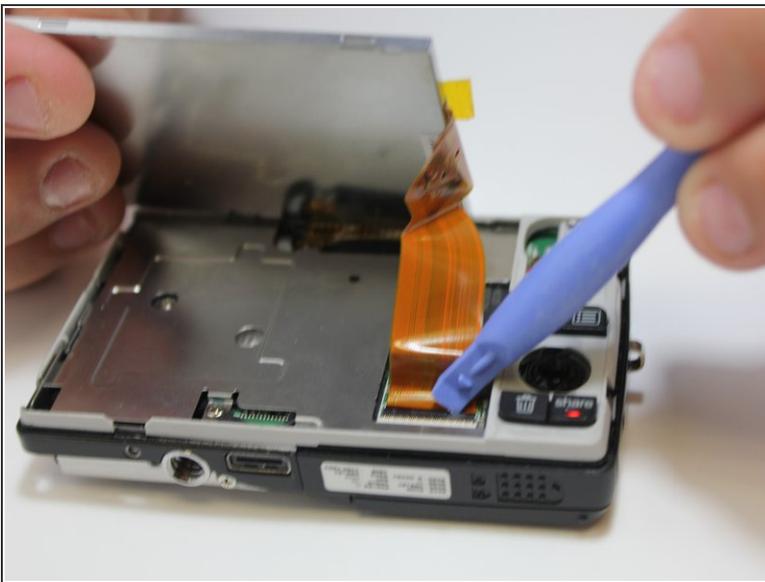

- Use plastic opening tool to gently lift up on the ribbon cable fastener.
- Note: It does not take much pressure to release fastener.

## Step 8



- Lift LCD Screen off of device.

To reassemble your device, follow these instructions in reverse order.