


Dell Inspiron 1545 Daughter Board Replacement

The daughter board is an addition to the...

Written By: Nathan Lemay

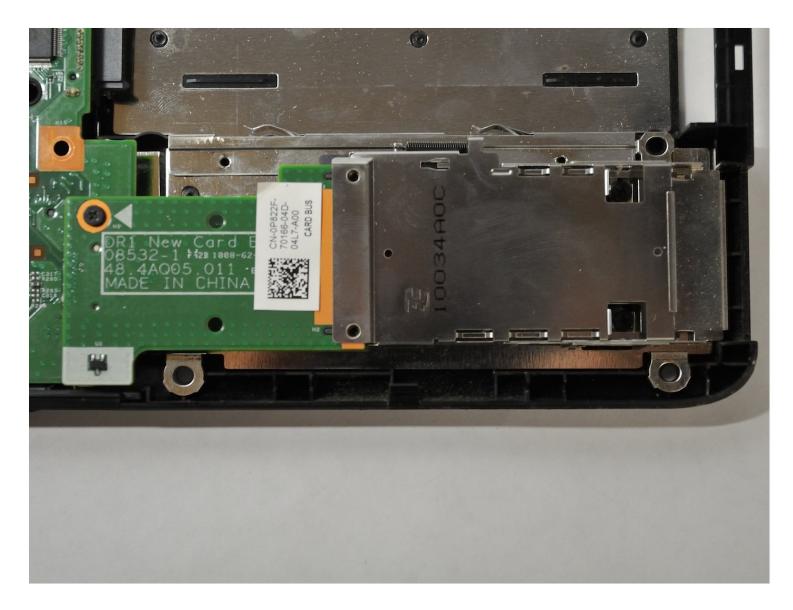

INTRODUCTION

The daughter board is an addition to the motherboard and must be removed in order to access the motherboard.

TOOLS:

Phillips #1 Screwdriver (1) iFixit Opening Tool (1)

Step 1 — Battery



- Before attempting to remove the battery ensure that the laptop is disconnected from all power sources and turned off.
- Turn the laptop over to its back.



• Slide the release latch while simultaneously pulling backwards on the battery.

Step 3



• Slide the battery out of the battery bay.

Step 4 — Base Cover



- Unscrew the four screws (3mm Phillips #1) that hold the base cover in place.
- The top 3 screws are "captive" (held in by a retaining ring) and will not come out.

Step 5



• Carefully lift the base cover vertically away from the laptop.

Step 6 — Center Control Cover



• After removing the battery, remove the two screws (3mm Phillips #1) beneath it. These screws hold the Center Control Cover in place.

Step 7




• Flip the laptop over to the front and open the display as far as possible.




The Center Control Cover is VERY fragile, be careful when using prying tools.

- Pry the Center Control Cover from the laptop. On the right there is a small divot, it is advised that you start removing the panel from here.
- Carefully lift the Center Control Cover away from the laptop.

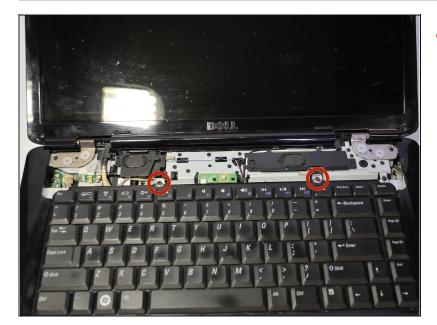

Step 9 — Keyboard

 Remove the two screws (5mm Phillips #1) at the top of the keyboard.

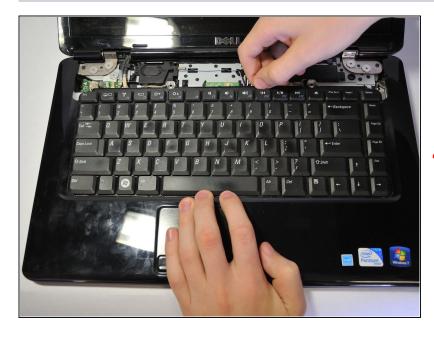

- Slide the keyboard out and away from the laptop and lift it up to access the keyboard connector.
- ▲ Do not pull hard on the keyboard while removing it, you may damage the keyboard or the keyboard connector.

Step 11



 Lift the connector latch that secures the keyboard cable to the connector on the motherboard and remove the cable.



• Lift the keyboard up and away from the laptop.

Step 13 — Palm Rest



 Remove the 11 screws (5mm Phillips #1) from the back of the laptop as marked. One screw is in the middle, by the RAM.




- Remove black and white wires from the WLAN that lead to the display by pulling straight up.
- Unwind the wires from the routing guides.

Step 15



- Turn the laptop back over to its normal resting position and pull the black and white wires previously connected to the WLAN through the hole.
- Remove the 4 smaller screws (5mm Phillips #1) and one screw on the top left (3mm Phillips #1) from the palm rest.

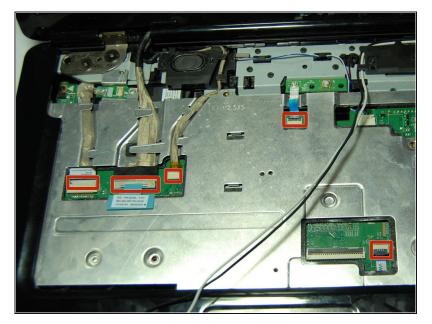

- Disconnect the Bluetooth card cable, Wed cable, Camera1 cable, power cable, and touchpad cable from the respective Motherboard connectors as marked. For the Bluetooth cable and Camera1 cable, pull the plugs towards the screen. For the touchpad and power cable, lift the black tab and then pull them out. For the Wed cable, pull the blue tab up.
- Unsecure the wires from the routing guides so they are loose.
- Pull on the plastic tabs for each connector to help prevent causing damage to the connectors.



• To separate the palm rest from the rest of the computer, use a plastic opening tool to lift up the plastic. It is best to start at one point and work your way around.

Step 18 — Daughter Board



- Remove the 3 screws (3mm Phillips #1) that secure the daughter board to the motherboard.
- Lift the daughter board away from the laptop.

To reassemble your device, follow these instructions in reverse order.