




Replacing IBM ThinkPad 560z RAM

Written By: Derek Driscoll

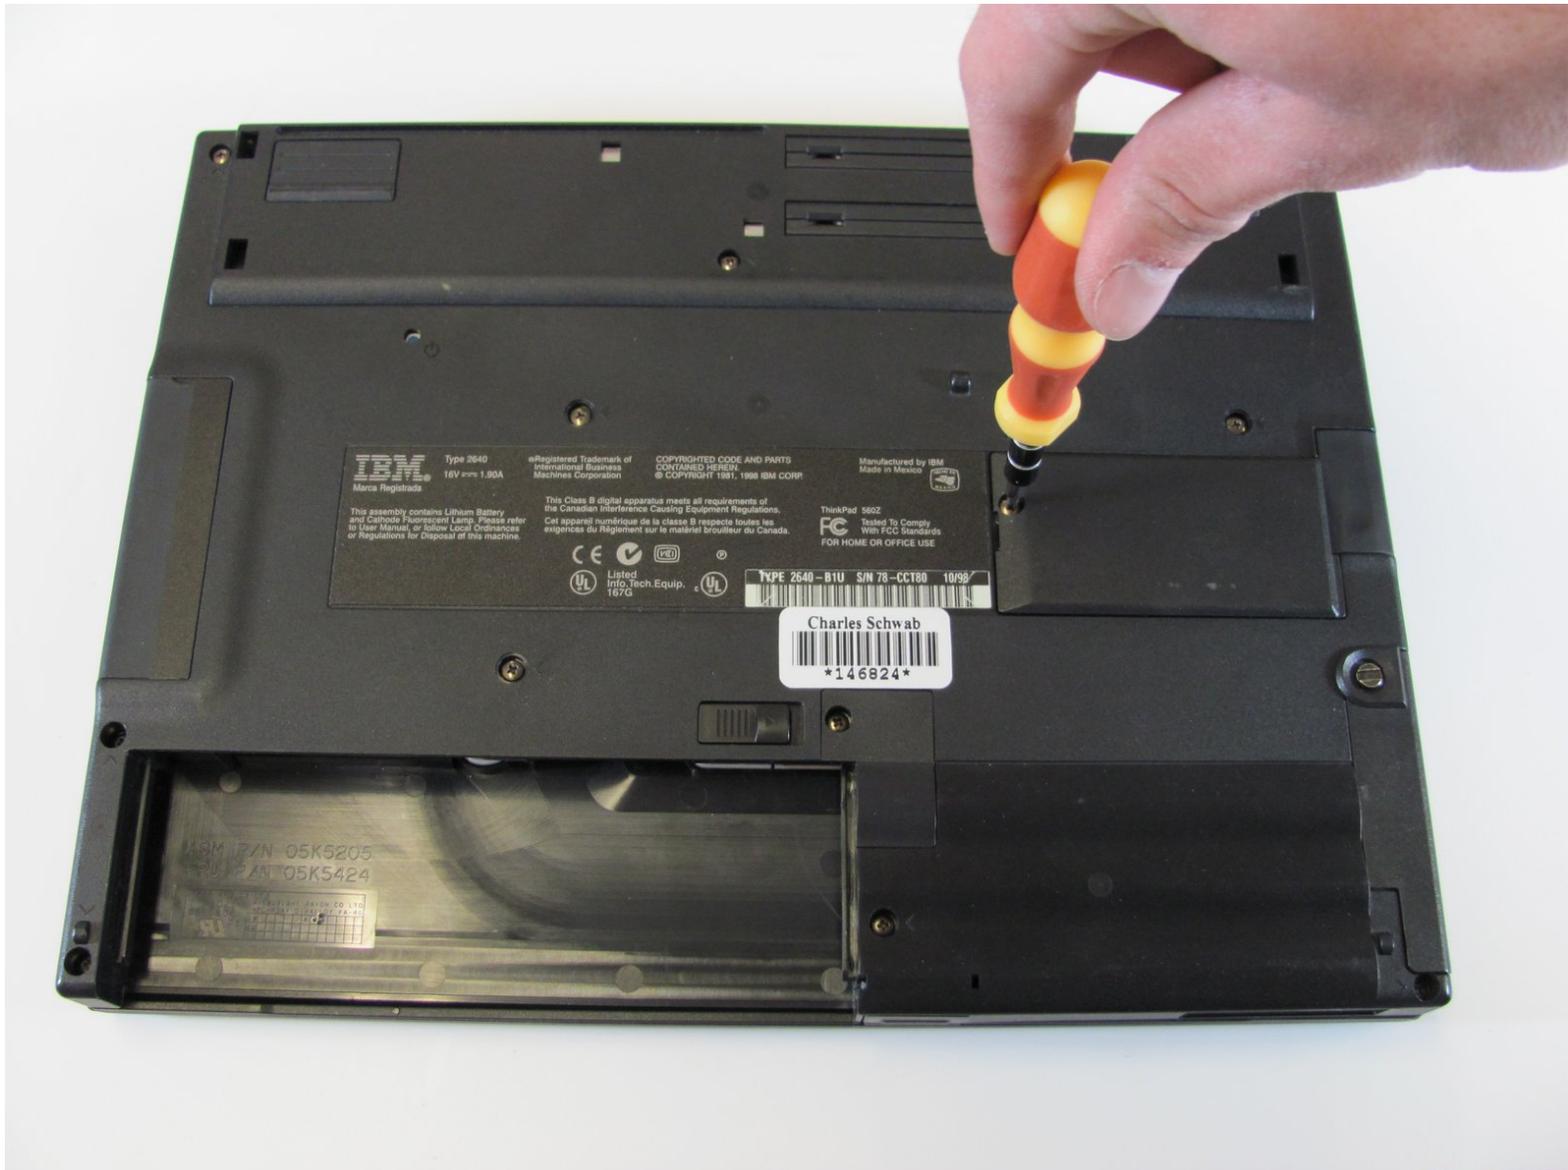

INTRODUCTION

How to remove the RAM for repairs or replacement.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery Removal



- Slide the battery release latch to the right.
- Pull out the battery out towards the front of the device.

Step 2 — RAM





- Remove a single phillips head screw.

Step 3




- Lift the cover to reveal the RAM.

Step 4

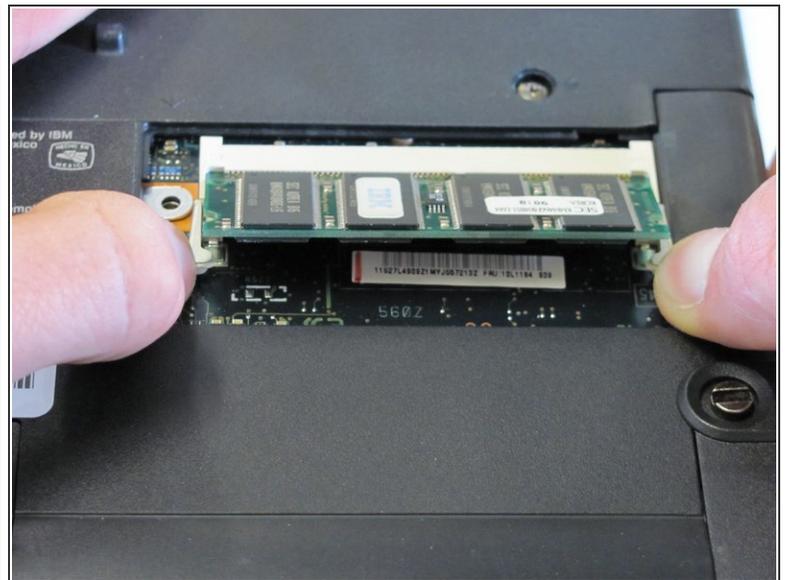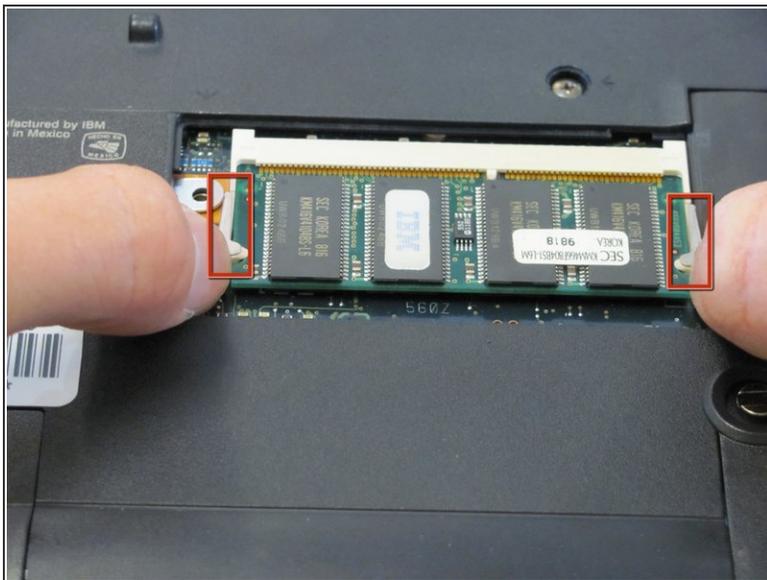

- Use your fingers to push apart the clamps holding the RAM.

Step 5

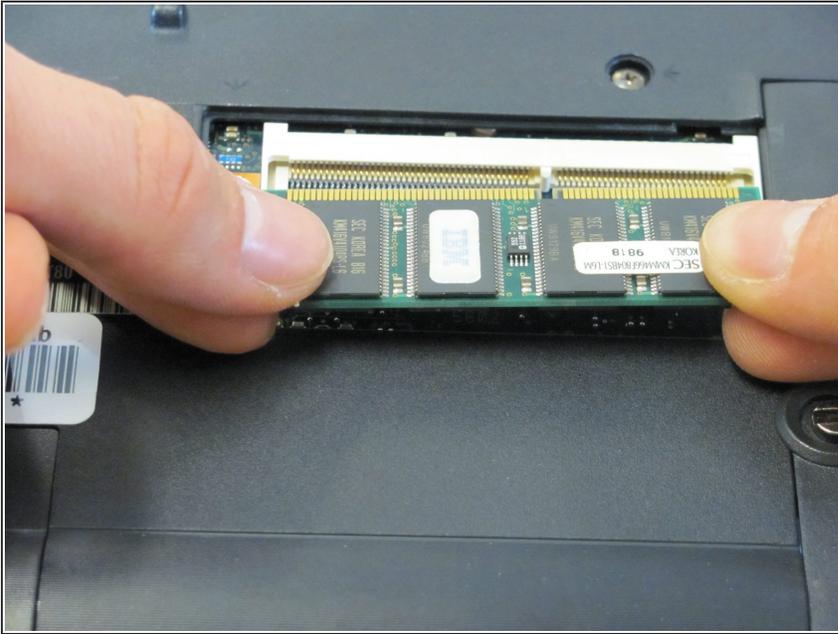

- Use your fingers to pull out the RAM.

To reassemble your device, follow these instructions in reverse order.