



# Lenovo Ideatab A1000 Teardown / Take apart / Disassembling

Lenovo Ideatab A1000 Teardown / Take apart / Disassembling

Written By: ZFix



---

## INTRODUCTION

How to completely disassemble your tablet.

\_\_\_\_\_ **Video tutorial:** \_\_\_\_\_


[video: <http://youtu.be/rgX0-UzZT3o>]

---

### **TOOLS:**

- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Lenovo Ideatab A1000 Teardown / Take apart / Disassembling

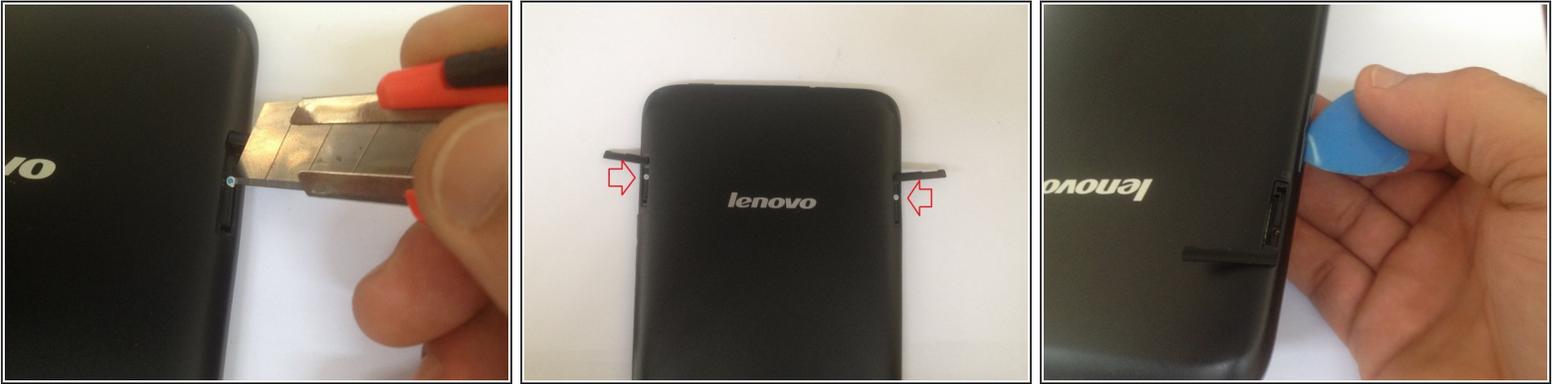

- Unscrew the two Phillips screws under the memory card and the SIM card covers.
- Use a plastic tool and remove the back cover.

## Step 2



- Unscrew the 8x screws and remove the mother board cover.
- Disconnect the battery connector.

## Step 3



- Volume Buttons, Power Button and Vibration motor
- Audio Jack Connector, Touch Screen Flex Cable connector, LCD Display Flex Cable Connector.
- Wi-Fi Antenna Connector, Speaker Connector, GPS Antenna Connector.

## Step 4



- Remove the lower speaker and the microphone.
- Unstick the Power button, Volume buttons and Vibration motor from the middle frame.
- Unhook the LCD Display and the Touch screen flex cables.
- 2x Phillips screws securing the main board.

## Step 5



- Remove the Logic board.
- Be careful, the mother board is stuck to the front outer case.

## Step 6



- CPU - Mediatek, MT8317ATA
- Memory chip - eMMC(16GB)+LPDDR2(1GB) - KMK3U000VM-B410
- Power management chip - Mediatek MT6329BA
- .
- .
- That's all.

To reassemble your device, follow these instructions in reverse order.