



How to clean Panasonic SA-HT810V DVD Optical Head

This is guide on opening up your Panasonic...

Written By: Nathan Cheadle



INTRODUCTION

This is guide on opening up your Panasonic DVD/VCR and cleaning the DVD optical head.

TOOLS:

[64 Bit Driver Kit](#) (1)

Step 1 — How to clean Panasonic SA-HT810V DVD Optical Head



- With the front display of the device facing you, rotate the device 90 degrees counter clockwise.
- Remove the screw that is on the right side of the panel facing you.
- Now rotate the device 180 degrees and remove the second screw.
 - Remove all screws with a phillips head screwdriver.

Step 2




- Rotate the device so that the back faces you.
- With a phillips head screw driver, locate and remove the 12 screws highlighted by the red circles in image one.

Step 3



- Before removing cover make sure that the back of the device is facing you.
- Remove the top cover by bending out on the sides, and pulling the cover towards you while applying upward pressure.

Step 4

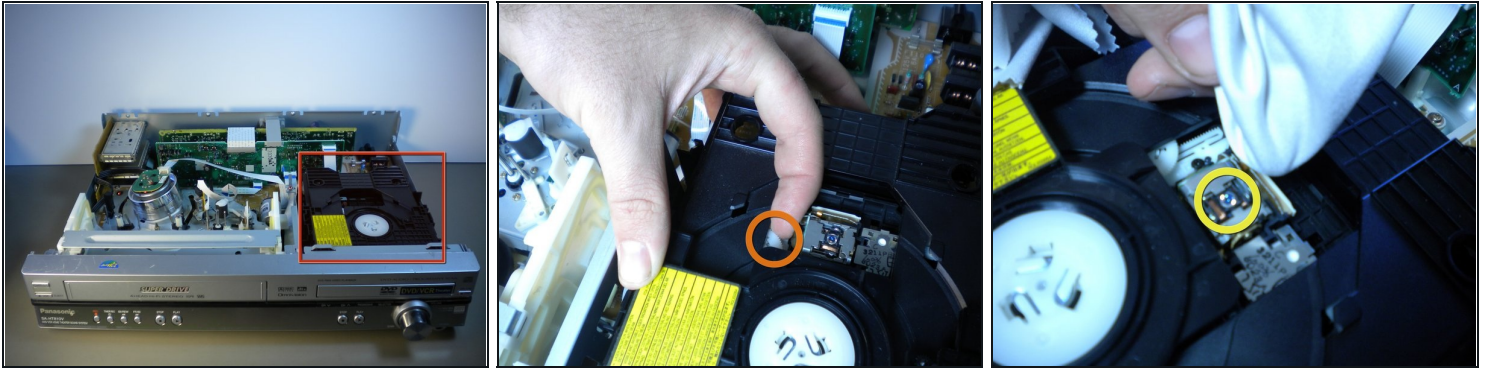

- Before cleaning DVD lens, make sure that the front of the device is facing towards you.
 - ① Note that the DVD component of the device is boxed in red.
 - To access the DVD lens, spin the gear circled in image two counter-clockwise until the lens is exposed.
 - ⚠ Clean the lens by GENTLY rubbing with a [microfiber cloth](#) and a cleaning solution of your choice.
-

To reassemble your device, follow these instructions in reverse order.