


Nokia 6086 Vibrator Replacement

Replacing a faulty vibrator.

Written By: Caitlin Rahm

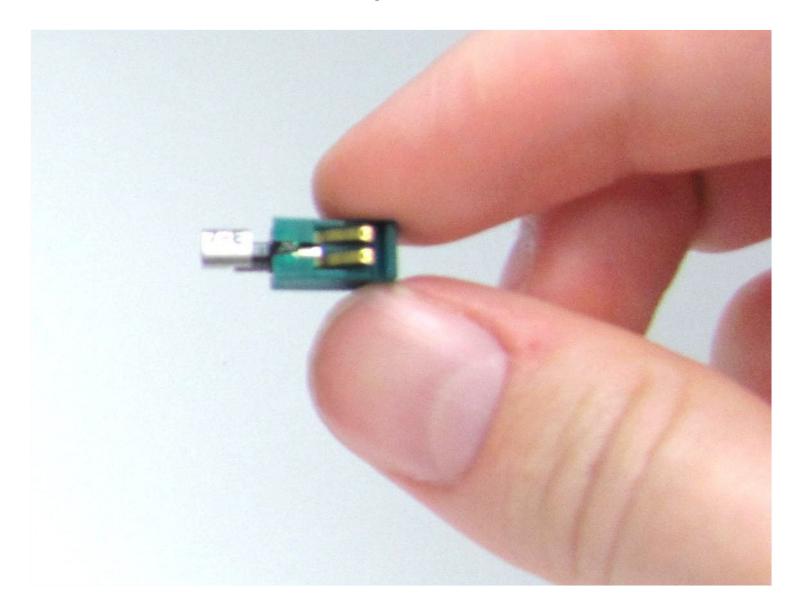

INTRODUCTION

Replacing a faulty vibrator.


TOOLS:

Tweezers (1)
iFixit Opening Tool (1)

Step 1 — Battery



- Turn off the phone.
- Check if there is a microSD card in the slot behind the door on the side. If so, remove it by first pushing it in, then pulling it out.
- Position the phone so that the back side is in view.

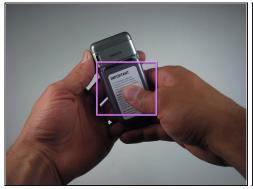





- Remove the back battery cover.
 - Apply pressure on the cover while simultaneously sliding the cover downward.







- Insert the iPod opening tool between the base of the phone and the phone battery.
- Position the phone so that the battery won't fall out of the phone.
 - (i) The battery lifts out of the phone fast and easily.
- Carefully lift the battery out of the phone.

Step 4 — Upper Back Cover



- Turn the phone so that the back of the phone is facing forward.
- The picture to the left shows the location of the plastic tabs that attach to the upper cover of the phone.
 - (i) In this picture, the upper cover has already been removed.





- Place the iPod opening tool under the tabs near the top of the phone.
- Slide the iPod Opening Tool upwards.
 - This will pop the tabs and release the upper part of the phone.
- (i) Repeat for the left and the right sides.



- Place the iPod opening tool at the top area of the bottom section of the phone (indicated in picture).
- Lift the iPod opening tool to pop open the clips.
 - This will release the upper back cover of the phone.
- (i) Repeat for the left and the right sides.




- Push upward on the top back cover using two thumbs.
 - This will remove the top back cover from the phone.

Step 8 — Base of The Phone






- Locate the four screws.
- Remove the screws using a T6 Torx screwdriver.

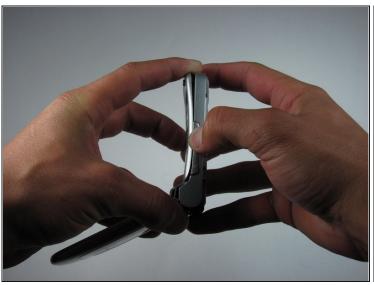



- Turn the phone over.
- Gently pull apart the phone.
 - Start at the bottom of the phone and pull outward.
 - There are plastic catches on the middle of each side. These should pop free as you pull.


 \triangle Be careful, the phone will separate into two sections.

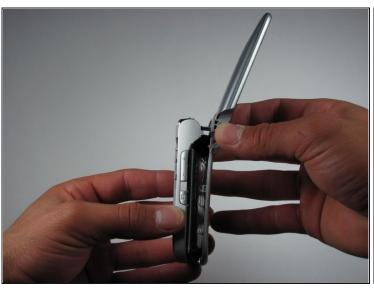



- The phone should now be in two different sections.
 - 1) The logic board and the back cover
 - 2) The keypad and the rest of the phone

Step 11 — Vibrator

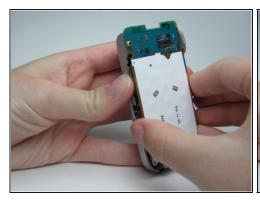







Remove the logic board from the bottom casing.




- The logic board should be fully detached from the phone.
- The turquoise colored vibrator should now be visible.

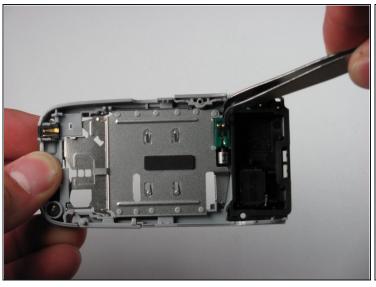

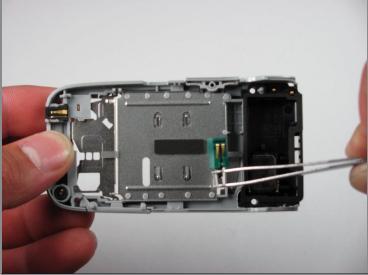

- Place the <u>tweezers</u> at the base of the vibrator.
- Squeeze the tweezers while simultaneously lifting them up to remove the vibrator.

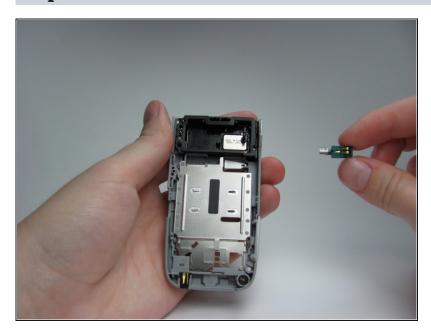

• The vibrator should be detached from the phone.

To reassemble your device, follow these instructions in reverse order.