



Samsung Captivate Glide Screen Replacement

How to replace the screen on a Samsung...

Written By: Tyler Moore



INTRODUCTION

How to replace the screen on a Samsung Captivate Glide.

TOOLS:


[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

[Tweezers](#) (1)


[Heat Gun](#) (1)

Step 1 — Motherboard

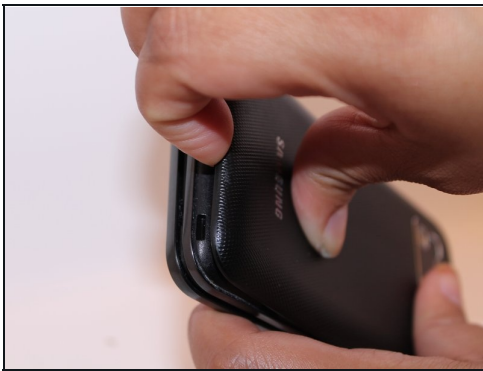

- Remove back cover using fingernail or plastic opening tool. The cover pulls up and off.

Step 2

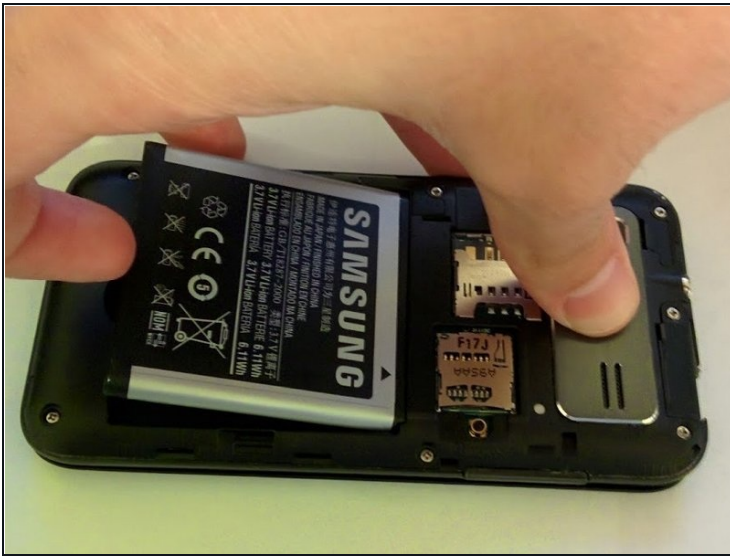

- Remove battery with plastic opening tool or finger.

Step 3




- Remove the seven screws from backplate using the #00 screwdriver.

Step 4




- Remove the back plate using the plastic opening tool.
- There is a lip on each side, and both must be pried up.
- ① You can work your way around the edges after prying the two sides.

Step 5

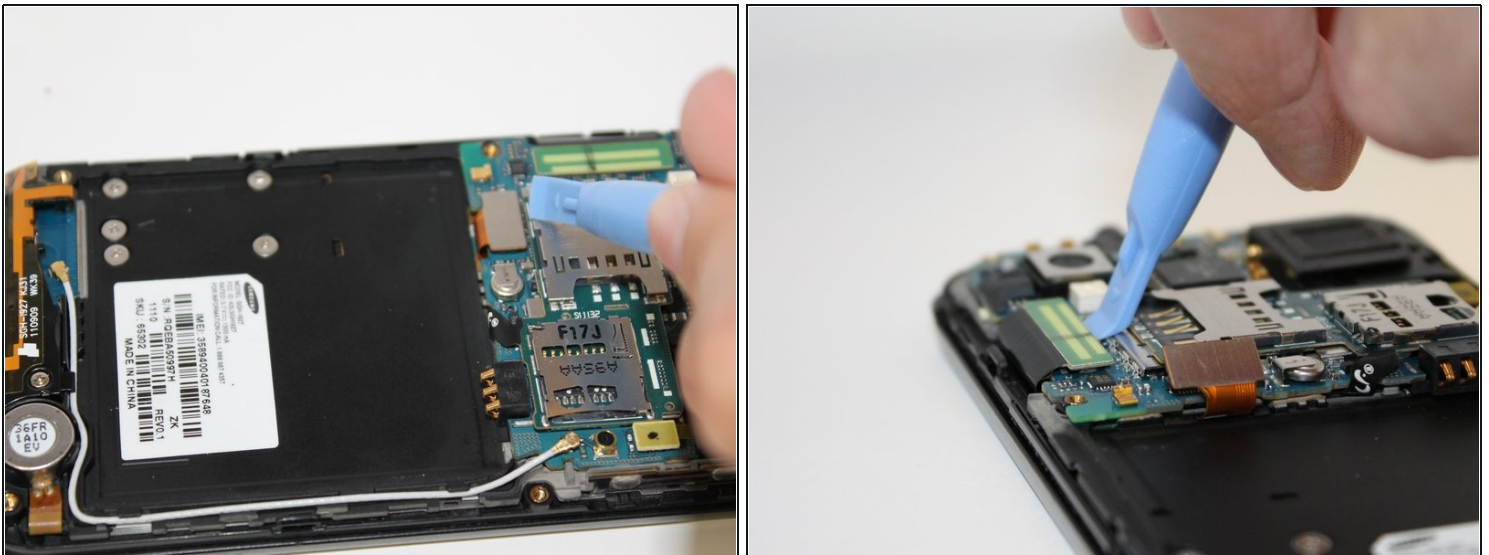

- Use the plastic opening tool to detach the two tabs connecting the motherboard to the base of the phone.

Step 6

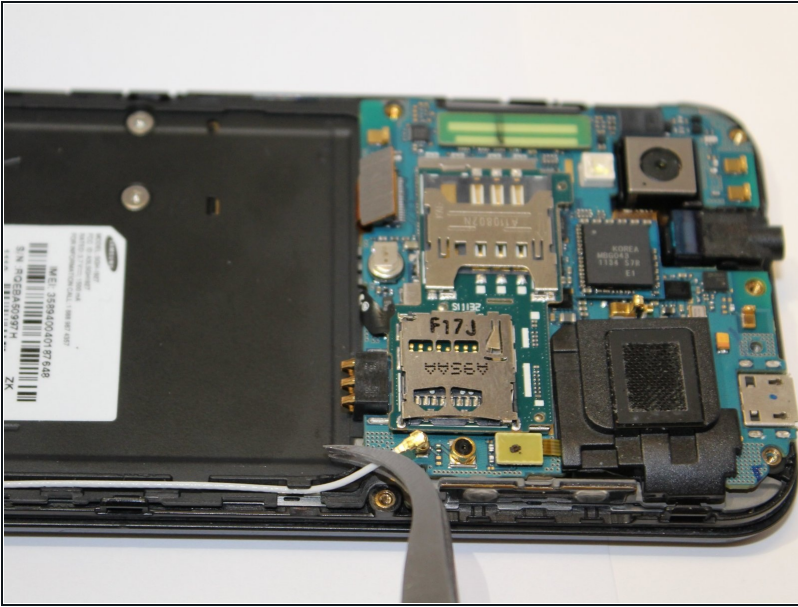

- Disconnect the antenna cable from the motherboard using [tweezers](#).

Step 7




- Remove the single screw connecting the motherboard to the base of the phone by using the #00 Phillips screwdriver.

Step 8




- Lift the motherboard out of the base of the phone.

Step 9 — Screen

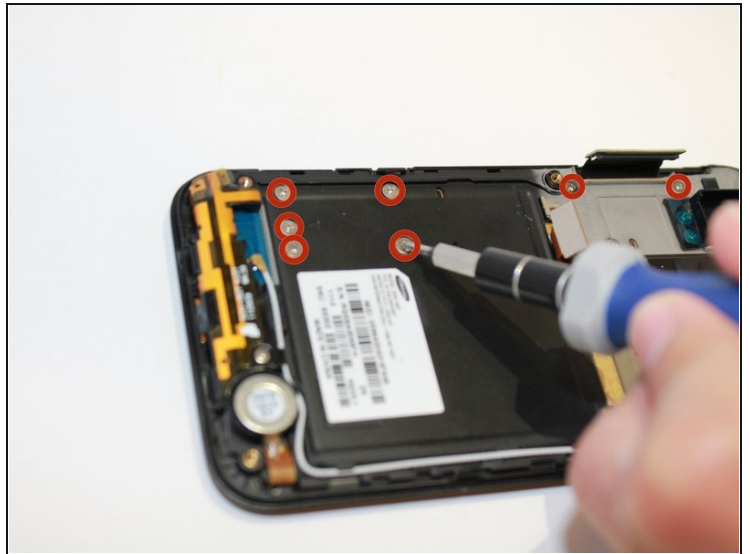


- Remove the eight screws with the #00 screwdriver.

Step 10

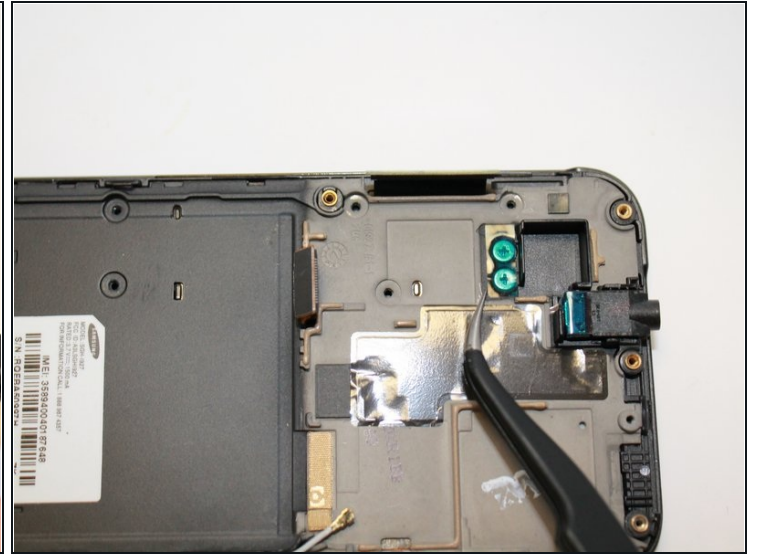


- Remove blue tape using the [tweezers](#).

Step 11

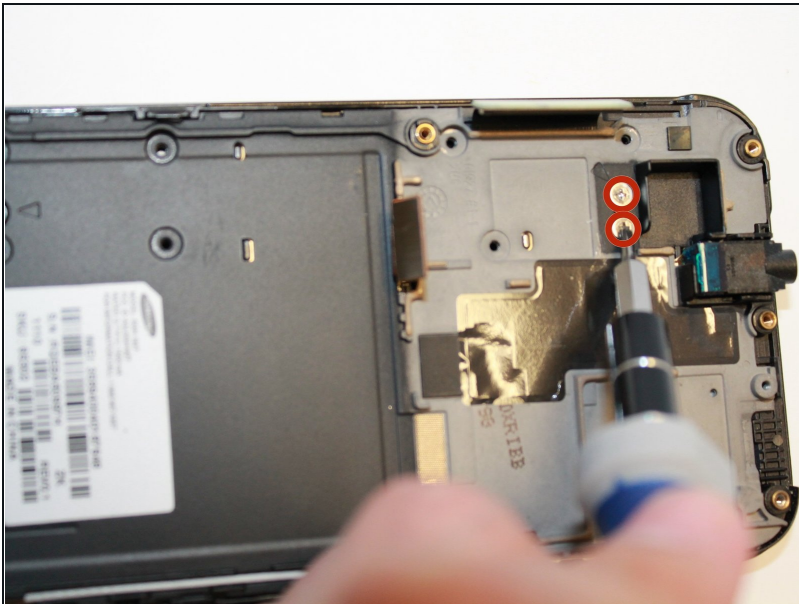


- Remove screws with the #00 screwdriver.

Step 12

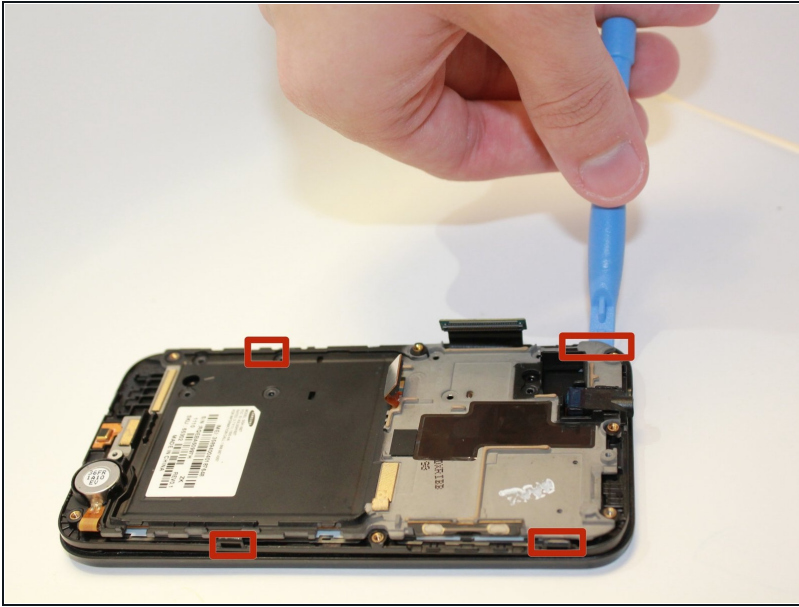


- Using the plastic opening tool, remove the back plate by prying on the four main points.
- You may encounter difficulty at certain points. Work the plastic opening tool along the edge to keep back plate from closing again.

Step 13

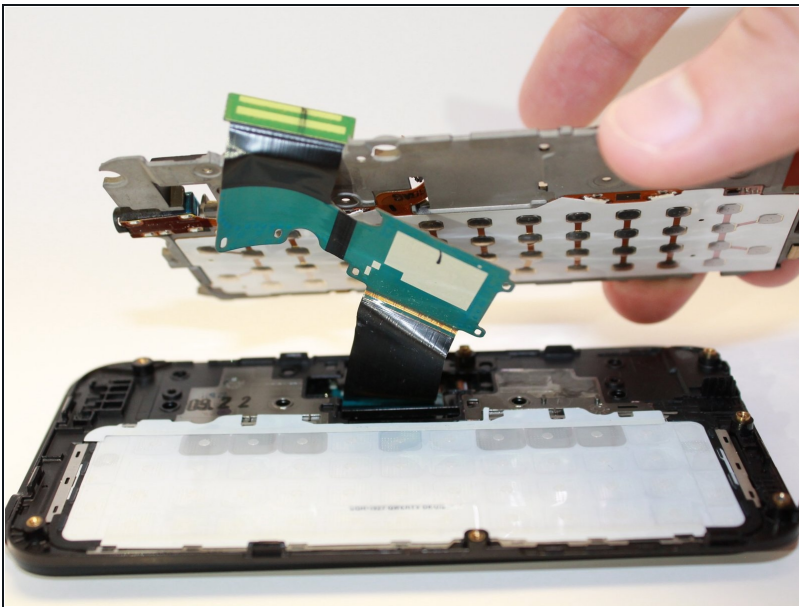


- Lift the back plate.
- To remove to slide flex cable, gently peel back from the back plate and remove back plate.

Step 14

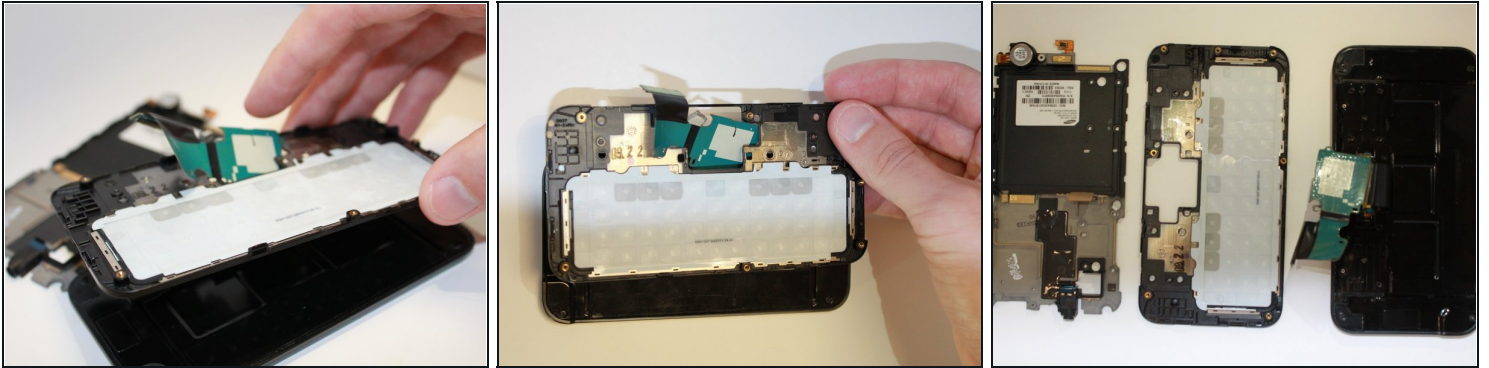

- Slide the flex cable through the slot. Be careful to not tear the cable.
- Set the front plate down.

Step 15

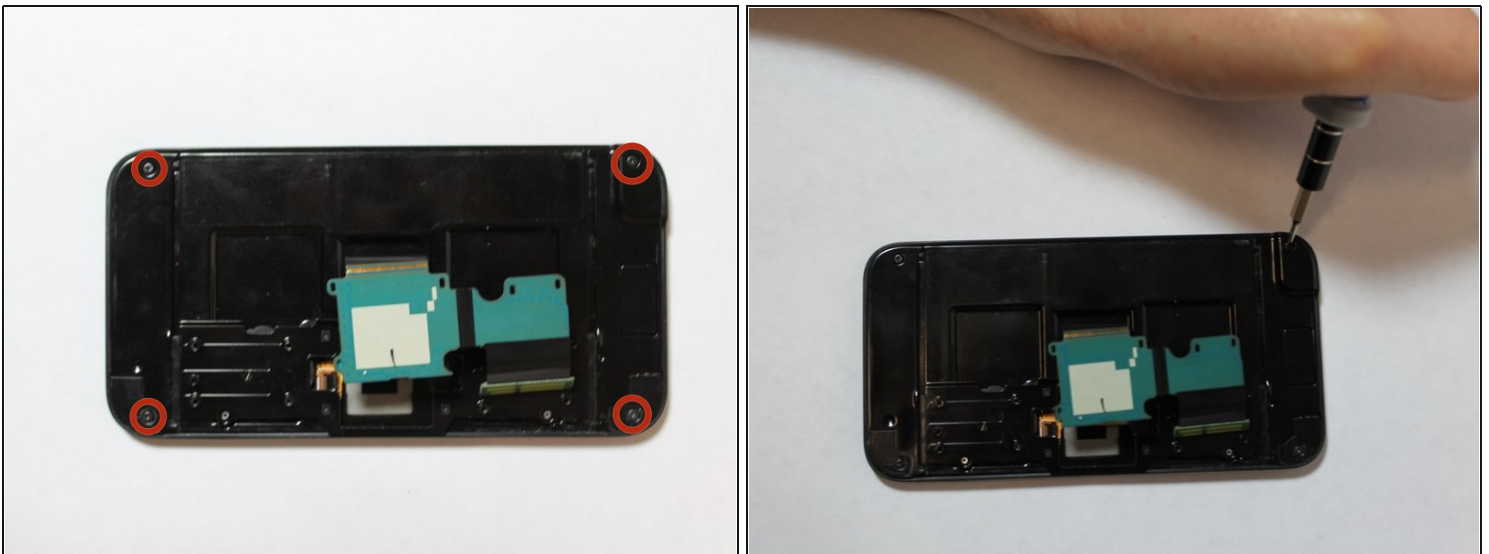


- Remove the four corner screws using the #00 screwdriver.

Step 16





- Using the plastic opening tool, release all the clips on all four sides holding the screen assembly.
- You can now remove the back plate by sliding the flex cable through the slot.

Step 17

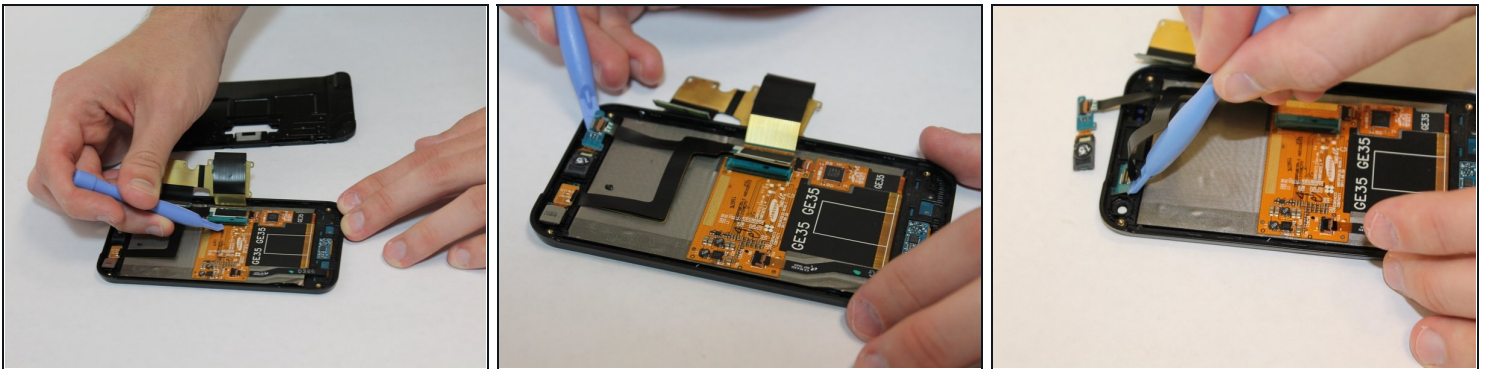

- Use the plastic opening tool to release the main jaw connector, front speaker and camera.

Step 18

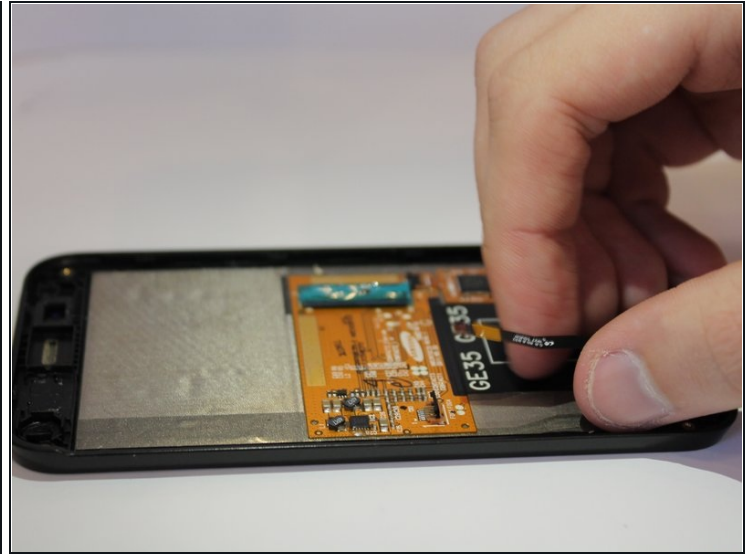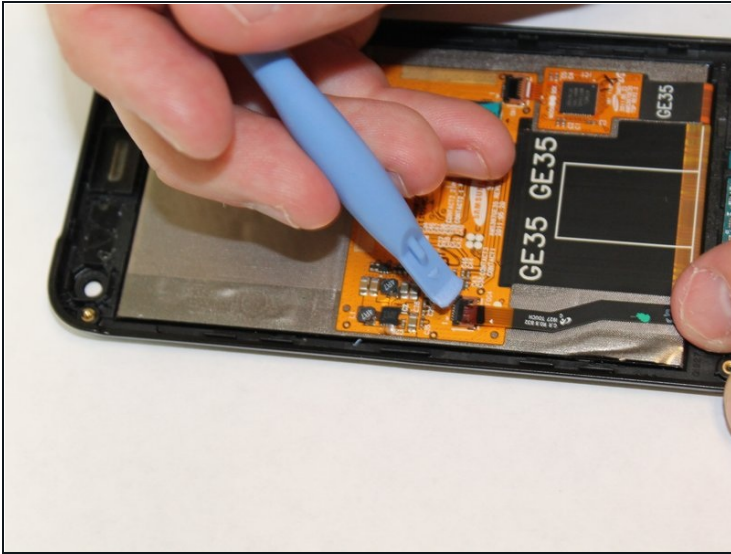

- By using the plastic opening tool you can release the keypad flex cable from the jaw connector clamp.

Step 19




- Use a heat gun or blow dryer.
- Heat the outside edges using quick movements for about 45 seconds.

Step 20



- Using the plastic opening tool to pry around the edges, release the touch screen from the screen frame.

Step 21

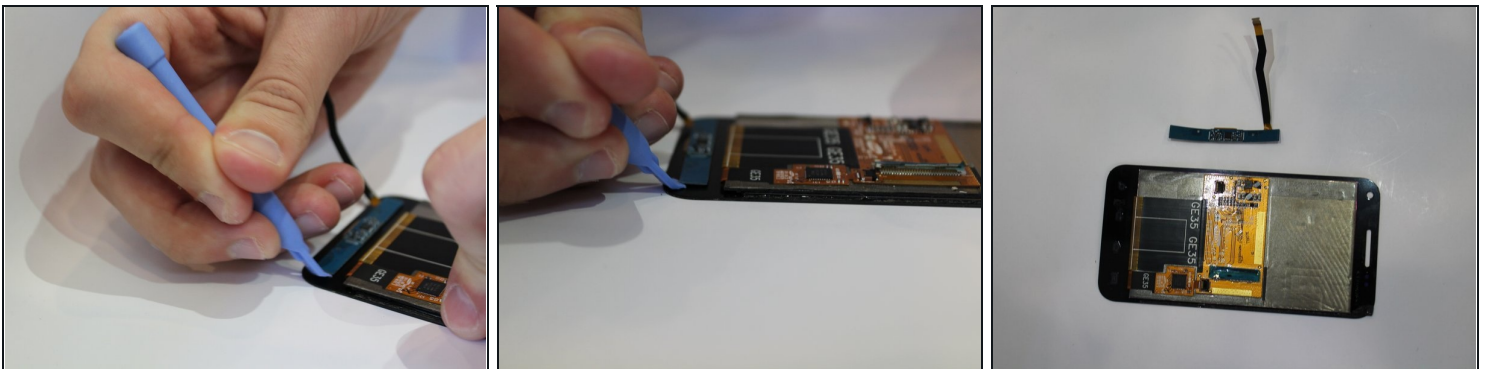

- While adhesive is still warm, use the plastic opening tool to gently remove the keyboard flex cable from the screen.
- You can now replace the screen assembly.

To reassemble your device, follow these instructions in reverse order.