



# Craftsman Model 315.10721 Blade Replacement

The guide will show the proper steps for replacing the 5/8" blade on the Craftsman Model 315.10721.

Written By: Riley Hilliker



## INTRODUCTION

Replacing the blade on your Craftsman Model 315.10721 is fairly straightforward. However, replacing the blade can be dangerous, so please take caution when handling the blade and **ensure that your saw is unplugged before beginning repair.**



### TOOLS:

- [Flathead Screwdriver](#) (1)



### PARTS:

- [Craftsman 5/8" Replacement Blade](#) (1)

## Step 1 — Blade



- ⚠ Be sure to unplug the saw before proceeding.
- Using a flathead screwdriver, loosen the first 7/32" flathead screw on the saw blade clamp.
- Rotate the saw blade clamp 90 degrees to the left and loosen the second 7/32" flathead screw
- ⓘ It is not necessary to completely remove the screws.

## Step 2



- Carefully take the replacement blade and insert it into the saw blade clamp.
- To secure the blade, retighten both 7/32" flathead screws on the saw blade clamp.