



Skil X-Drive 18V Cordless Drill Model No. 2887

Battery Replacement

This guide is meant to illustrate in a concise manner how to replace the devices battery.

Written By: Sean



INTRODUCTION

If your battery has malfunctioned or you need to charge and/or replace it, this guide will show you how to do it in a few quick steps. No tools are required.



PARTS:

- [18V Battery for Skil X-Drive 18V Cordless Drill Model No. 2887](#) (1)
-

Step 1 — Un-clip Battery



- Grip the drill. Locate the red locking switch on the back of the battery. Hold the switch down.

Step 2 — Remove Battery



- While holding down the red locking switch, slide the battery towards the back of the drill until the battery is fully removed from the drill.

To reassemble your device, follow these instructions in reverse order.