




# Waring Pro SB30 Plastic Sides Replacement

Guide for removing plastic sides of the burner for replacement.

Written By: Sun Fai Lau

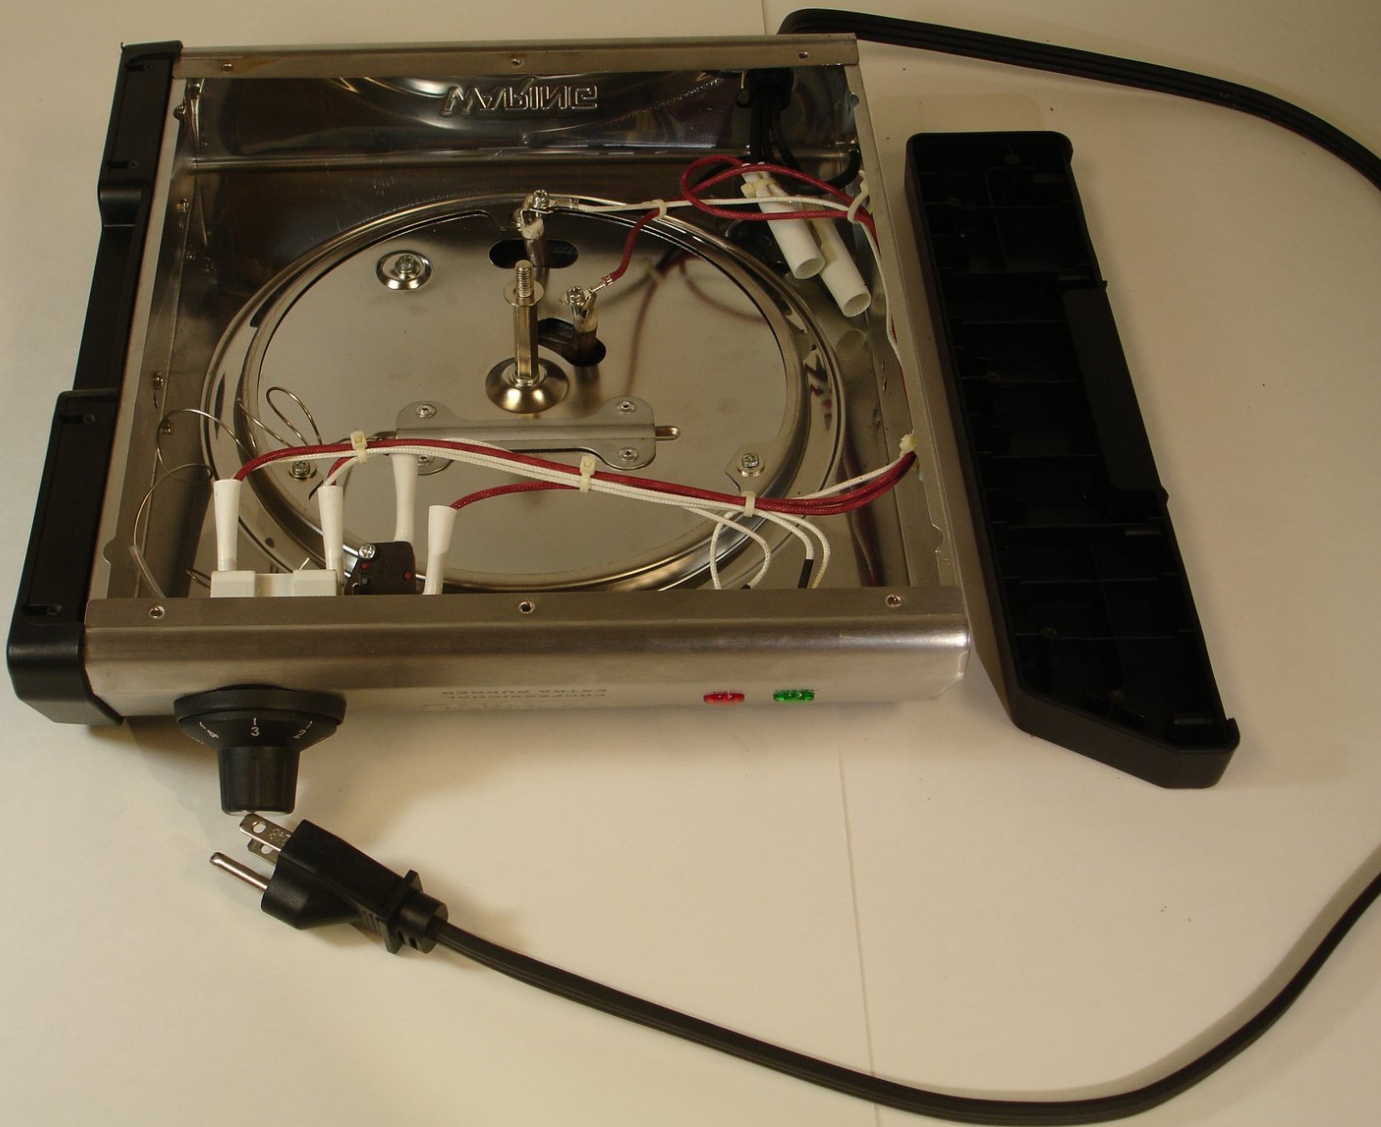

---

## INTRODUCTION

The plastic sides can become damaged, melted or warped when using a pot larger than the burner. So be sure to remove the back panel first before pulling these sides off.

The screws are located along the interior sides of the metal frame, so consider wearing gloves when removing the screws to avoid cuts from the sharp edges.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Smart Wrench](#) (1)
-

## Step 1 — Back Panel



- Remove the screws on the back panel with the #1 Phillips screwdriver bit.
- The screws in the rubber legs of the burner do not need to be removed.
- ⓘ If the back panel has never been opened before, the screws may be more difficult to unscrew.


## Step 2



- Using a wrench, remove the bolt from the center of the back panel.





### Step 3

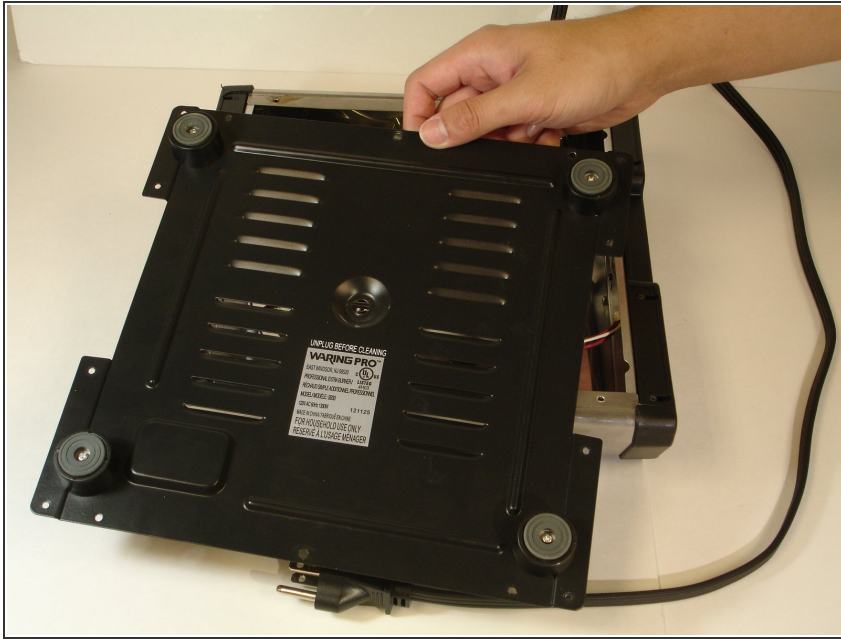

- The back panel can now be easily lifted off.


### Step 4 — Plastic Sides

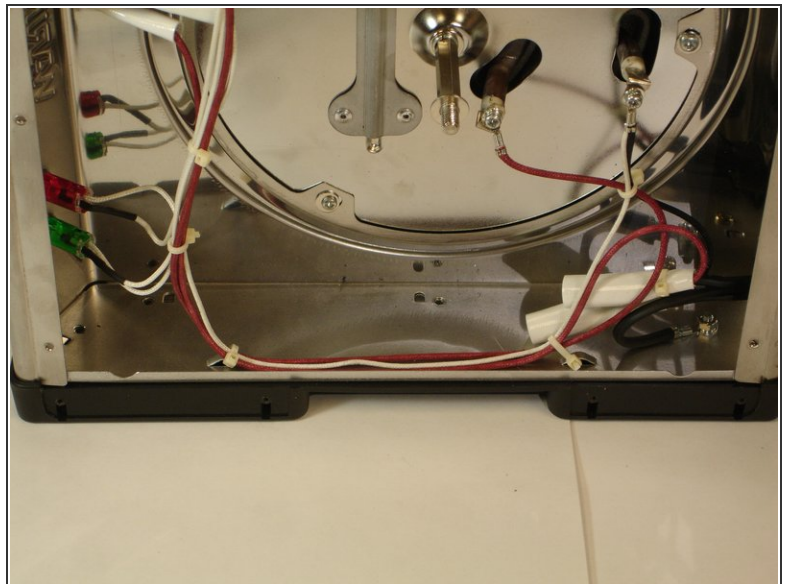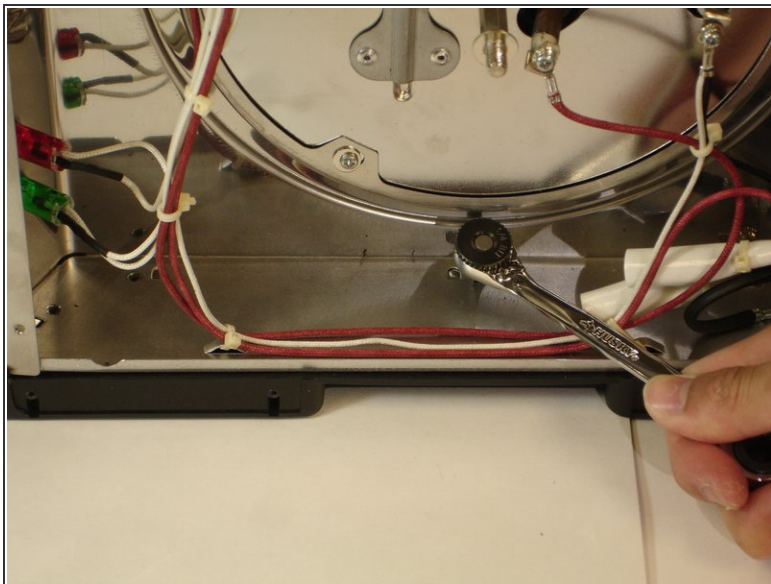

- Using a #1 Phillips screwdriver bit or a ratchet wrench with a Phillips screwdriver bit to remove screws located on the interior frame.

 The interior edges of the metal frame are sharp and can cause minor cuts.

## Step 5

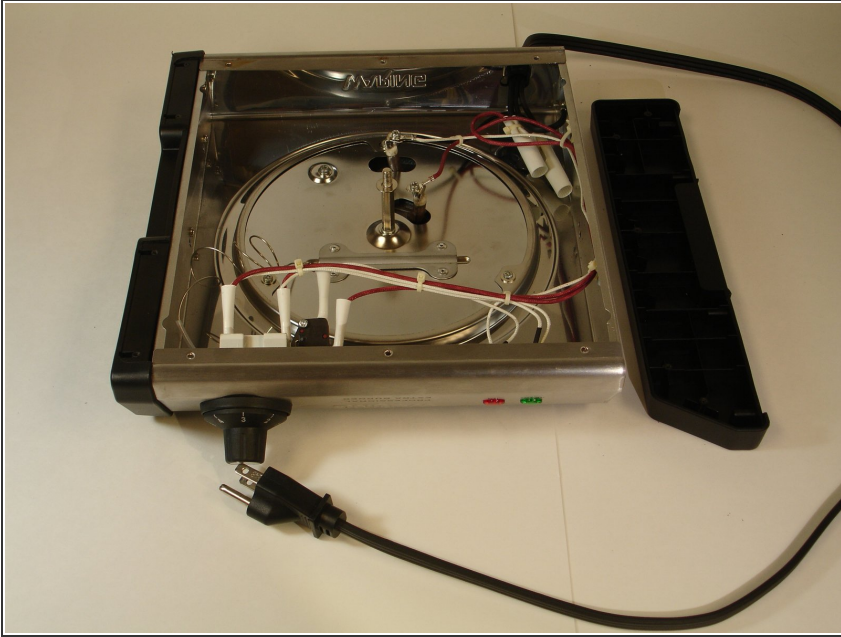

- Plastic sides should be easily removed after all screws are taken out.

To reassemble your device, follow these instructions in reverse order.