


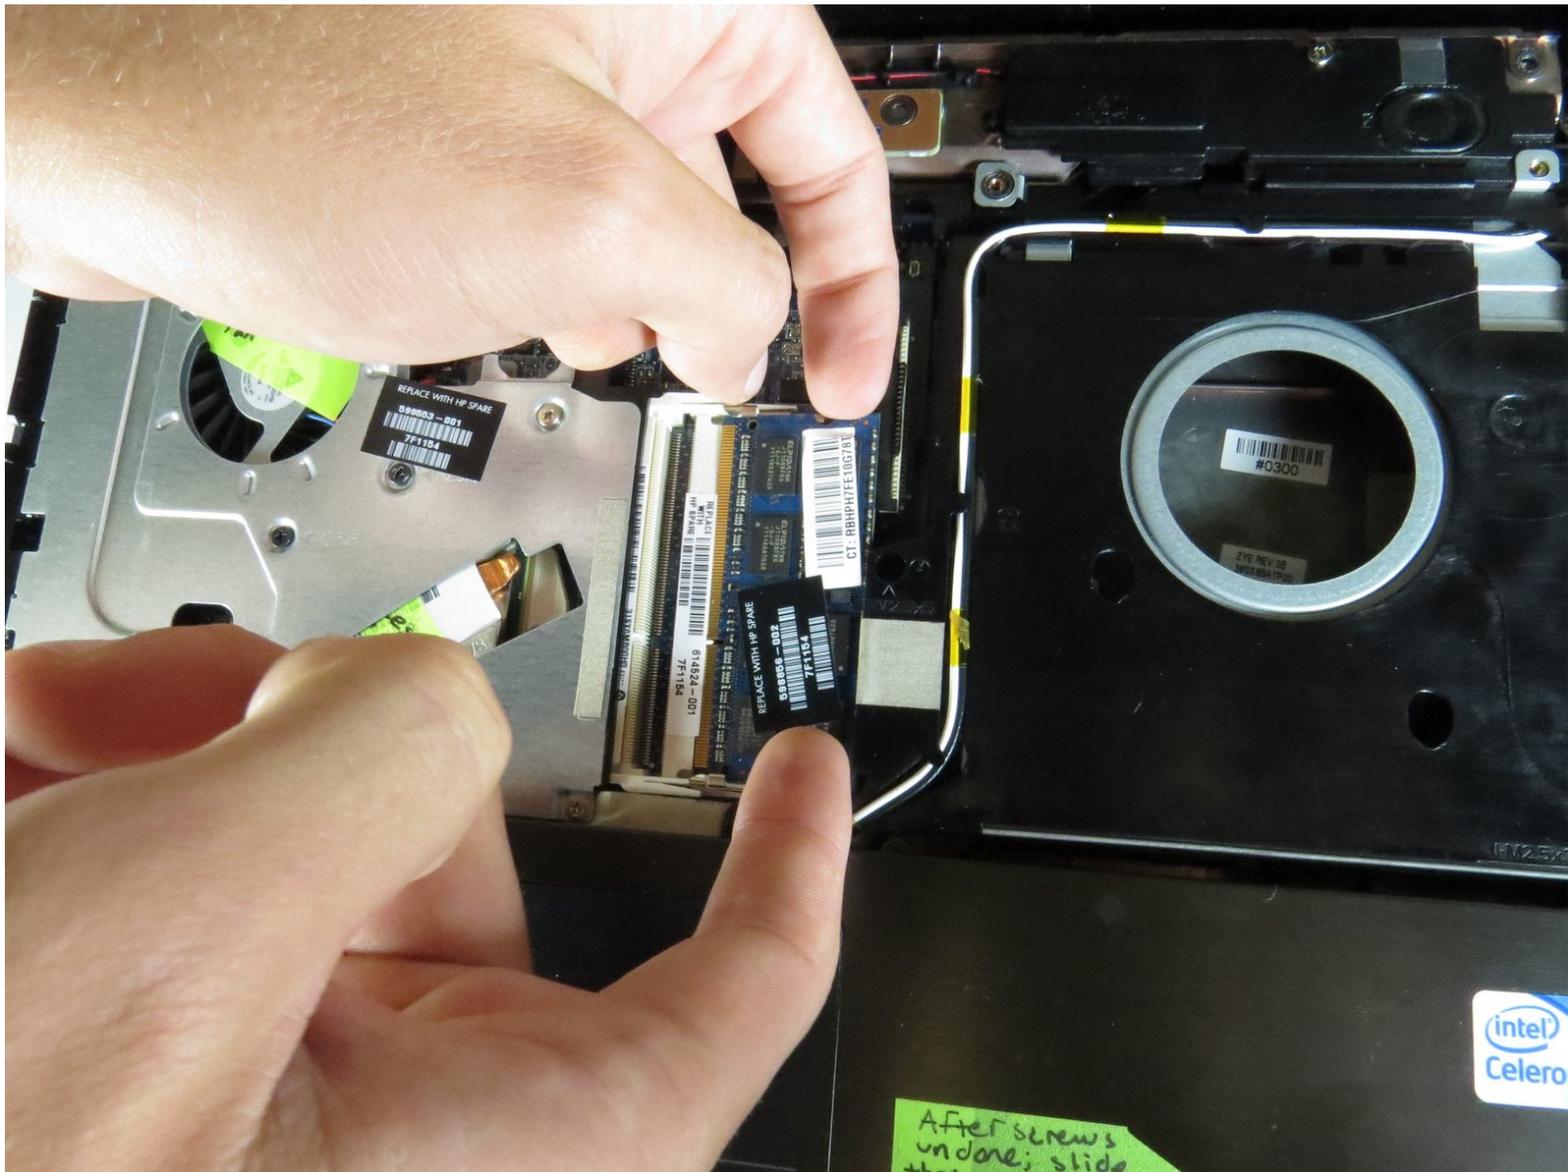

# HP ProBook 4320t RAM Replacement Guide

RAM stands for Random Access Memory. It is your main processing unit for your computer

Written By: Eric Markham



---

## INTRODUCTION

If your computer is running slowly or not downloading as quickly as you would like, replace the RAM card to an upgraded version.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery Removal



- Flip the laptop upside down and remove battery by pressing inward on the two latches holding the battery in.

## Step 2 — Screws

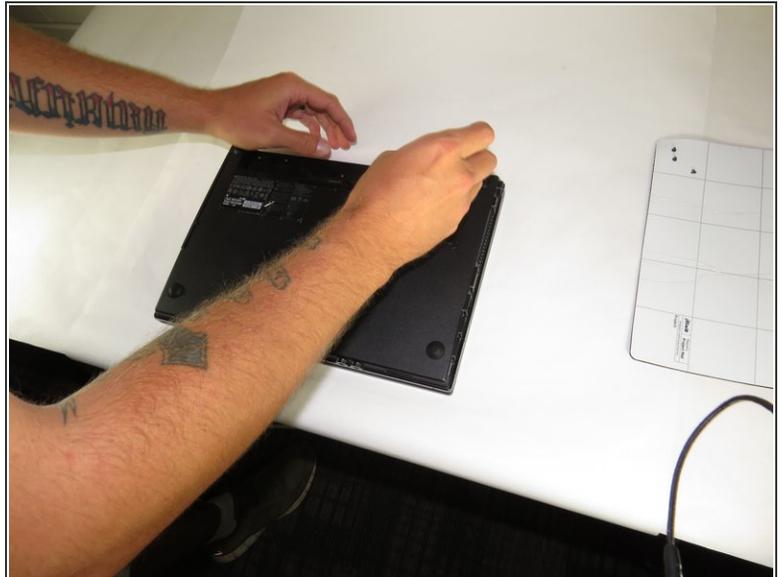

- Unscrew the four (2.5 mm Phillips) screws (Use Phillips #0 Screwdriver).

### Step 3 — Flip



- Flip laptop over and open it.

### Step 4 — Push N Lift



- Slightly push up while lifting up on the power button panel to release the panel.

## Step 5 — Unscrewing




- Unscrew the four (2.5 mm Phillips) screws holding the keyboard in (Use Phillips #0 Screwdriver).

## Step 6 — Careful Now




- Carefully (holding both sides of the keyboard), push up and lift slightly.
- ⚠ Keyboard is still connected via a ribbon cable.
- Move the keyboard slightly to the left to have access to the keyboard ribbon cable.

## Step 7 — Disconnect Wire

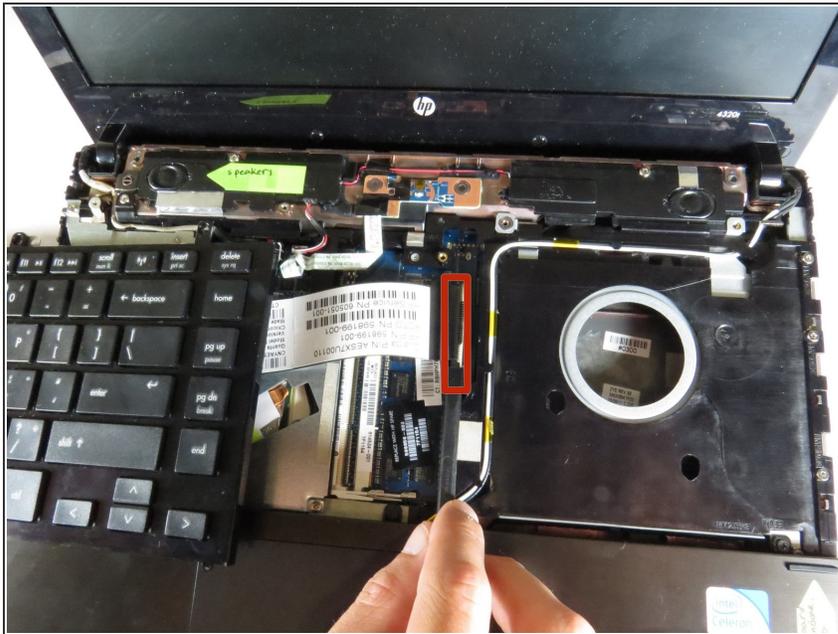

- Use the black spudger to lift the black latch holding the keyboard ribbon cable.

## Step 8 — RAM

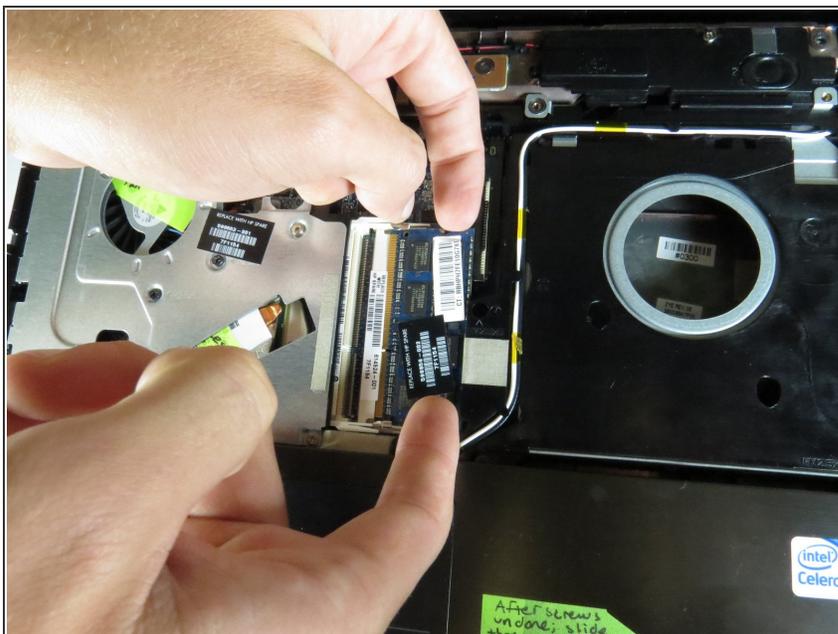

- Press the two prongs outward, and the RAM card will come out of PCI Express connector.

To reassemble your device, follow these instructions in reverse order.