




Wii Balance Board Back Cover Replacement

Use this guide to replace the Back Cover.

Written By: Cory Olson

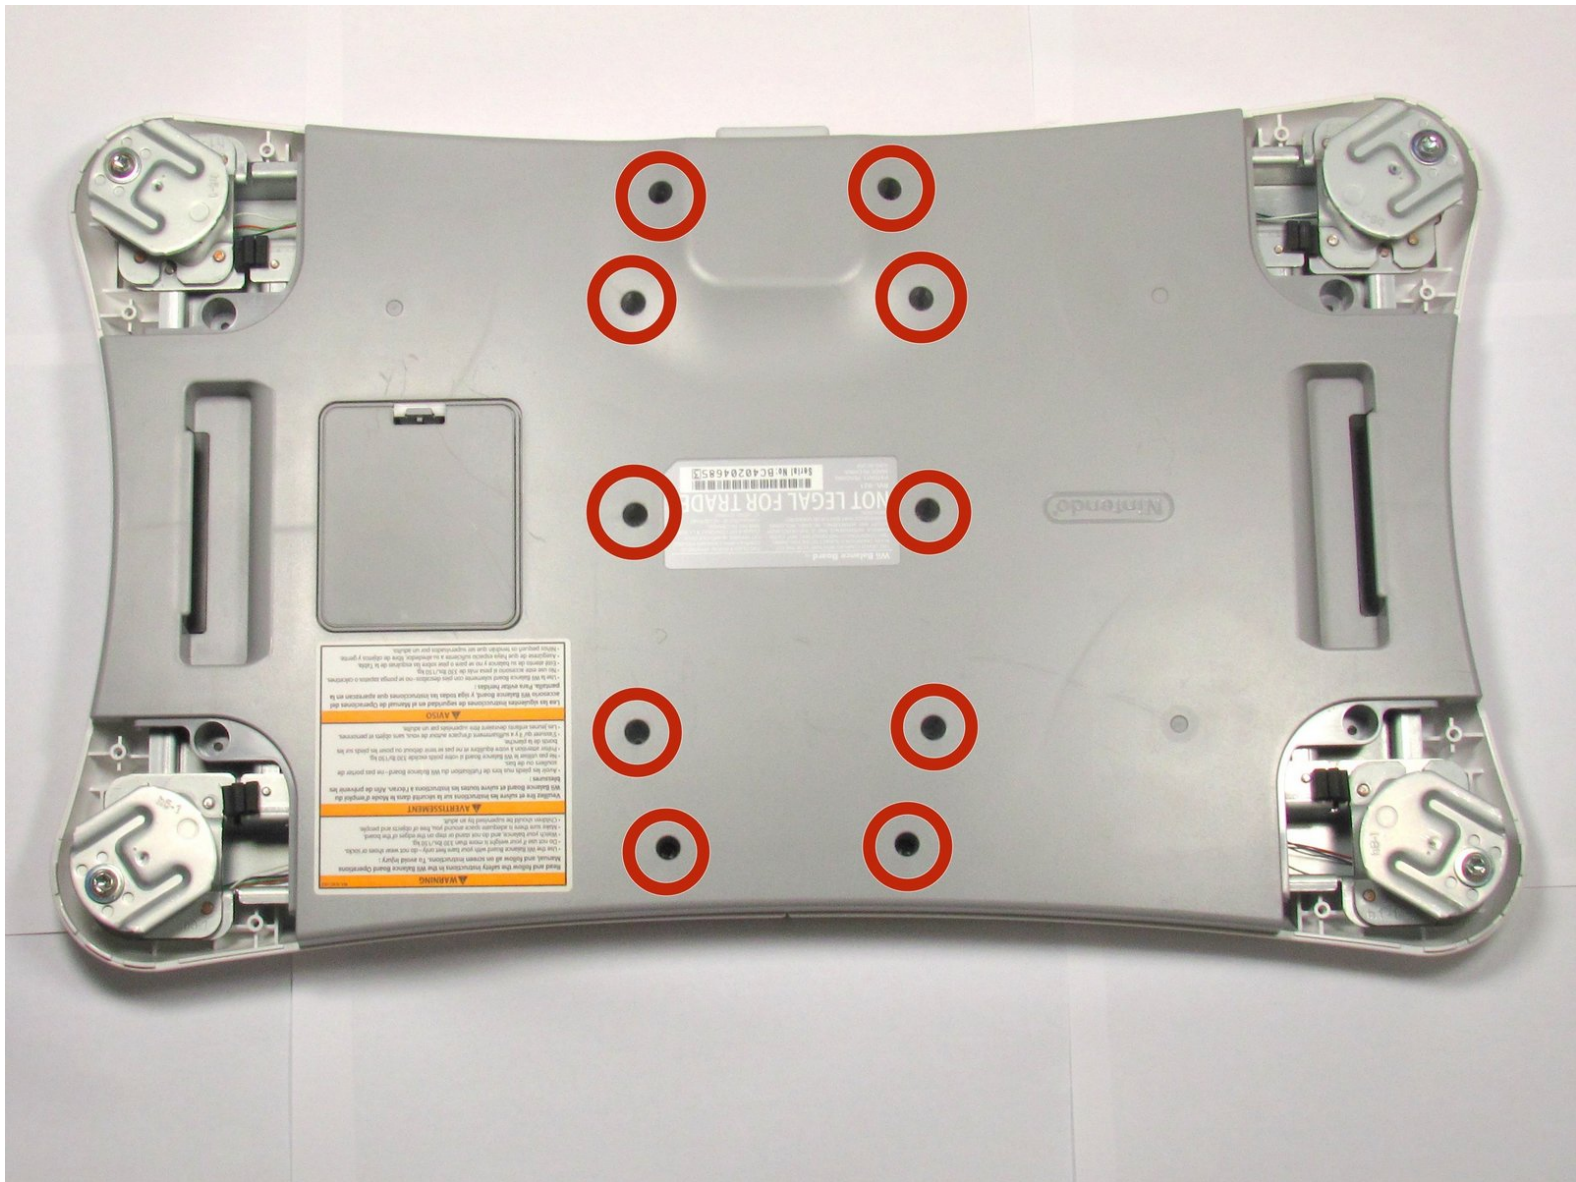

INTRODUCTION

This guide will demonstrate how to replace the back cover of the Balance Board.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Wii Balance Board Back Cover](#) (1)

Step 1 — Unscrewing the Foot Cover



- Flip device upside-down so the plastic white board is facing the ground.
- Locate the four feet in the corners of the Balance Board.
- Unscrew the three 12.7 mm Phillips screws from each foot cover.

Step 2 — Removing the Foot Cover



- Remove the gray plastic ring from the actual foot by lifting it up.

Step 3 — Removing the Foot




- Separate the loose foot from the device by lifting it up.

Step 4 — Removing the Additional Feet



- Repeat steps two and three on the remaining four feet.

Step 5 — Unscrewing the Back Cover

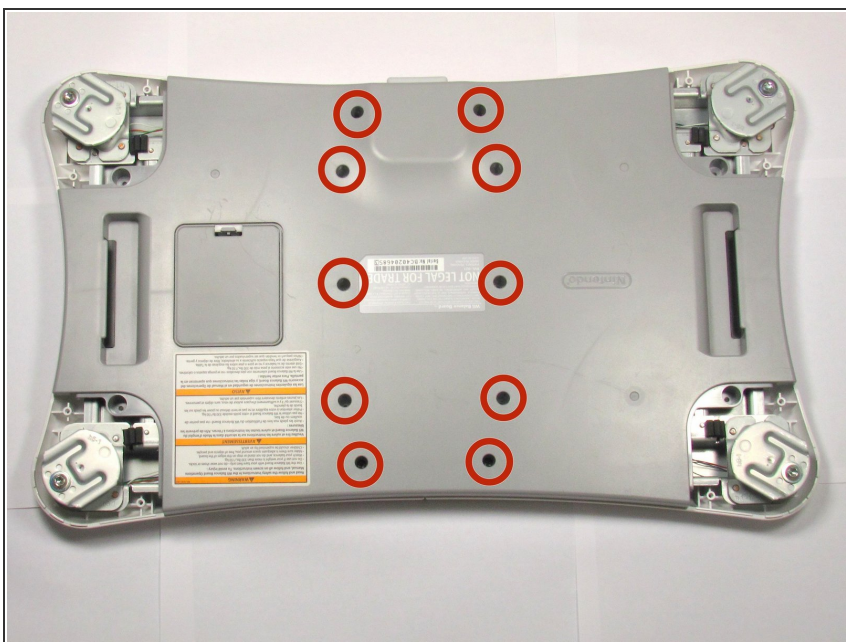

- Unscrew the ten 12.7 mm Phillips #1 screws.

Step 6 — Removing the Back Cover



- Lift off the gray back cover.

To reassemble your device, follow these instructions in reverse order.