



Eureka AirSpeed Bagless Zuum Vacuum Washable Filters Replacement

If your washable filter is beyond washing, this guide outlines its replacement.

Written By: Celina Burchett



INTRODUCTION

If you determine that your vacuum is no longer picking up debris, this guide will help you to replace the washable filters to increase the suction.

Step 1 — Washable Filters



- Press the grey dust cup release button and gently pull the dust cup towards you.

Step 2



- Lift the latch on the top of the dust cup cover to open. You can now see the foam filter inside the cyclone portion of the dust cup.

Step 3



- Remove the white filter by lifting the gray foam filter handle.

Step 4



- Push the white mesh, segment below the filter handle downward so it pops out of the grey filter holder. This will remove the filter.

Step 5



- If filter is unable to be washed, place a new filter in gray holder.

To reassemble your device, follow these instructions in reverse order.