



# Skil X-Drive 18V Cordless Drill Model No. 2887

## Handle Replacement

This will guide will illustrate how to remove and replace the device handle.

Written By: Sean



---

## INTRODUCTION

If your device handle is deteriorated and you need to remove and/or replace it these are the steps you should follow.

---



### PARTS:

- [Cordless Drill Handle](#) (1)
-

## Step 1 — Un-clip Battery



- Grip the drill. Locate the red locking switch on the back of the battery. Hold the switch down.

## Step 2 — Remove Battery



- While holding down the red locking switch, slide the battery towards the back of the drill until the battery is fully removed from the drill.

### Step 3 — Remove Handle



- Grip cordless drill firmly with left hand. Grip the cordless drill handle firmly with the right hand. Rotate the handle counterclockwise in order to remove the handle from the drill.

To reassemble your device, follow these instructions in reverse order.