




iPhone 6 Home Button Replacement

Prereq to remove the home button

Written By: Sam Goldheart

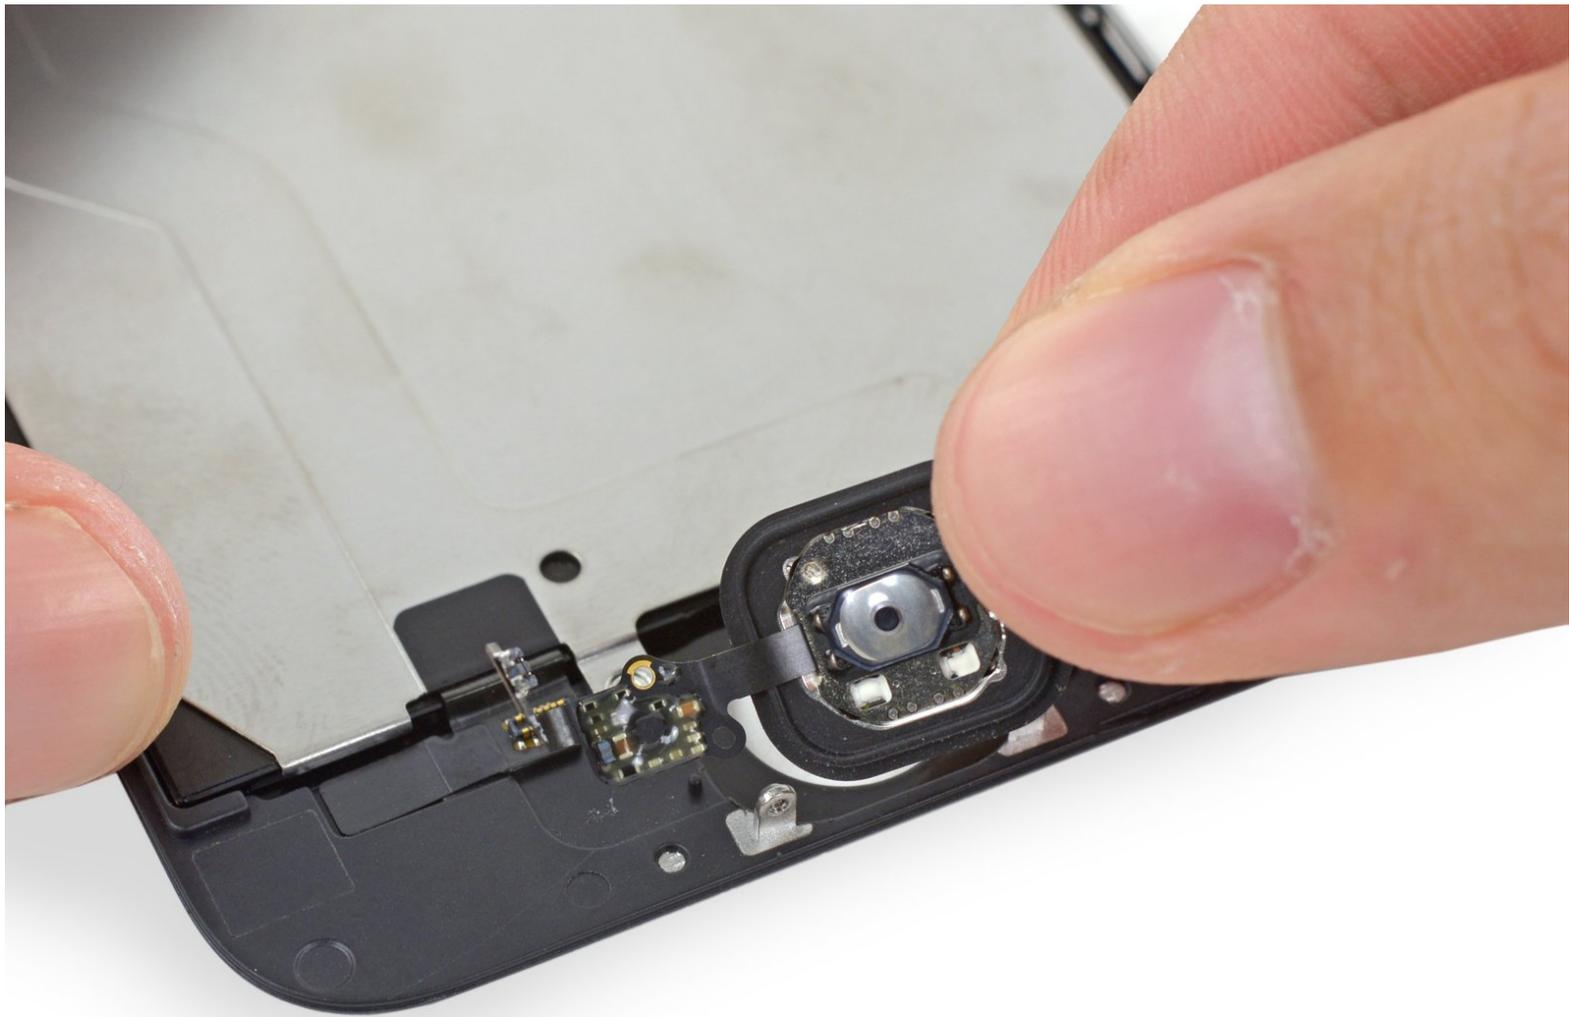


INTRODUCTION

prereq only (full home button guide includes removing gasket)

TOOLS:


- [P2 Pentalobe Screwdriver iPhone](#) (1)
 - [iSlack](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Suction Handle](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Home Button

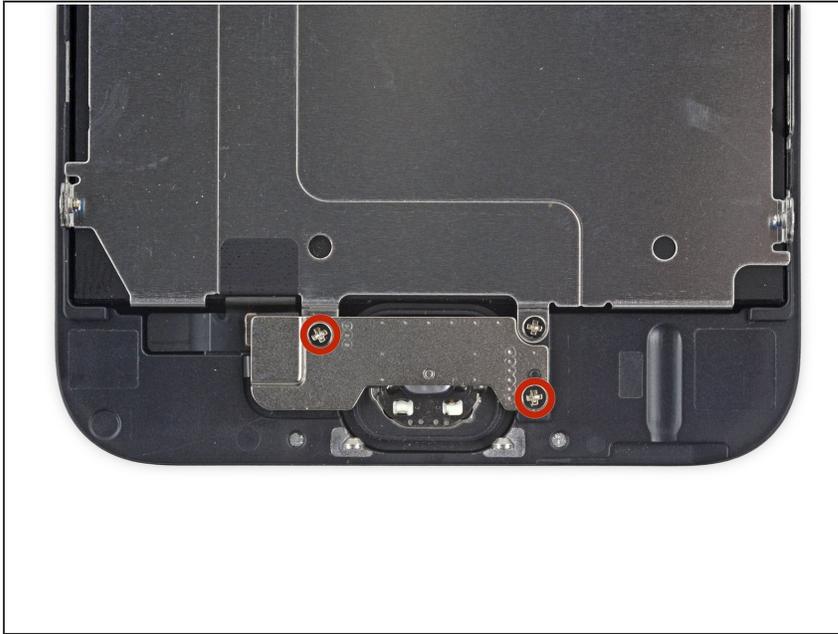


- Remove the two 1.9 mm Phillips screws securing the home button bracket.

Step 2

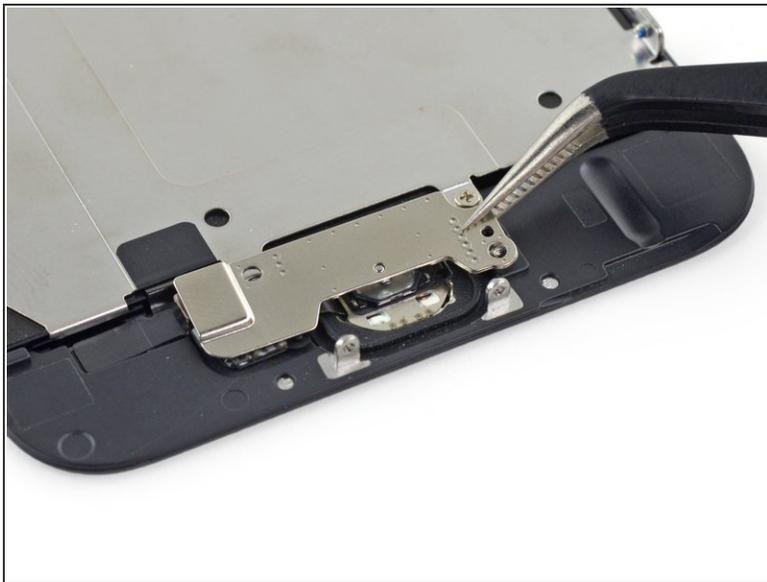


- Remove the home button bracket from the front panel.

Step 3

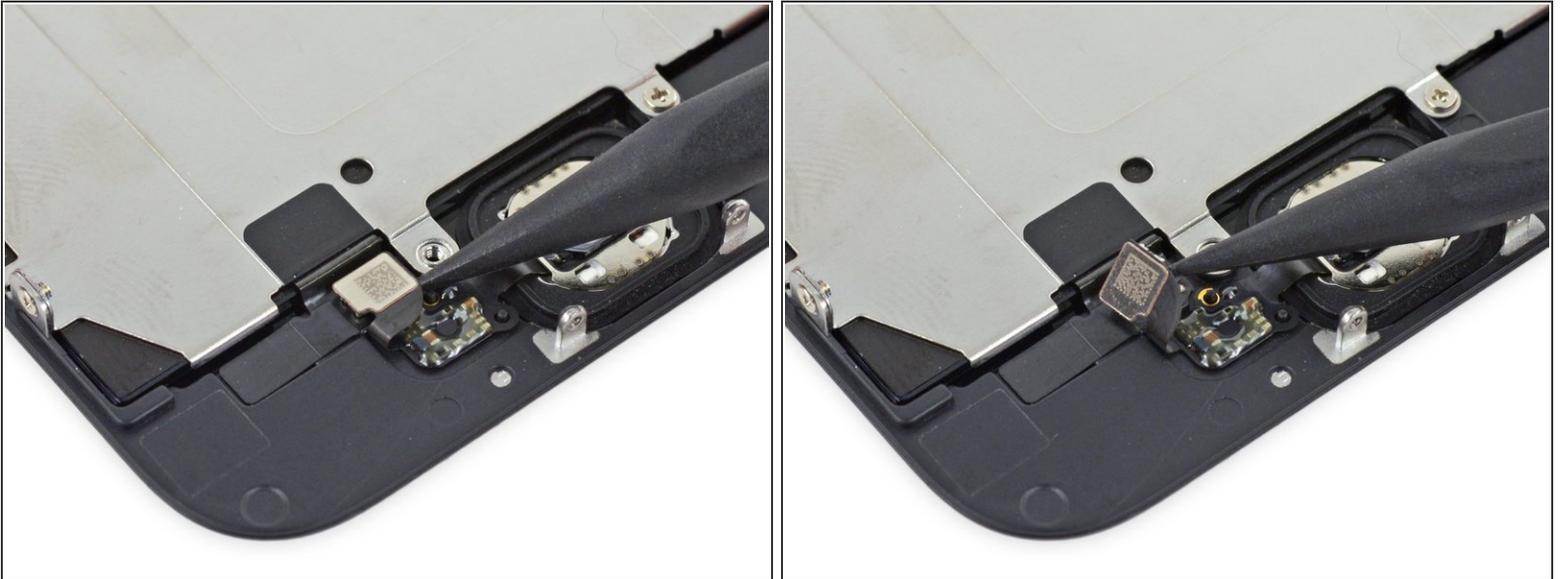


- Use the point of a spudger to disconnect the home button cable connector by pushing it up and away from the home button.

Step 4

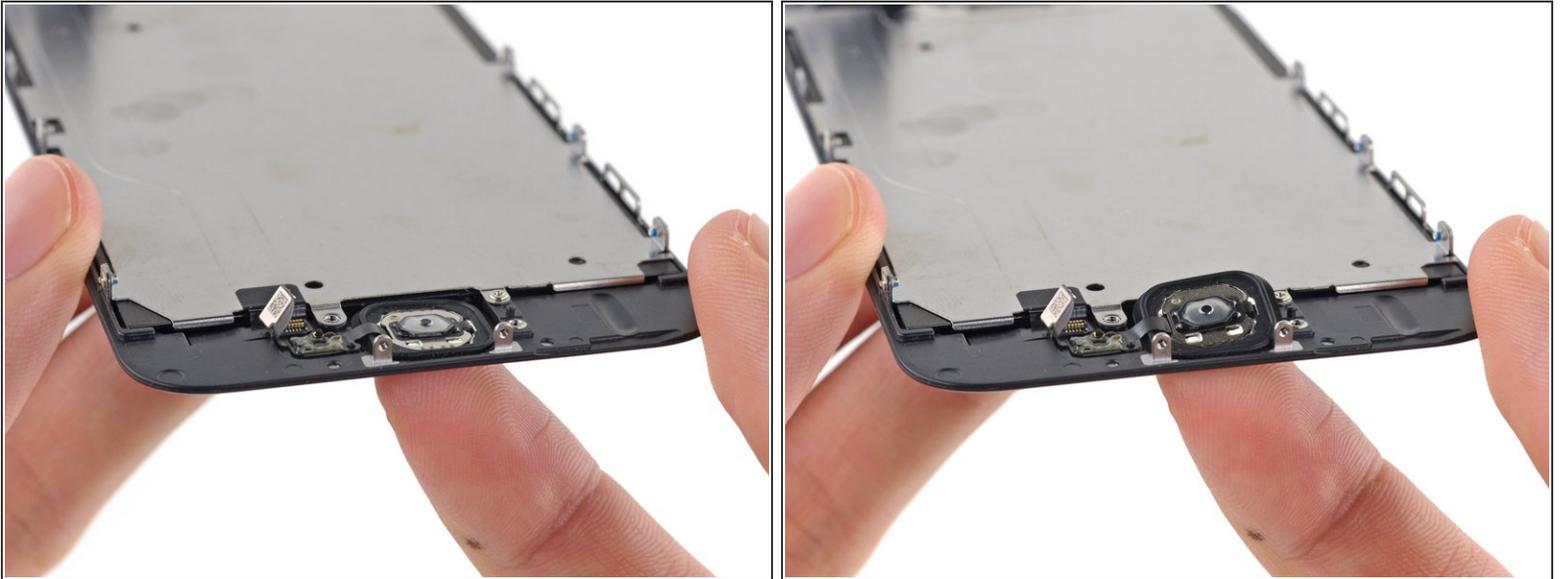



-  The rubber membrane surrounding the home button is very thin and tears easily.
- Apply mild heat (with an [iOpener](#), heat gun, or hair dryer) to soften the adhesive securing the home button membrane.
- Using your fingertip, apply firm, constant pressure on the home button from the front side of the display assembly, until the membrane starts to separate from the front panel.
-  Do not push the home button all the way through—you only need to get a corner free so that you can pry it free with a spudger.

Step 5

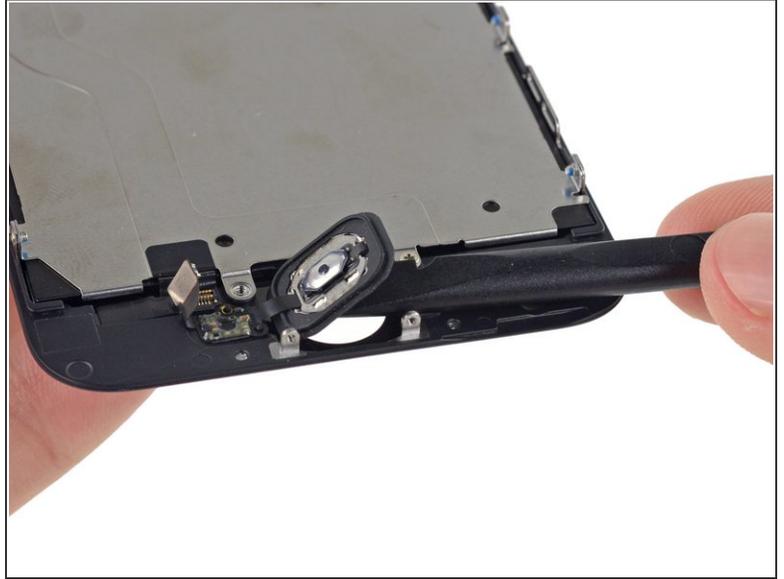

- Peel the home button the rest of the way off of the display by prying gently with a spudger.


Step 6

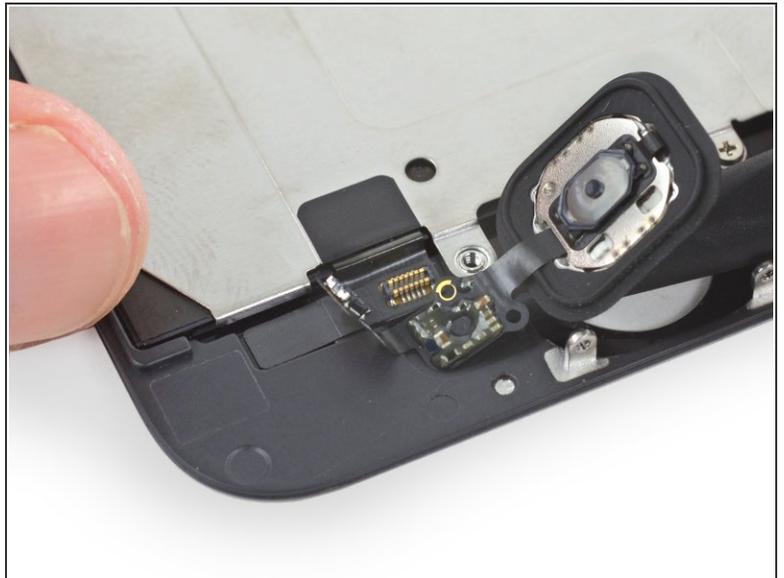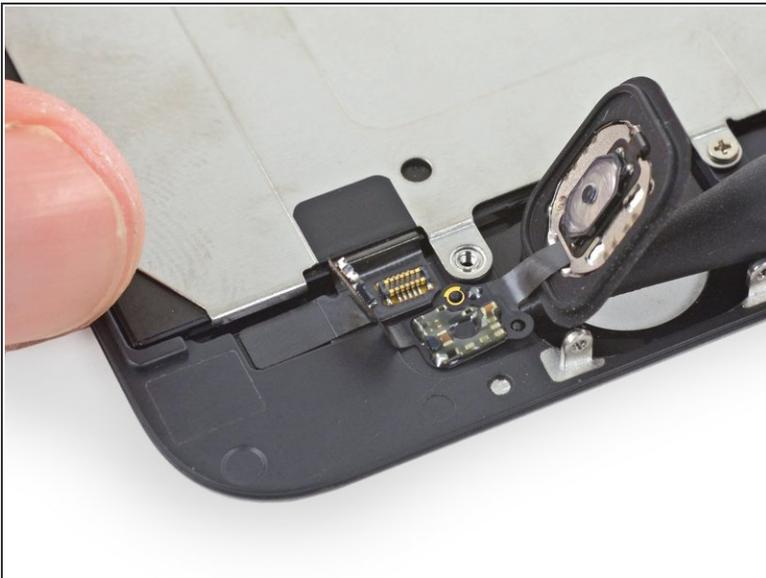

- Use the point of a spudger to carefully separate the home button cable from the adhesive securing it to the front panel.

⚠ If the cable doesn't separate easily, apply heat using an [iOpener](#) or hair dryer to soften the adhesive, and try again. Be careful not to damage the cable.

Step 7

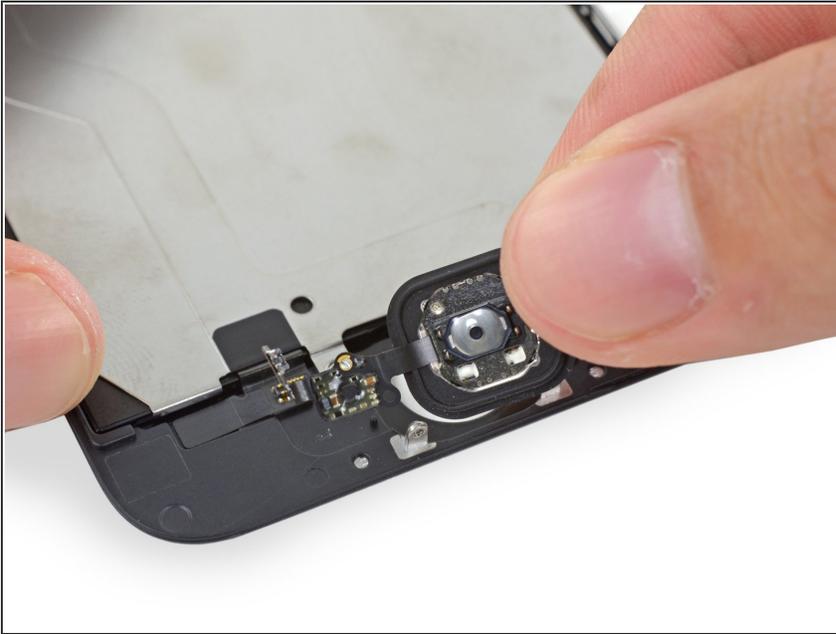

- Once all the adhesive has been separated, remove the home button from the front panel.
- ⓘ If you are replacing a broken front panel, there may be glass shards stuck to the home button. Carefully remove any remaining glass before transferring your home button to a new display.
- ★ Your replacement part may come with an [extra Phillips screw](#) already installed left of the Home Button. Remove the unnecessary screw so that you can reinstall the home button bracket.

To reassemble your device, follow these instructions in reverse order.