


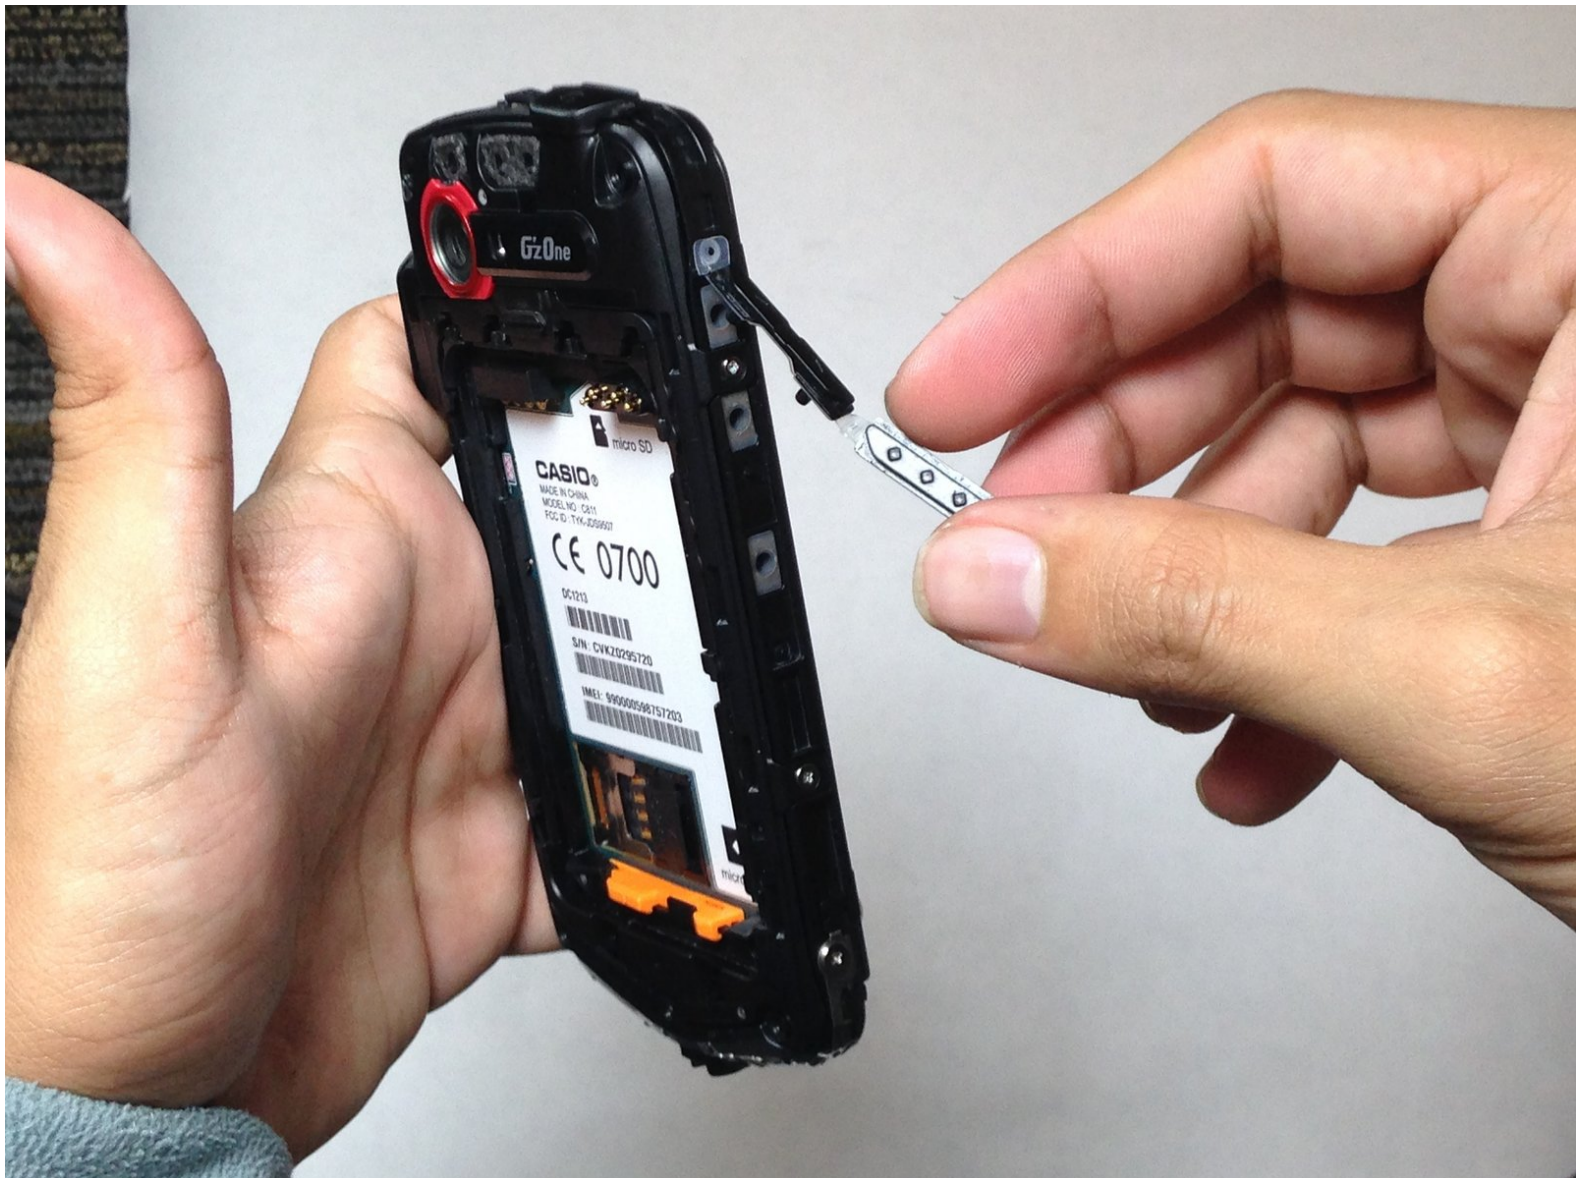

# Casio G'zOne Commando 4G LTE Volume Buttons Replacement

This guide shows how to replace the volume buttons located on the side of the phone.

Written By: Brett Boehm





## TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Remove front and back screws



- Using the Phillips #00 screwdriver remove the front and back 5.0 mm screws as shown in the picture.
- ⓘ There are four screws in the back and two screws in the front.

## Step 2 — Remove side-Back cover

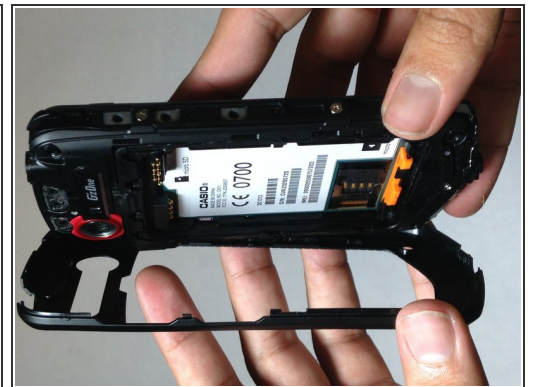


- Gently remove the side cover from the phone by lifting up on the corners as shown in the picture.
- Press down on the screen to help remove the plastic side cover from the phone.

⚠ Make sure to push gently because the frame is fragile.




### Step 3 — Remove Side-Front cover

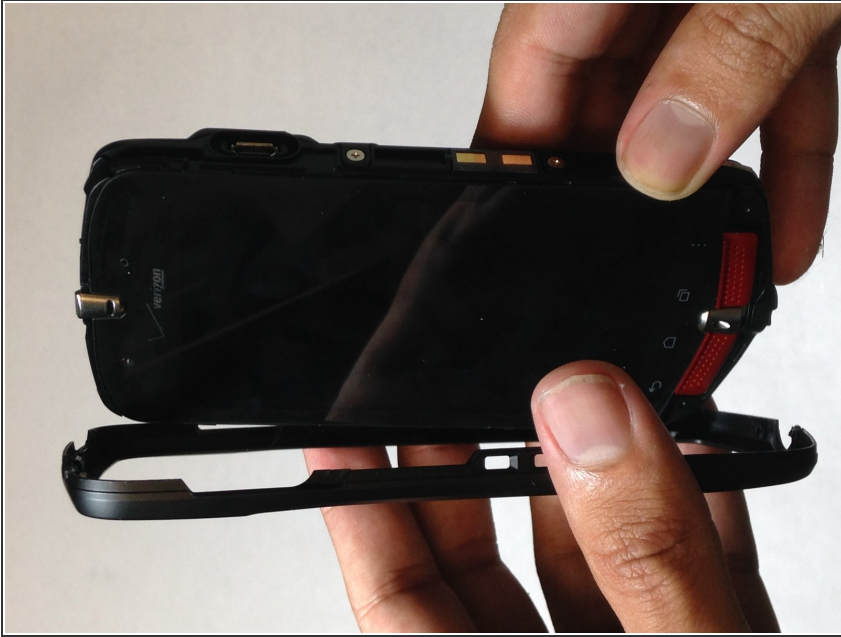


- Pull the side front cover off the face of the phone.

### Step 4

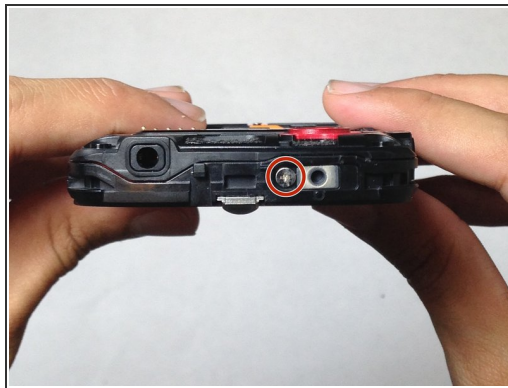

- Remove the eight 2.5mm Phillips #00 screws in the holes of the casing.

## Step 5

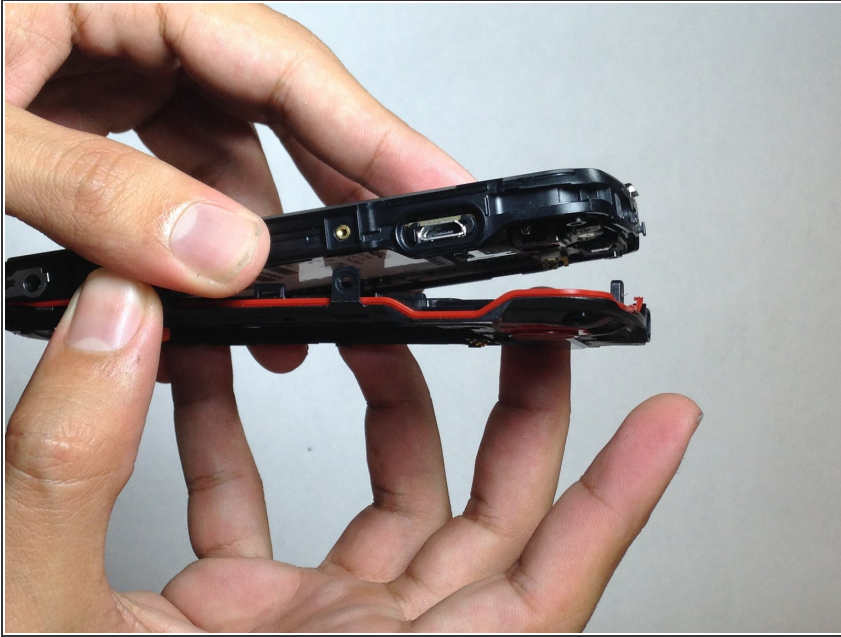

- Gently pull off the motherboard cover.


## Step 6



- Using the Phillips #00, remove all 2.5 mm screws attached to the motherboard.
- ⚠ Do not touch the integrated circuits in the motherboard.




## Step 7 — Motherboard

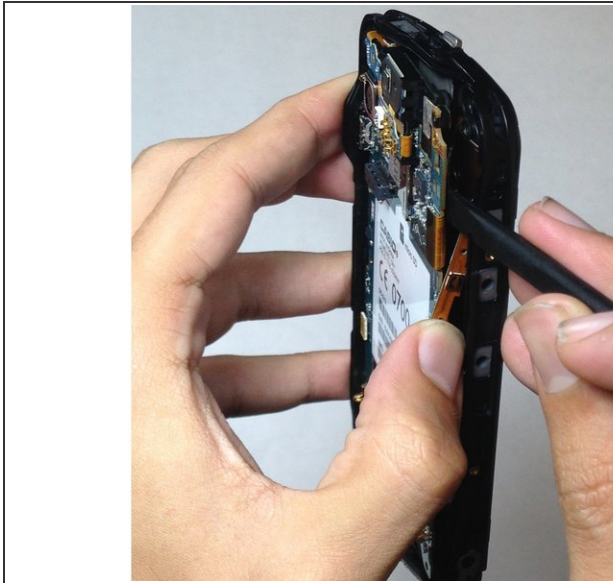


- Gently remove the motherboard with the spudger.

## Step 8 — Removing external volume pads

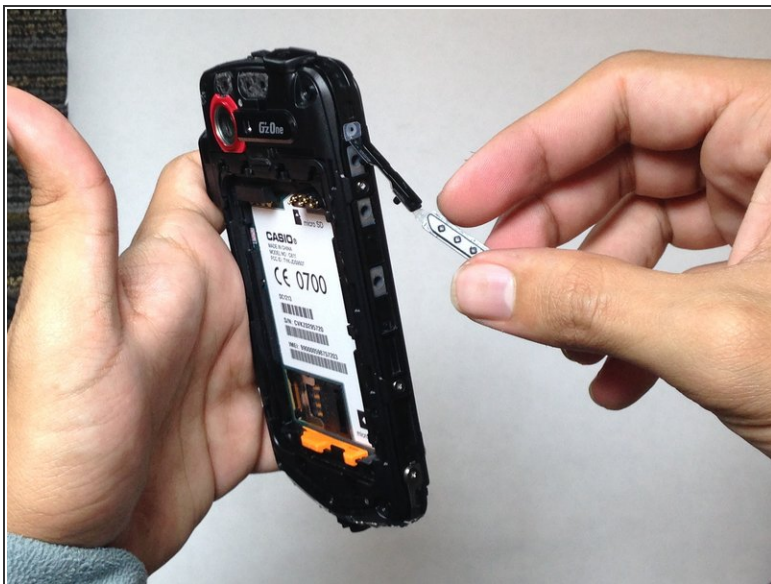

- Following step 4 in the prerequisite guide, remove the volume pads located on the side of the phone with a gentle pull.

## Step 9 — Removing internal volume buttons

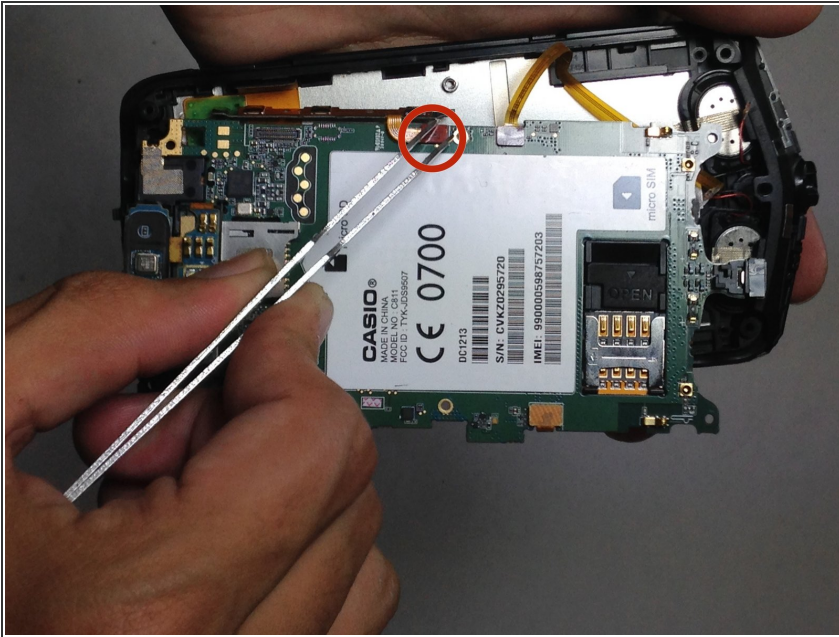

- Following step 6, remove the adapter connecting the volume buttons to the motherboard.

To reassemble your device, follow these instructions in reverse order.