



# Adjusting the Adjusting Knob

How to fix the adjusting knob.

Written By: Michael Sykes



## INTRODUCTION

If the cloth clamp is not moving properly, the adjustment knob may not be on properly.

## Step 1 — Loosen the Knob



- Press down on the adjustment knob, and turn it to the left.
- Take the knob out of the Buttonholer.

## Step 2 — Tighten the Knob



- Place the adjustment knob back into the device.
- Turn the adjustment knob to the right.
- Keep turning until the clamp moves back and forth. If the plate is moving only side to side, you may need to fix the spring in the fork arm.

To reassemble your device, follow these instructions in reverse order.